

BakkerElkhuizen UltraBoard 960 Standard Compact Keyboard

User Manual



Work Smart - Feel Good



Qwerty



This is an English quick-start guide. Instructions for other languages can be found on our website or by scanning the QR codes.

The UltraBoard 960 in short

Thank you for purchasing the UltraBoard 960 Standard Compact Keyboard. This space-saving keyboard is designed for Windows based PC's. We sincerely hope you will enjoy using it.

This quick-start guide will help you configure and use your new keyboard. Here are a few features of the UltraBoard 960:

 
- Ergonomic design;
- Wired keyboard;
- Connect peripheral devices via the 2 port USB hub;
- Scissor action keys with a finger friendly surface for high comfort and reduced tiredness when typing;
- Ultra-thin and height adjustable for enhanced comfort;
- 5 shortcut keys, ScrollLock, PauseBreak, Mail, PrtScr and NumLock for fast working;
- Integrated multimedia keys.



To extend the life of the UltraBoard 960, we recommend that you use the supplied case when you store your UltraBoard 960.

Overview of the UltraBoard 960

- ① Status LEDs
- ② NumLock keys
- ③ Multimedia keys
- ④ Height adjustable feet
- ⑤ USB Hub

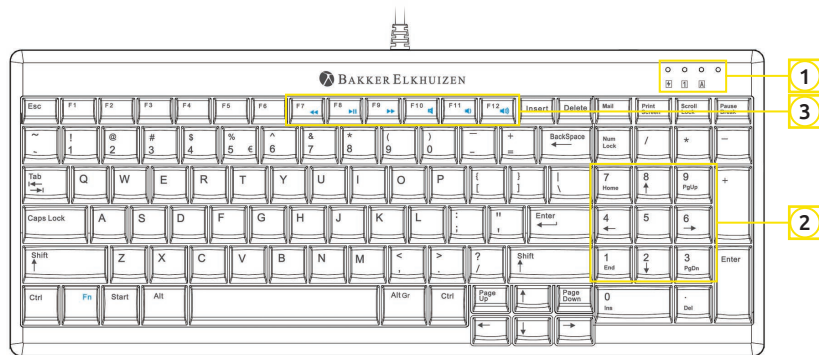

LED Indication



LED ⚡ (Green)

 
Power on – LED in solid green when Keyboard is active

LED ① (Green)

NumLock – LED in solid green when NumLock is active

LED A (Green)

CapsLock – LED in solid green when CapsLock is active

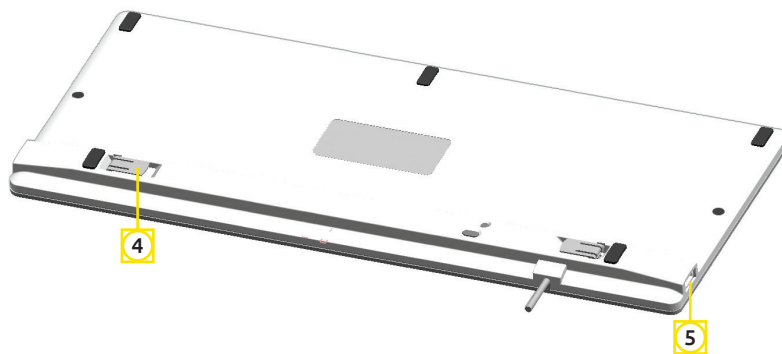

Getting Started

1. Connect the UltraBoard 960 Standard Compact Keyboard to your PC with the integrated USB plug.
2. This keyboard is “plug & play” so wait for a few seconds for your computer to detect the device and then you’re free to start typing.

(Please note that the first time you connect your new keyboard, your operating system automatically installs the required driver.

This process can take a few seconds.)

How to use Fn key with numpad & multimedia keys

 
Numpad

Press Numlock; now you can use the Numlock keys.

Multimedia keys

Function keys of F7, F8, F9, F10, F11, F12 keys support Windows for multimedia use.

Hold the Fn key and press F7 to F12 to use these functions.

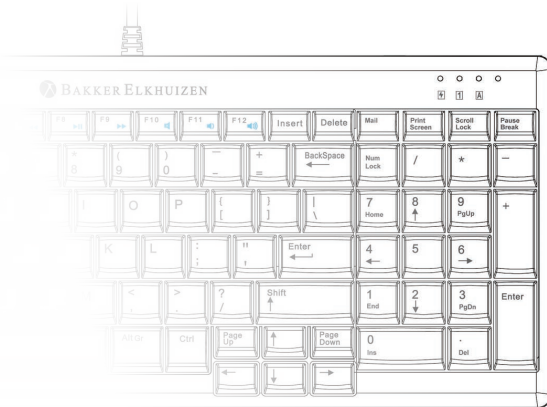

F7	Previous Track
F8	Play/ Pause
F9	Next Track
F10	Mute
F11	Volume Down
F12	Volume Up

BakkerElkhuizen

Taalstraat 151

5261 BC Vught

The Netherlands

tel. +31 36 546 7265

fax. +31 36 546 7830

email. info@bakkerelkhuizen.com

All rights reserved. All trade names are registered trademarks of the respective manufacturers listed. All specifications are subject to change without prior notice.