Canon

PRO-310 series Online Manual

Contents

	Symbols Used in This Document	14
	Trademarks	15
	Licenses	16
Ва	sic Operations	42
	Printer Parts	43
	Front	. 44
	Back / Side	
	Inside	. 48
	Operation Panel	. 49
	Using the Printer	50
	Turning the Printer On and Off	. 51
	Placing Multi-purpose Tray	53
	Cautions When Printing with Multi-purpose Tray	. 54
	Placing/Removing a Printable Disc	. 55
Pri	nting	62
	Printing from Your Computer (macOS)	63
	Basic Printing Setup	
	Paper Settings on the Printer Driver and the Printer (Media Type)	
	Various Printing Methods	
	Setting the Number of Copies and Printing Order.	
	Perform Borderless Printing	
	Scaled Printing	
	Page Layout Printing Printing on Postcards	
	Changing the Clear Coating Settings	
	Setting Paper Dimensions (Custom Size)	
	Perform Long-form Printing	
	Setting the Stapling Margin	
	Scaling the Printing to Fit the Paper Size	86
	Switching the Paper Source to Match the Purpose	. 88
	Changing the Print Quality and Correcting Image Data	. 89

Setting the	Print Quality Level (Custom).	90
Grayscale	Printing	91
Specifying	Color Correction	93
Optim	nal Photo Printing of Image Data	95
Adjus	ting Colors with the Printer Driver	97
Printir	ng with ICC Profiles (Specifying an ICC Profile from the Application Software)	99
Printir	ng with ICC Profiles (Specifying an ICC Profile from the Printer Driver)	101
Interp	reting the ICC Profile	103
Adjusting T	Гone	104
Adjusting C	Color Balance	107
Adjusting E	Brightness	109
Adjusting C	Contrast	110
Printing Using A	AirPrint	111
macOS Printer Dr	river	114
Overview of the	Printer Driver	115
Canon IJ P	Printer Driver	116
How to Ope	en the Printer Driver Setup Dialog	117
Page Setu	p Dialog	118
Print Dialog	g	119
Canon IJ P	Printer Utility2	121
Openi	ing the Canon IJ Printer Utility2	122
Displaying	the Printing Status Screen.	123
Instructions	s for Use (Printer Driver).	124
Deleting th	e Undesired Print Job	125
Description of P	rint Dialog	126
Quality & N	Media	127
Color Option	ons	129
Advanced	Paper Settings	131
Page Proce	essing	133
Updating the Pri	inter Driver	134
Installing th	ne Printer Driver	135
Obtaining t	the Latest Printer Driver	136
Delete the	Unnecessary Canon IJ Printer from the Printer List	137
Before Inst	talling the Printer Driver	138
Printing from Prin	ter	139

Printing	g Templates Such as Lined or Graph Paper	140
Printing from	om Smartphone/Tablet	142
Printing	g from iOS Device (AirPrint).	143
Handling Pa	nper1	147
Loading P	Paper	148
Paper	Sources to Load Paper	149
Loadin	g Paper in the Top Feed	151
Loadin	g Paper in the Manual Feed Tray	157
Registe	er Paper Information	161
Informatio	on about Paper	164
Media	Types You Can Use	165
Paper	Load Limit	169
Handlir	ng Paper	171
Before	Printing on Art Paper	172
Settings		174
Changing	Settings from Operation Panel	175
LCD ar	nd Operation Panel	176
Setting	Items on Operation Panel	179
М	laintenance	181
L	AN settings	182
S	ecurity settings	188
Pi	rint settings	189
0	other printer settings	191
La	anguage selection	193
Fi	irmware update	194
P	aper-related settings	195
P	ower control	196
Q	uiet setting	197
A	uto maintenance settings	198
	eset settings	199
	/eb service setup	201
Pi	rinter information	202
Setting	Administrator Password on Operation Panel	203
Changing	Printer Settings from Your Computer (macOS)	205

Registering a Changed Printing Profile	206
Changing the Printer Operation Mode	207
Updating Media Information in Printer Driver	208
Correcting Media Information in Printer Driver (When Printer Used in Shared Environment)	210
Reducing the Printer Noise	. 211
Changing Printer's Setting Using Web Browser	. 212
Start up Remote UI	. 213
Changeable Setting Items Using Remote UI	216
Security	218
LAN settings	. 220
Setting Passwords Using Remote UI	222
Registering Printer's Root Certificate to Web Browser for SSL Communication	224
Registering Printer's Root Certificate to Local Computer for SSL Communication	228
Generating Server Certificate	. 234
Network Setting.	236
Printer Connection Methods	. 237
Wi-Fi Connection	239
WPS Connection	242
WPS (PIN Code) Connection	. 245
Manual connect	247
Easy wireless connect	252
Wireless Direct Connection	254
Wired Connection	. 259
USB Connection	. 263
Default Network Settings	264
Another Printer Found with Same Name	
Printing Network Settings.	
Countermeasures against Unauthorized Access	
Network Status and Troubleshooting	
Settings on Print Server	
Restrictions on Printer Sharing.	
intenance	276

Adjustments for Better Print Quality	277
Maintenance Procedure	278
Checking for Nozzle Clogging.	280
Cleaning the Print Head	284
Deep Print Head Cleaning	288
Adjustment to Straighten Lines and Align Colors	291
Automatic Adjustment to Straighten Lines and Align Colors	292
Manual Adjustment to Straighten Lines and Align Colors	294
Replacing Consumables	297
Replacing Ink Tanks	298
Checking Ink Level	303
Cleaning the Printer	305
Cleaning the Printer Exterior	306
Cleaning Paper Feed Rollers	307
Performing Bottom Plate Cleaning	310
Performing Maintenance Functions from Your Computer (macOS)	312
Opening Remote UI for Maintenance	313
Cleaning the Print Heads	314
Checking Ink Status from Your Computer	316
Printing a Nozzle Check Pattern.	317
Other Maintenance	318
Transporting Your Printer	319
Firmware update	320
Frequently Asked Questions	321
Problems with the Printing Quality	324
Printing is faint/Streaks	325
Banding in different colors occurs/Colors in printed images are uneven	
Paper Is Smudged/Printed Surface Is Scratched/Ink Blots/Paper Curl	
Back of Paper Is Smudged	334
Printed colors are inaccurate	336
Documents are printed in monochrome	338
Lines Are Misaligned/Distorted	339
Lines Incomplete or Missing (Windows)	341
Images Incomplete/Cannot Complete Printing	

•	Vertical Line Next to Image	343
Canı	not Configure Network Settings	344
I	Message Appears on Computer During Setup	345
(Cannot Proceed Beyond Printer Connection Screen (Cannot Find Printer Connected via USB)	347
	"Failed to connect to the wireless router." Appears	349
ı	Printer Cannot Be Used After Replacing Wireless Router or Changed Router Settings	351
I	Privacy Separator/SSID Separator/Network Separation Function	353
:	Setting Up Using Smartphone/Tablet	354
Canı	not Find Printer on Network	355
(Cannot Find Printer on Network	356
;	Searching Printer by IP Address or Host Name During Setup	361
Canı	not Print over Network	365
(Cannot Print Using AirPrint	366
(Cannot Print from Smartphone/Tablet	367
Netv	vork Connection Problems	371
	Network Settings and Common Problems	372
;	Solve Network Troubles with The Printer's Diagnostic Functions	373
;	Switching Printer's Connection to Network or Devices	380
ı	Network Key (Password) Unknown	382
(Checking Wireless Router SSID/Key	384
(Cannot Remember Printer's Password	385
(Checking Network Information	386
I	Restoring Printer's LAN Settings to Defaults	389
	Cannot Connect Smartphone/Tablet to Wireless Router	390
(Checking Wireless Router Network Name (SSID) for Smartphone/Tablet	391
Print	ter Problems	392
	Printer Does Not Turn On	393
ı	Printer Turns Off Unexpectedly or Repeatedly	394
ı	USB Connection Problems	395
ı	LCD Is Off.	397
I	Print Head Holder Does Not Move to Replacement Position	398
ı	Printer Status Monitor Not Displayed (Windows)	399
ı	Updating Printer Firmware	400
Insta	allation and Download Problems.	401

	Failed to Printer Driver Installation (Windows)	402
	Updating Printer Drivers in Network Environment (Windows)	403
	Disable Function to Send Usage Information of Printer	404
	Setup Application Asks for the Administrator's Username and Password (Windows)	407
	Enable Printing from PC/Smartphone/Tablet	408
	Installing Printer Drivers on PC without Network Connection (Windows)	409
F	Printing Problems	410
	Printer Does Not Print	411
	Printing Stops	. 414
	Cannot Print on the Disc Label	415
	Default Printer Keeps Changing (Windows)	417
	Change to Offline (Windows)/Cannot Communicate (Windows)	
	No Ink Level Appears in Canon IJ Status Monitor (Windows)	420
F	Paper is not Fed or Ejected Properly	421
	What to Do When Paper Is Jammed	422
	Printer Does Not Pick up or Feed the Paper/"No Paper" Error	430
	Paper Does Not Feed from Paper Source Specified in Printer Driver (Windows)	433
	What to Do If Paper Is Not Fed/Output Normally	434
F	Paper Setting Problems	436
	I want to know the paper types that can be used in this printer	437
I	Ink-related Problems	438
	Ink Does Not Come Out	439
	Printer consumes a lot of ink	440
List	of Support Code for Error.	441
١	When Error Occurred	443
•	1000	445
•	1001	447
	1002	448
•	1006	449
	1013	450
	1062	451
	1200	453
•	1250	454

1261	455
1300	456
1308	457
1351	458
1401	459
1403	460
1405	461
1408	462
1409	463
140A	464
140C	465
1410	466
1411	467
1412	468
1413	469
1414	470
1415	471
1416	472
1417	473
1418	474
1419	475
1500.	476
1551	477
1552	478
1570	479
15A1	480
15A2	481
15A3	482
1600	483
1660	484
1684	485
168C	486
1698	487

1699	488
1700	489
1701	490
1716	491
1730	492
1750	493
1830	494
1850	495
1851	496
1855	497
1856	498
1857	499
2103	500
2114	501
2115	503
2500	505
2503	506
3000	507
3306	508
3310	509
3311	510
3312	511
3313	512
3314	513
3315	514
3316	515
3317	516
3318	517
3319	518
3413	519
3440	520
3441	521
3442	522

3443	523
3444	524
3445	525
3446	526
3447	527
3454	528
3455	529
4103	530
4104	531
4109	532
410E	533
4111	534
495A	535
5100	536
5200	537
520C	538
520E	539
5250	540
5400	541
5700	542
5B00	543
5B01	544
5B16	545
5B22	546
5C02	547
5C13	548
5C14	549
6000	550
6001	551
6004	552
6500	553
6502	554
6503	555

6700	556
6701	557
6800	558
6801	559
6830	560
6831	561
6832	562
6833	563
6900	564
6901	565
6902	566
6910	567
6920	568
6921	569
6930	570
6931	571
6932	572
6933	573
6940	574
6941	575
6942	576
6943	577
6944	578
6945	579
6946	580
6A80	581
6A81	582
6D01	583
7600	584
7700	585
7800	586
7802	587
8200.	588

8300	9
B400	0
C000	1
C100	2
C101 59	3
Printer Information	4
Safety	5
Safety Precautions)6
Regulatory Information	8(
WEEE	10
Handling Precautions	4
When Repairing, Lending, or Disposing of the Printer	5
Legal Restrictions on Printing	6
Ink Tips61	7
Specifications	8
Specifications	9
Print Area	22
Printing Area	23
Standard Sizes. 62	25
Sizes for 0.98 inch (25 mm) Margin Paper	27
Printable Discs	29
Appendix63	0
Online Manual	1

Symbols Used in This Document

Warning

Instructions that, if ignored, could result in death, serious personal injury, or property damage caused by incorrect operation of the equipment. These must be observed for safe operation.

⚠ Caution

Instructions that, if ignored, could result in personal injury or property damage caused by incorrect operation of the equipment. These must be observed for safe operation.

>>>> Important

Instructions including important information that must be observed to avoid damage and injury or improper use of the product. Be sure to read these instructions.

Note

Instructions including notes for operation and additional explanations.

₩Basics

Instructions explaining basic operations of your product.

Note

· Icons may vary depending on your product.

Trademarks

- Microsoft, Excel, Internet Explorer, Microsoft Edge, Microsoft Store, OneDrive, PowerPoint, Windows and Windows Vista are trademarks of the Microsoft group of companies.
- Mac, Mac OS, macOS, OS X, AirPort, App Store, AirPrint, the AirPrint logo, Safari, Bonjour, iPad, iPad
 Air, iPad mini, iPadOS, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and
 other countries.
- The Mopria® word mark and the Mopria® Logo are registered and/or unregistered trademarks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Google Cloud Print, Google Chrome, Chrome OS, Chromebook, Android, Google Drive, Google Apps and Google Analytics are either registered trademarks or trademarks of Google LLC.
 Google Play and Google Play Logo are trademarks of Google LLC.
- Adobe, Acrobat, Flash, Photoshop, Illustrator, Adobe RGB and Adobe RGB (1998) are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Adobe, Acrobat, Flash, Photoshop, Photoshop Elements, Lightroom, Adobe RGB and Adobe RGB (1998) are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- USB Type-C[™] is a trademark of USB Implementers Forum.
- · Amazon, Echo and Alexa are trademarks of Amazon.com, Inc. or its affiliates.
- · Google, Google Home, and YouTube are trademarks of Google LLC.
- LINE is a registered trademark or trademark of LY Corporation.
- · LINE Clova is a registered trademark of LY Corporation.
- Google Docs, and Google Drive are trademarks of Google LLC.
- App Store is a trademark of Apple Inc., registered in the U.S. and other countries.
- AOSS™ is a trademark of BUFFALO INC.
- Autodesk and AutoCAD are registered trademarks or trademarks of Autodesk, Inc., and/or its subsidiaries and/or affiliates in the USA and/or other countries.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and in other countries.
- HP-GL and HP-GL/2 are either registered trademarks or trademarks of HP Inc. in the United States and/or other countries.
- Mozilla Firefox is a trademark or registered trademark of Mozilla Foundation in the U.S. and/or other countries.
- Wi-Fi, WPA, WPA2 and WPA3 are either registered trademarks or trademarks of Wi-Fi Alliance.
- All other company names and products mentioned in this guide may be registered trademarks or trademarks of their respective companies.

Licenses

Copyright (c) 2003-2015 Apple Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of Apple Inc. ("Apple") nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY APPLE AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL APPLE OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Apache License

Version 2.0, January 2004

http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

- 2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
- 3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
- 4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - 1. You must give any other recipients of the Work or Derivative Works a copy of this License; and
 - 2. You must cause any modified files to carry prominent notices stating that You changed the files; and

- 3. You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- 4. If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

- 5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
- 6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
- 7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
- 8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
- 9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any

such warranty or additional liability. END OF TERMS AND CONDITIONS

---- Part 1: CMU/UCD copyright notice: (BSD like) -----

Copyright 1989, 1991, 1992 by Carnegie Mellon University

Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

---- Part 2: Networks Associates Technology, Inc copyright notice (BSD) -----

Copyright (c) 2001-2003, Networks Associates Technology, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 3: Cambridge Broadband Ltd. copyright notice (BSD) -----

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 4: Sun Microsystems, Inc. copyright notice (BSD) -----

Copyright c 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR

SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 5: Sparta, Inc copyright notice (BSD) -----

Copyright (c) 2003-2012, Sparta, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 6: Cisco/BUPTNIC copyright notice (BSD) -----

Copyright (c) 2004, Cisco, Inc and Information Network Center of Beijing University of Posts and Telecommunications.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 7: Fabasoft R&D Software GmbH & Co KG copyright notice (BSD) -----

Copyright (c) Fabasoft R&D Software GmbH & Co KG, 2003 oss@fabasoft.com

Author: Bernhard Penz

bernhard.penz@fabasoft.com>

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * The name of Fabasoft R&D Software GmbH & Co KG or any of its subsidiaries, brand or product names may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 8: Apple Inc. copyright notice (BSD) -----

Copyright (c) 2007 Apple Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of Apple Inc. ("Apple") nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY APPLE AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL APPLE OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 9: ScienceLogic, LLC copyright notice (BSD) -----

Copyright (c) 2009, ScienceLogic, LLC

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of ScienceLogic, LLC nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 10: Lennart Poettering copyright notice (BSD-like) -----

Copyright 2010 Lennart Poettering

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

---- Part 11: IETF copyright notice (BSD) -----

Copyright (c) 2013 IETF Trust and the persons identified as authors of the code. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Internet Society, IETF or IETF Trust, nor the names of specific contributors, may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 12: Arista Networks copyright notice (BSD) ----

Copyright (c) 2013, Arista Networks, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Arista Networks, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 13: VMware, Inc. copyright notice (BSD) -----

Copyright (c) 2016, VMware, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of VMware, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 14: USC/Information Sciences Institute copyright notice (BSD) -----

Copyright (c) 2017-2018, Information Sciences Institute All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Information Sciences Institue nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,

PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

MIT License

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright 2000 Computing Research Labs, New Mexico State University

Copyright 2001-2015 Francesco Zappa Nardelli

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE COMPUTING RESEARCH LAB OR NEW MEXICO STATE UNIVERSITY BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Written by Joel Sherrill <joel@OARcorp.com>.

COPYRIGHT (c) 1989-2000.

On-Line Applications Research Corporation (OAR).

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, THE AUTHOR MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

(1) Red Hat Incorporated

Copyright (c) 1994-2009 Red Hat, Inc. All rights reserved.

This copyrighted material is made available to anyone wishing to use, modify, copy, or redistribute it subject to the terms and conditions of the BSD License. This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY expressed or implied, including the implied warranties of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. A copy of this license is available at http://www.opensource.org/licenses. Any Red Hat trademarks that are incorporated in the source code or documentation are not subject to the BSD License and may only be used or replicated with the express permission of Red Hat, Inc.

(2) University of California, Berkeley

Copyright (c) 1981-2000 The Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The FreeType Project LICENSE
2006-Jan-27
Copyright 1996-2002, 2006 by

David Turner, Robert Wilhelm, and Werner Lemberg

========

Introduction

The FreeType Project is distributed in several archive packages; some of them may contain, in addition to the FreeType font engine, various tools and contributions which rely on, or relate to, the FreeType Project.

This license applies to all files found in such packages, and which do not fall under their own explicit license. The license affects thus the FreeType font engine, the test programs, documentation and makefiles, at the very least.

This license was inspired by the BSD, Artistic, and IJG (Independent JPEG Group) licenses, which all encourage inclusion and use of free software in commercial and freeware products alike. As a consequence, its main points are that:

- o We don't promise that this software works. However, we will be interested in any kind of bug reports. (`as is' distribution)
- o You can use this software for whatever you want, in parts or full form, without having to pay us. ('royalty-free' usage)
- o You may not pretend that you wrote this software. If you use it, or only parts of it, in a program, you must acknowledge somewhere in your documentation that you have used the FreeType code. (`credits')

We specifically permit and encourage the inclusion of this software, with or without modifications, in commercial products.

We disclaim all warranties covering The FreeType Project and assume no liability related to The FreeType Project.

Finally, many people asked us for a preferred form for a credit/disclaimer to use in compliance with this license. We thus encourage you to use the following text:

.....

Portions of this software are copyright © <year> The FreeType

Project (www.freetype.org). All rights reserved.

.....

Please replace <year> with the value from the FreeType version you actually use.

Legal Terms

========

0. Definitions

Throughout this license, the terms 'package', 'FreeType Project', and 'FreeType archive' refer to the set of files originally distributed by the authors (David Turner, Robert Wilhelm, and Werner Lemberg) as the 'FreeType Project', be they named as alpha, beta or final release.

'You' refers to the licensee, or person using the project, where 'using' is a generic term including compiling the project's source code as well as linking it to form a 'program' or 'executable'.

This program is referred to as `a program using the FreeType engine'.

This license applies to all files distributed in the original FreeType Project, including all source code, binaries and documentation, unless otherwise stated in the file in its original, unmodified form as distributed in the original archive.

If you are unsure whether or not a particular file is covered by this license, you must contact us to verify this.

The FreeType Project is copyright (C) 1996-2000 by David Turner, Robert Wilhelm, and Werner Lemberg. All rights reserved except as specified below.

1. No Warranty

THE FREETYPE PROJECT IS PROVIDED 'AS IS' WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL ANY OF THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY DAMAGES CAUSED BY THE USE OR THE INABILITY TO USE, OF THE FREETYPE PROJECT.

2. Redistribution

This license grants a worldwide, royalty-free, perpetual and irrevocable right and license to use, execute, perform, compile, display, copy, create derivative works of, distribute and sublicense the FreeType Project (in both source and object code forms) and derivative works thereof for any purpose; and to authorize others to exercise some or all of the rights granted herein, subject to the following conditions:

o Redistribution of source code must retain this license file (`FTL.TXT') unaltered; any additions, deletions or changes to the original files must be clearly indicated in accompanying documentation. The copyright notices of the unaltered, original files must be preserved in all copies of source files.

o Redistribution in binary form must provide a disclaimer that states that the software is based in part of the work of the FreeType Team, in the distribution documentation. We also encourage you to put an URL to the FreeType web page in your documentation, though this isn't mandatory.

These conditions apply to any software derived from or based on the FreeType Project, not just the unmodified files. If you use our work, you must acknowledge us. However, no fee need be paid to us.

3. Advertising

Neither the FreeType authors and contributors nor you shall use the name of the other for commercial, advertising, or promotional purposes without specific prior written permission.

We suggest, but do not require, that you use one or more of the following phrases to refer to this software in your documentation or advertising materials: `FreeType Project', `FreeType Engine', `FreeType library', or `FreeType Distribution'.

As you have not signed this license, you are not required to accept it. However, as the FreeType Project is copyrighted material, only this license, or another one contracted with the authors, grants you the right to use, distribute, and modify it.

Therefore, by using, distributing, or modifying the FreeType Project, you indicate that you understand and accept all the terms of this license.

4. Contacts

There are two mailing lists related to FreeType:

o freetype@nongnu.org

Discusses general use and applications of FreeType, as well as future and wanted additions to the library and distribution.

If you are looking for support, start in this list if you haven't found anything to help you in the documentation.

o freetype-devel@nongnu.org

Discusses bugs, as well as engine internals, design issues, specific licenses, porting, etc.

Our home page can be found at

http://www.freetype.org

--- end of FTL.TXT ---

The TWAIN Toolkit is distributed as is. The developer and distributors of the TWAIN Toolkit expressly disclaim all implied, express or statutory warranties including, without limitation, the implied warranties of merchantability, noninfringement of third party rights and fitness for a particular purpose. Neither the developers nor the distributors will be liable for damages, whether direct, indirect, special, incidental, or consequential, as a result of the reproduction, modification, distribution or other use of the TWAIN Toolkit.

JSON for Modern C++

Copyright (c) 2013-2017 Niels Lohmann

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright (c) 2011 - 2015 ARM LIMITED

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of ARM nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL COPYRIGHT HOLDERS AND CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2014, Kenneth MacKay

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2006, CRYPTOGAMS by <appro@openssl.org> All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain copyright notices, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the CRYPTOGAMS nor the names of its copyright holder and contributors may be used to endorse or promote products derived from this software without specific prior written permission.

ALTERNATIVELY, provided that this notice is retained in full, this product may be distributed under the terms of the GNU General Public License (GPL), in which case the provisions of the GPL apply INSTEAD OF those given above.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

ISC License

Copyright (c) 2013-2017

Frank Denis < j at pureftpd dot org>

Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (c) 2008 The NetBSD Foundation, Inc.

All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Lennart Augustsson (lennart@augustsson.net) at Carlstedt Research & Technology.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR

PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2000 Intel Corporation

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither name of Intel Corporation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL INTEL OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Lua

Copyright © 1994–2014 Lua.org, PUC-Rio.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated

documentation files (the "Software"), to deal in the Software without restriction, including without limitation the

rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to

permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of

the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED,

INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN

ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH

THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

LuaSocket

LuaSocket 2.0.2 license Copyright © 2004-2007 Diego Nehab

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

LuneScript

Copyright (c) 2018 ifritJP

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright (c) 2002-2019, Jouni Malinen <j@w1.fi> and contributors All Rights Reserved.

This software may be distributed, used, and modified under the terms of BSD license:

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (C) 2019, Broadcom Corporation. All Rights Reserved.

Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

The certificate files "Amazon Root CA 1", "Amazon Root CA 2", "Amazon Root CA 4" are licensed under a Creative Commons Attribution-NoDerivatives 4.0 International License.

This software is licensed under the MIT License.

Copyright Fedor Indutny, 2018.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

The following applies only to products supporting Wi-Fi.

(c) 2009-2013 by Jeff Mott. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions, and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions, and the following disclaimer in the documentation or other materials provided with the distribution.
- * Neither the name CryptoJS nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS," AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE,

ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright 2008, Google Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Google Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS AS IS AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1998-2010, Brian Gladman, Worcester, UK. All rights reserved.

The redistribution and use of this software (with or without changes) is allowed without the payment of fees or royalties provided that: source code distributions include the above copyright notice, this list of conditions and the following disclaimer; binary distributions include the above copyright notice, this list of conditions and the following disclaimer in their documentation.

This software is provided 'as is' with no explicit or implied warranties in respect of its operation, including, but not limited to, correctness and fitness for purpose.

Disclaimer: IMPORTANT: This Apple software is supplied to you, by Apple Inc. ("Apple"), in your capacity as a current, and in good standing, Licensee in the MFi Licensing Program. Use of this Apple software is governed by and subject to the terms and conditions of your MFi License, including, but not limited to, the restrictions specified in the provision entitled "Public Software", and is further subject to your agreement to the following additional terms, and your agreement that the use, installation, modification or redistribution of this Apple software constitutes acceptance of these additional terms. If you do not agree with these additional terms, please do not use, install, modify or redistribute this Apple software.

Subject to all of these terms and in consideration of your agreement to abide by them, Apple grants you, for as long as you are a current and in good-standing MFi Licensee, a personal, non-exclusive license, under Apple's copyrights in this original Apple software (the "Apple Software"), to use, reproduce, and modify the Apple Software in source form, and to use, reproduce, modify, and redistribute the Apple Software, with or without modifications, in binary form. While you may not redistribute the Apple Software in source form, should you redistribute the Apple Software in binary form, you must retain this notice and the following text and disclaimers in all such redistributions of the Apple Software. Neither the name, trademarks, service marks, or logos of Apple Inc. may be used to endorse or promote products derived from the Apple Software without specific prior written permission from Apple. Except as expressly stated in this notice, no other rights or licenses, express or implied, are granted by Apple herein, including but not limited to any patent rights that may be infringed by your derivative works or by other works in which the Apple Software may be incorporated.

Unless you explicitly state otherwise, if you provide any ideas, suggestions, recommendations, bug fixes or enhancements to Apple in connection with this software ("Feedback"), you hereby grant to Apple a non-exclusive, fully paid-up, perpetual, irrevocable, worldwide license to make, use, reproduce, incorporate, modify, display, perform, sell, make or have made derivative works of, distribute (directly or indirectly) and sublicense, such Feedback in connection with Apple products and services. Providing this Feedback is voluntary, but if you do provide Feedback to Apple, you acknowledge and agree that Apple may exercise the license granted above without the payment of royalties or further consideration to Participant.

The Apple Software is provided by Apple on an "AS IS" basis. APPLE MAKES NO WARRANTIES, EXPRESS OR

IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY

AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE OR ITS USE AND OPERATION ALONE OR

IN COMBINATION WITH YOUR PRODUCTS.

IN NO EVENT SHALL APPLE BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES

(INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR

PROFITS; OR BUSINESS INTERRUPTION) ARISING IN ANY WAY OUT OF THE USE, REPRODUCTION, MODIFICATION

AND/OR DISTRIBUTION OF THE APPLE SOFTWARE, HOWEVER CAUSED AND WHETHER UNDER THEORY OF CONTRACT, TORT

(INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, EVEN IF APPLE HAS BEEN

ADVISED OF THE

POSSIBILITY OF SUCH DAMAGE.

Copyright (C) 2009 Apple Inc. All Rights Reserved.

Copyright (c) 2012-2013 Apple Inc. All rights reserved.

Copyright (C) 2013 Apple Inc. All Rights Reserved.

The following applies only to products supporting the cloud service (formerly known as PIXUS Cloud Link, PIXMA Cloud Link, or MAXIFY Cloud Link).

THE BASIC LIBRARY FUNCTIONS

Written by: Philip Hazel Email local part: ph10

Email domain: cam.ac.uk

University of Cambridge Computing Service, Cambridge, England.

Copyright (c) 1997-2012 University of Cambridge

All rights reserved.

PCRE JUST-IN-TIME COMPILATION SUPPORT

Written by: Zoltan Herczeg
Email local part: hzmester
Emain domain: freemail.hu

Copyright(c) 2010-2012 Zoltan Herczeg

All rights reserved.

STACK-LESS JUST-IN-TIME COMPILER

Written by: Zoltan Herczeg Email local part: hzmester Emain domain: freemail.hu

Copyright(c) 2009-2012 Zoltan Herczeg

All rights reserved.

THE C++ WRAPPER FUNCTIONS

Contributed by: Google Inc.

Copyright (c) 2007-2012, Google Inc.

All rights reserved.

THE "BSD" LICENCE

------Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the University of Cambridge nor the name of Google Inc. nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This software is based in part on the work of the Independent JPEG Group.

Basic Operations

Printer Parts

- Front
- Back / Side
- Inside
- Operation Panel


Using the Printer

- Turning the Printer On and Off
- LCD and Operation Panel
- Loading Paper in the Top Feed
- Loading Paper in the Manual Feed Tray
- Placing Multi-purpose Tray
 - Cautions When Printing with Multi-purpose Tray
 - Placing/Removing a Printable Disc

Printer Parts

- **▶** Front
- ▶ Back / Side
- **▶** Inside
- ➤ Operation Panel

Front

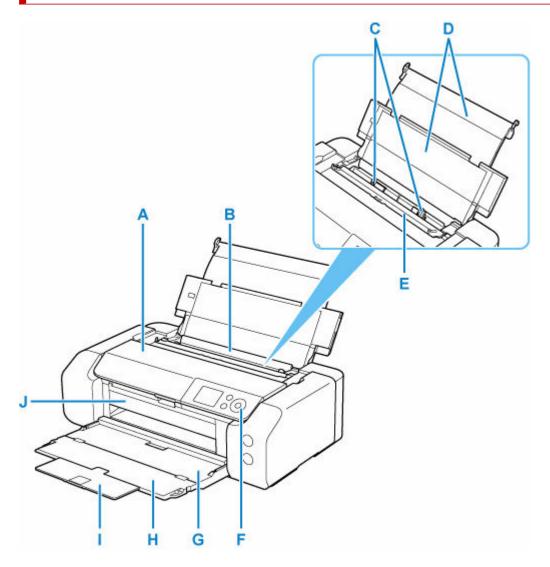

A: Top Cover

Open to replace an ink tank or to remove jammed paper inside the printer.

B: Top Feed

Two or more sheets of the same size and type of paper can be loaded at the same time, and fed automatically one sheet at a time.

➡ Loading Paper in the Top Feed

C: Paper Guides

Align with both sides of the paper stack.

D: Paper Support

Open to load paper in the top feed.

E: Feed Slot Cover

Prevents anything from falling into the feed slot.

Open it to slide the paper guides, and close it before printing.

F: Operation Panel

Use to change the settings of the printer or to operate it.

→ Operation Panel

G: Paper Output Tray

Printed paper is ejected. Open it before printing.

H: Output Tray Extension


Open to support ejected paper.

I: Paper Output Support

Pull out to support ejected paper.

J: Multi-purpose Tray Guide

Place the multi-purpose tray here.

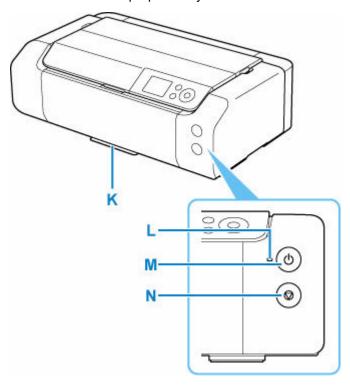

K: Multi-purpose Tray Storage Compartment

The multi-purpose tray supplied with the printer can be stored here.

L: ON lamp

Lights after flashing when the power is turned on.

M: ON button


Turns the power on or off.

➡ Turning the Printer On and Off

N: Stop button

Cancels a print job in progress.

Back / Side

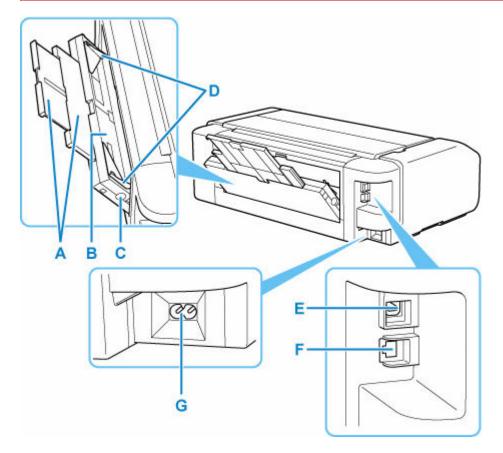

A: Paper Support

Pull out to load paper in the manual feed tray.

B: Manual Feed Tray

Load one sheet of 8" x 10" (20 x 25 cm) size paper or larger, or thick paper at a time.

➡ Loading Paper in the Manual Feed Tray

C: Paper Jam Clearing button

Press this button when removing paper jammed in the manual feed tray.

D: Paper Guides

Align with both sides of the paper stack.

E: USB Port

Plug in the USB cable to connect the printer with a computer.

F: Wired LAN Connector

Plug in the LAN cable to connect the printer to a LAN.

G: Power Cord Connector


Plug in the supplied power cord.

>>> Important

• Do not touch the metal casing.

•	Do not plug in or unplug the USB cable or LAN cable while the printer is printing with the computer. can cause trouble.	This

Inside

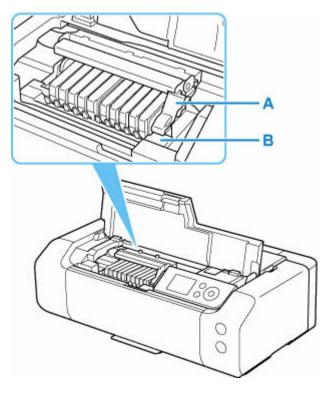

A: Print Head Lock Lever

Locks the print head into place.

B: Print Head Holder

Install the print head here.


>>> Important

• Do not raise the print head lock lever after installing the print head.

>>> Note

• For details on replacing an ink tank, see Replacing Ink Tanks.

Operation Panel

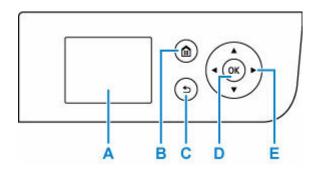

A: LCD (Liquid Crystal Display)

Displays messages, menu items, and the operational status.

B: HOME button

Used to display the HOME screen.

▶ LCD and Operation Panel

C: Back button

Returns the LCD to the previous screen.

D: OK button

Finalizes the selection of a menu or setting item. This button is also used to resolve an error.

E: ▲, ▼, ◄, and ▶ buttons

Used to select a menu or setting item.

▶ LCD and Operation Panel

Using the Printer

- ➤ Turning the Printer On and Off
- ► LCD and Operation Panel
- ➤ Loading Paper in the Top Feed
- ➤ Loading Paper in the Manual Feed Tray
- ➤ Placing Multi-purpose Tray
 - Cautions When Printing with Multi-purpose Tray
 - Placing/Removing a Printable Disc


Turning the Printer On and Off

- Checking that Power Is On
- Turning on the printer
- ➡ Turning off the printer

Checking that Power Is On

The **ON** lamp is lit when the printer is turned on.

Even if the LCD is off, if the **ON** lamp is lit, the printer is on.

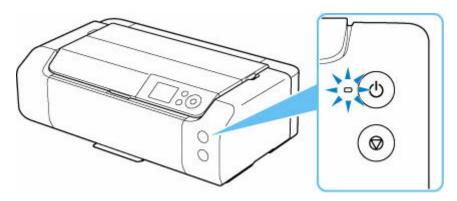


Note

• The LCD will turn off if the printer is not operated for about 3 minutes. To restore the display, press any button or perform the print operation.

Turning on the printer

Press the ON button to turn on the printer.

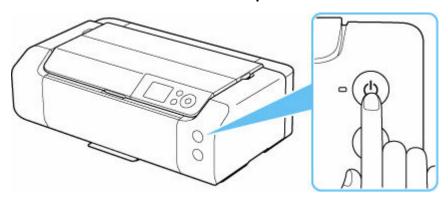


Note

- It may take a while for the printer to start printing immediately after you turn on the printer.
- You can set the printer to automatically turn on when a print operation is performed from a computer connected by USB cable or via network. This feature is set to off by default.
 - → Power control

Turning off the printer


1. Press the ON button to turn the printer off.

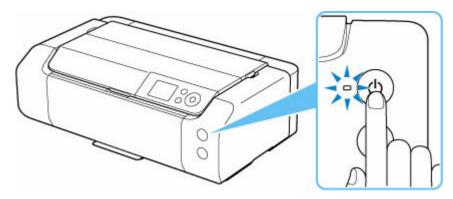

2. Check that both the ON lamp and LCD display are off.

>>> Important

When you unplug the power cord, press the ON button, then confirm that the ON lamp is off.
 Unplugging the power cord while the ON lamp is lit or flashing may cause drying or clogging of the print head and print quality may be reduced.

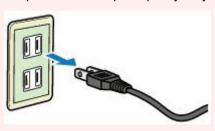

Placing Multi-purpose Tray

- ➤ Cautions When Printing with Multi-purpose Tray
- ➤ Placing/Removing a Printable Disc

Cautions When Printing with Multi-purpose Tray

Cautions Common to using Multi-purpose Tray

- Be sure to use the multi-purpose tray supplied with this printer.
- Do not mount the multi-purpose tray while the printer is in operation.
- Do not remove the multi-purpose tray while the printer is in operation. Doing so may damage the printer, the multi-purpose tray, or the media.
- Do not get dirt on the multi-purpose tray or scratches on the reflectors. The printer may not be able to recognize that a media is loaded, or printing may become misaligned. If the multi-purpose tray becomes dirty, wipe the reflector clean with a soft and dry cloth, taking care not to scratch it.
- After printing, allow the printing surface of the media to dry naturally. Do not use hairdryers or expose the media to direct sunlight to dry the ink. Do not touch the printing surface until the ink has dried.

Cautions When Printing onto Printable Disc

- Remove any dirt from the multi-purpose tray before placing printable discs on it. Loading discs on a dirty multi-purpose tray may scratch the recording surface of the discs.
- Do not print onto printable discs that are not compatible with inkjet printing. The ink will not dry and may cause problems with the disc itself or DVD players or other devices it is loaded into.
- Do not print onto a printable disc's recording surface. Doing so will make data recorded onto discs unreadable.
- Hold printable discs by their edges. Do not touch either the label surface (printing surface) or recording surface.
- The multi-purpose tray may become dirty if software other than Easy-PhotoPrint Editor is used.

Placing/Removing a Printable Disc


- Before Placing a Printable Disc
- Placing a Printable Disc
- Removing a Printable Disc

Before Placing a Printable Disc

A printable disc differs from regular disc (BD/DVD/CD, etc.) in that its label surface has been specially processed or printing by an inkjet printer.

The following items are needed to print onto the printable disc.

• Multi-purpose tray (supplied with the printer)

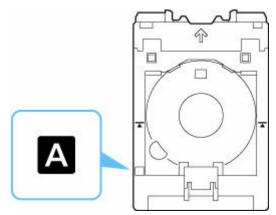

- * Use the multi-purpose tray with "A" on the surface.
- 4.72 in. (12 cm) printable disc



Obtain a printable disc with a label surface compatible with inkjet printing.

Placing a Printable Disc


To print onto a printable disc, place it on the supplied multi-purpose tray, and then insert it into the printer.

Important


- Do not mount the multi-purpose tray until the message prompting you to load the printable disc appears. Doing so can damage the printer.
- Remove any paper in the manual feed tray.

>>> Note


- If test printing is executed onto test printing paper, depending on the paper type, the printer may not be able to read its size correctly, preventing the border areas from being printed. Test printing paper should be used for purposes of checking the envisioned layout.
- **1.** Take out multi-purpose tray from multi-purpose tray storage compartment.

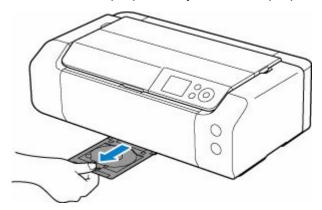

2. Open the paper output tray (A) gently.

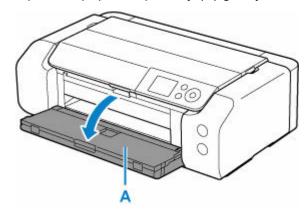


3. When message prompting you to load printable disc appears, open the multi-purpose tray guide (B).

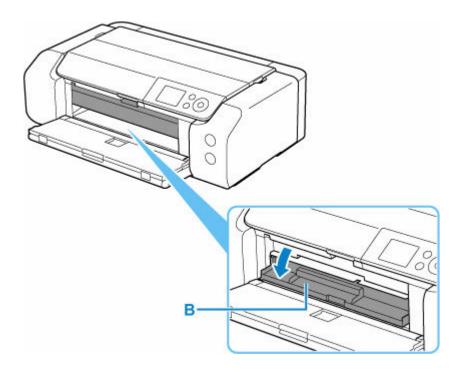


4. Place printable disc on multi-purpose tray.

>>> Important


- Check that there is no dirt on the multi-purpose tray before placing a printable disc on it.
- When placing a printable disc on the multi-purpose tray, do not touch the printing surface of the disc or the reflectors (C) on the multi-purpose tray.

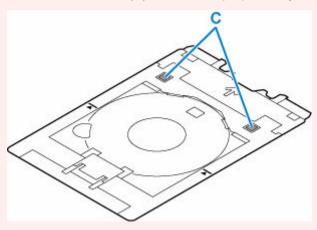


1. WITH PRINT SIDE FACING UP, place printable disc, and press it against lock (D) at bottom.

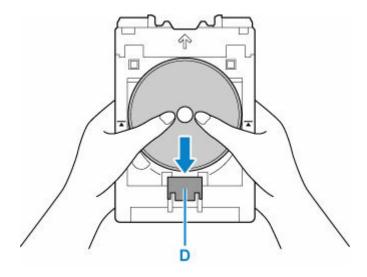

2. While pressing down lock with printable disc, insert top of printable disc into slits (E).

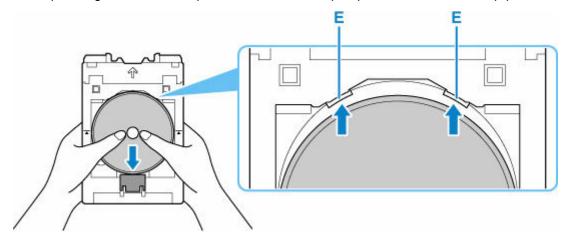


5. Place multi-purpose tray on multi-purpose tray guide.

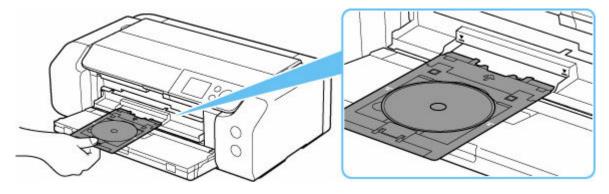

6. Insert multi-purpose tray straight in in horizontal direction until arrow (**∑**) on multipurpose tray guide is approximately aligned with arrow (**∑**) on multi-purpose tray.

>>> Important

• Do not insert the multi-purpose tray beyond the arrow (▼) on the multi-purpose tray guide.

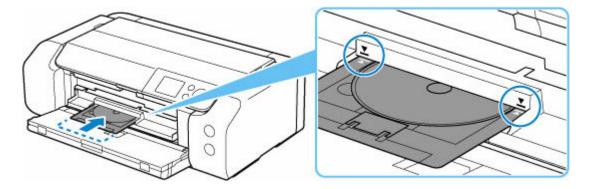


>>> Note

• The multi-purpose tray may be ejected after a certain amount of time passes. In such a case, follow the on-screen instructions to place the multi-purpose tray again.

Removing a Printable Disc


1. Pull out multi-purpose tray.

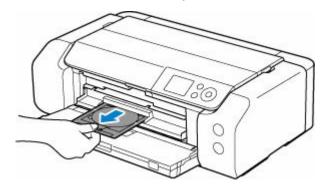

2. Close the multi-purpose tray guide.

>>> Important

• If the multi-purpose tray guide is opened, you cannot print on paper as it will not feed properly. Make sure that the multi-purpose tray guide is closed.

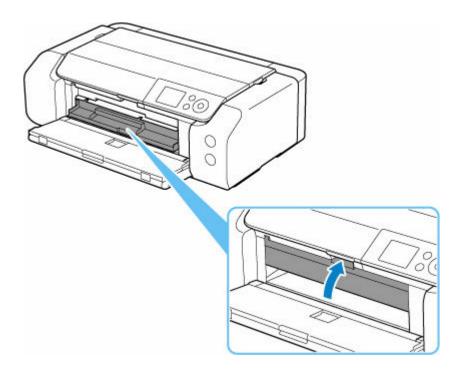


3. While pressing down lock (A), take out printable disc from slits (B) on multi-purpose tray, and remove it.

>>>> Important

• Do not touch the printing surface when removing the disc from the multi-purpose tray.

>>> Note

 Allow the printing surface to dry before removing the disc. If you see printing on the multipurpose tray or on the transparent parts of the inner or outer diameters of the printable disc, wipe them clean after the printing surface has dried.

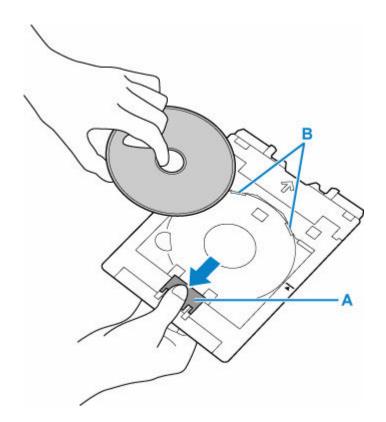

4. Insert multi-purpose tray straight into multi-purpose tray storage compartment. When not using the multi-purpose tray, store it in the multi-purpose tray storage compartment.

Related Information

- → Cautions When Printing with Multi-purpose Tray
- → Print Area (Printable Discs)

Printing

Printing from Your Computer (Windows)

- Basic Printing Setup Basics
- Main Controls (Basic Settings Tab)
- Set Media Type, Quality, etc. (Media/Quality Tab)
- Set the Layout of Printed Documents (Page Setup Tab)
- See more...

Printing from Your Computer (macOS)

- Basic Printing Setup Basics
- Various Printing Methods
- Changing the Print Quality and Correcting Image Data
- See more...

Printing from Chromebook

- Printing from Printer
 - Printing Templates Such as Lined or Graph Paper

Printing from Smartphone/Tablet

- Print Easily from a Smartphone or Tablet with Canon PRINT
- Printing from iOS Device (AirPrint)
- About Mopria®
- Printing with Canon Print Service
- Using Cloud Service
- Printing with a Specified ICC Profile

Printing from Your Computer (macOS)


- ➤ Basic Printing Setup ⊌Basic
- ➤ Various Printing Methods
- ➤ Changing the Print Quality and Correcting Image Data
- ➤ Printing Using AirPrint

Basic Printing Setup

The simple setup procedure for carrying out appropriate printing on this printer is as follows:

- 1. Check that printer is turned on
- 2. Load paper in printer
- 3. Select the printer

Select your model from the Printer list in the Print Dialog.

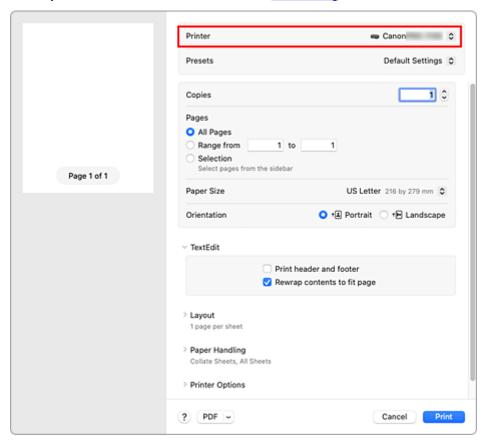


4. Select the paper size

For Paper Size, select the paper size to be used.


If necessary, set the number of copies, the pages to be printed, and the orientation.

5. Select Quality & Media from Printer Options

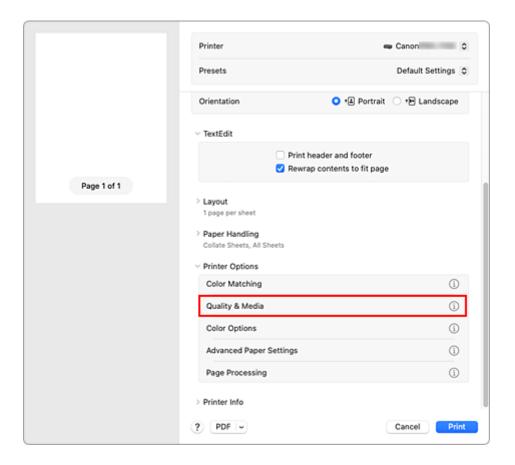

6. Select the media type

For **Media Type**, select the same paper type loaded in the printer.

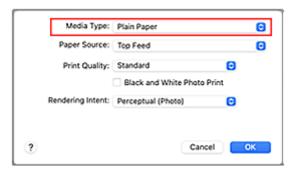

Important

• In the Presets section, click Save Current Settings as Preset... to register the specified settings.

7. Select the paper source

For **Paper Source**, select the setting that matches your purpose.

8. Select the print quality

For Print Quality, select Highest, Standard or Fast according to your purpose.

Important

The print quality settings that can be selected may differ depending on a printing profile.

9. Complete the setup

Click Print.

When you execute print, the document will be printed in accordance with the type and size of the media.

>>> Important

- If you are performing large-format printing, make sure that the ink tank has plenty of remaining ink.
- To print by using the manual feed tray, perform the operation according to the instructions displayed on the screen.

>>>> Note

- For details about the paper information to be registered to the printer driver and on the printer, see the following:
 - Paper Settings on the Printer Driver and the Printer (Media Type)
 - Paper Settings on the Printer Driver and the Printer (Paper Size)

Paper Settings on the Printer Driver and the Printer (Media Type)

When you use this printer, selecting a media type and <u>paper size</u> that matches the print purpose will help you achieve the best print results.

Depending on the media type you are using, specify the media type settings on the printer driver or the printer's operation panel as described below.

Canon genuine papers (Document Printing)

Media name <model no.=""></model>	Media Type in the printer driver	Paper information registered on the printer
Canon Red Label Superior <wop111></wop111>	Plain Paper	Plain paper
Canon Océ Office Colour Paper <sat213></sat213>	Plain Paper	Plain paper

Canon genuine papers (Photo Printing)

Media name <model no.=""></model>	Media Type in the printer driver	Paper information regis- tered on the printer
Photo Paper Plus Glossy II <pp-201 <br="" pp-208="">PP-301></pp-201>	Photo Paper Plus Glossy II A	Plus Glossy II A
Photo Paper Pro Platinum <pt-101></pt-101>	Photo Paper Pro Platinum	Pro Platinum
Photo Paper Pro Luster <lu-101></lu-101>	Photo Paper Pro Luster	Pro Luster
Photo Paper Plus Semi-gloss <sg-201></sg-201>	Photo Paper Plus Semi-gloss	Plus Semi-gloss
Matte Photo Paper <mp-101></mp-101>	Matte Photo Paper	Matte
Premium Fine Art Smooth <fa-sm1></fa-sm1>	Premium Fine Art Smooth	Fine Art Smooth
Premium Fine Art Rough <fa-rg1></fa-rg1>	Premium Fine Art Rough	Fine Art Rough
Photo Paper Pro Premium Matte <pm-101></pm-101>	Photo Paper Pro Premium Matte A	ProPremiumMatteA

Commercially available papers

When you use non-genuine Canon paper, you can print easily by using the existing settings that have been prepared on the printer's operation panel and in the printer driver.

Media name	Media Type in the printer driver	Paper information regis- tered on the printer
Plain Paper (including recycled paper)	Plain Paper	Plain paper
Lightweight Photo Paper (Approximately 0.1mm to less than 0.3mm)	Lightweight Photo Paper *2	Light Photo Paper

Heavyweight Photo Paper (Approximately 0.3mm to less than 0.6mm)	Heavyweight Photo Paper *2	Heavy Photo Paper
Photo Paper (Long-form)	Photo Paper (Long-form Printing) *2	Photo Paper (Long-form)
Baryta Photo Paper *3	Baryta Photo Paper	Baryta PhotoPaper
Heavyweight Fine Art Paper (Approximately 0.1mm to less than 0.3mm)	Heavyweight Fine Art Paper *2	Heavy Art Paper
Extra Heavyweight Fine Art Paper (Approximately 0.3mm to less than 0.6mm)	Extra Heavyweight Fine Art Paper *2	EX Hvy Art Paper
Highest Density Fine Art Paper *1	Highest Density Fine Art Paper *2	High Density Art
Fine Art Paper (Long-form)	Fine Art Paper (Long-form Print) *2	FineArtPaper (Long-form)
Canvas	Canvas *2	Canvas
Japanese Paper Washi	Japanese Paper Washi *2	Japanese Paper
Greeting Cards	Inkjet Greeting Card	IJ Greeting Card
Card Stock	Card Stock	Card stock

^{*1} Use the **Highest Density Fine Art Paper** setting when using a type of Fine Art Paper that is particularly thick and will absorb more ink than others. More ink is used than in regular printing and therefore depending on the type of paper, it can increase the depth of color.

However, depending on the type of paper used, the ink can bleed into the paper, causing the paper to rub and get dirty, or damage the print heads.

- *2 To improve the print quality and paper feeding when using paper other than Canon genuine paper, create a custom paper by using Media Configuration Tool and add it to the printer.
- These media types can be used as custom paper standards.
- *3 If you are using baryta photo paper for inkjet printers, configure settings for **Baryta Photo Paper**. It improves the consistency of the coloring and gloss, achieving high-quality print results with a sense of depth.

>>> Note

- If you have added a new media type using the Media Configuration Tool, open the Canon IJ Printer Utility2, and from **Media Information**, select **Update Media Information** (**Correct Media Information**) and carry out a driver media information update.
 - When printing on a newly added media type, change both the media settings on the printer driver and the registered media information on the printer to those of the new media.
- When you set Media Type to Matte Photo Paper, Premium Fine Art Smooth, Premium Fine Art
 Rough, or Photo Paper Pro Premium Matte A from the Quality & Media menu displayed from
 Printer Options of the print dialog, we recommend that you set Paper Size to 4 x 6, L, or "XXX Margin
 25" in the print dialog.
 - For information about printable ranges, refer to "Printing Area."

Paper Settings on the Printer Driver and the Printer (Paper Size)

When you use this printer, selecting a paper size that matches the print purpose will help you achieve the best print results.

You can use the following paper sizes on this printer.


Paper Size in the printer driver	Paper information registered on the printer
4 x 6	KG/4"x6"(10x15)
5 x 7	2L/5"x7"(13x18)
7 x 10	7"x10"(18x25cm)
8 x 10	8"x10"(20x25cm)
9 x 13	9"x13"(23x33cm)
10"x12" 25x30cm	10"x12"(25x30cm)
11 x 14	11"x14"
210x594mm	210x594mm
210x594mm Margin 25	210x594mm
А3	A3
A3 Margin 25	A3
A3+ 13"x19" 33x48cm	A3+
A3+ Margin 25	A3+
A4	A4
A4 Margin 25	A4
A5	A5
JIS B4	B4
JIS B5	B5
L	L(89x127mm)
Postcard	Hagaki
Postcard Double	Hagaki 2
Square 5"x5" 13x13cm	Square 5"
Square 12"x12" 30x30cm	12"x12"(30x30cm)

Super B	13"x19" (Super B)
Tabloid	11"x17"(28x43cm)
Tabloid Margin 25	11"x17"(28x43cm)
US Legal	Legal
US Letter	Letter
US Letter Margin 25	Letter
Custom Size	Any size

Various Printing Methods

- Setting the Number of Copies and Printing Order
- Perform Borderless Printing
- Scaled Printing
- ➤ Page Layout Printing
- ➤ Printing on Postcards
- Changing the Clear Coating Settings
- Setting Paper Dimensions (Custom Size)
- Perform Long-form Printing
- > Setting the Stapling Margin
- Scaling the Printing to Fit the Paper Size
- Switching the Paper Source to Match the Purpose


Setting the Number of Copies and Printing Order

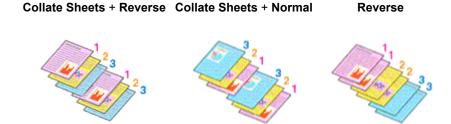

The procedure for specifying the number of copies and printing order is as follows:

Specify the number of copies to be printed
 Specify the number of copies to print from the Copies in the Print Dialog.

2. Select Paper Handling

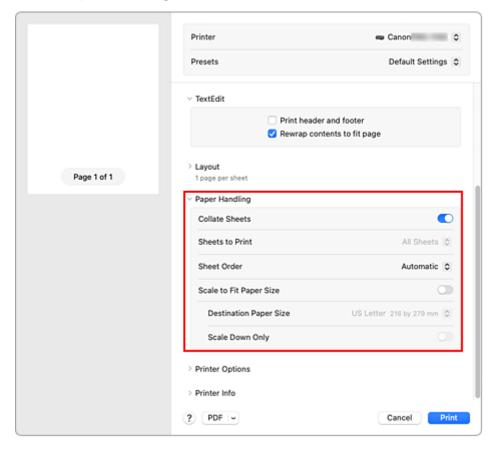

3. Turn on Collate Sheets when you are specifying multiple copies in the Copies box Turn on Collate Sheets to print all the pages of a single copy together. Turn off this setting to print all pages with the same page number together.

Specify the print order Check Page Order. When you select **Reverse**, printing starts from the last page.

When you select **Automatic** or **Normal**, printing starts from the first page.

5. Complete the setup

Click Print.


When you execute print, the specified number of copies will be printed with the specified printing order.

>>> Important

When the application software that you used to create the document has the same function, specify
the settings on the printer driver. However, if the print results are not acceptable, specify the function
settings on the application software. When you specify the number of copies and the printing order with
both the application software and this printer driver, the number of copies may be multiplied numbers of
the two settings or the specified printing order may not be enabled.

Perform Borderless Printing

The borderless printing function allows you to print data without any margin by enlarging the data so that it extends slightly off the paper. In standard printing, margins are created around the document area. However, in borderless printing function, these margins are not created. When you want to print data such as a photo without providing any margin around it, set borderless printing.

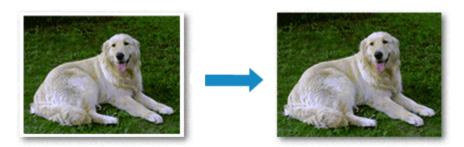

The procedure for performing borderless printing is as follows:

Note

 You can also set Magnification level for borderless on the operation panel of the printer, but the settings on the printer driver will be prioritized.

Setting Borderless Printing

 Select sheet size for borderless printing Select "XXX Borderless" for Paper Size from the print dialog.

2. Select Page Processing from Printer Options

3. Adjust the amount of extension from the paper

If necessary, adjust the amount of extension using the **Borderless Extension** slider. Moving the slider to the right increases the amount extending off the paper, and moving the slider to the left decreases the amount.

It is recommended to set the slider at the second position from the right for most cases.

>>>> Important

 When the Borderless Extension slider is set to the rightmost position, the back side of the paper may become smudged.

4. Click Print

When you perform print, the data is printed without any margins on the paper.

>>>> Important

• Borderless printing only supports specific paper sizes. Make sure to select a paper size with the wording "Borderless" from the **Paper Size**.

- Print quality may deteriorate or the sheet may be stained at the top and bottom depending on the type of paper used.
- When the ratio of the height to the width differs from the image data, a portion of the image may not be printed depending on the size of the media used.
 - In this case, crop the image data with an application software according to the paper size.
- · When scaled printing or page layout printing is enabled, you cannot perform borderless printing.

Note

 When you set Media Type to Plain Paper, or Hagaki A from the Quality & Media menu displayed from Printer Options of the print dialog, borderless full-page printing cannot be selected.

Expanding the Range of the Document to Print

Setting a large amount of extension allows you to perform borderless printing with no problems. However, the portion of the document extending off the paper range will not be printed and for this reason, the subjects around the perimeter of a photo may not be printed.

When you are not satisfied with the result of borderless printing, reduce the amount of extension. The extension amount decreases as the **Borderless Extension** slider is moved to the left.

>>> Important


• When the amount of extension is decreased, an unexpected margin may be produced on the print, depending on the size of the paper.

Note


 When the Borderless Extension slider is set to the leftmost position, image data will be printed in the full size.

Scaled Printing

The procedure for printing a document with pages enlarged or reduced is as follows:

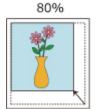




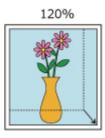

1. Select the printer

In the Page Setup Dialog, select your model name from the Format For list.

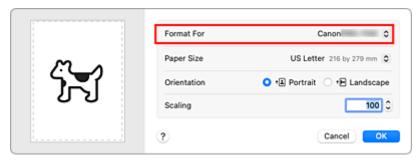

2. Set scaled printing

Specify the scaling factor in the Scaling box, and click OK.

>>>> Note

• Depending on the **Scaling** value that you set, an error message may be displayed.

3. Complete the setup

On the Print Dialog, click Print.

When you execute print, the document will be printed with the specified scale.

>>> Important

 When the application software which you used to create the original has the scaled printing function, configure the settings on your application software. You do not need to configure the same setting in the Page Setup dialog.


Page Layout Printing

The page layout printing function allows you to print more than one page image on a single sheet of paper.



The procedure for performing page layout printing is as follows:

1. Select Layout in the Print Dialog

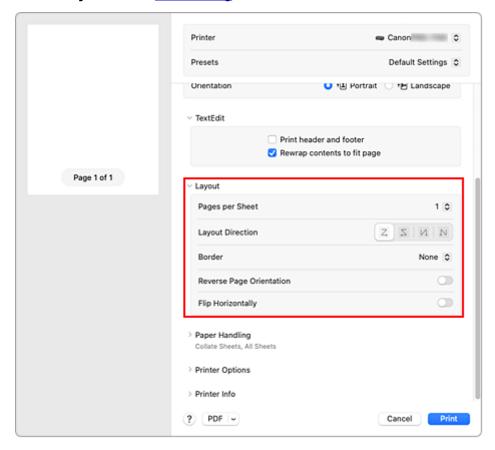

- Set the number of original you print on one pageIn Pages per Sheet, specify the number of page you print on one page.
- 3. If necessary, set the following items

Layout Direction

To change the page placement order, select an icon from the list.

Border

To print a page border around each document page, select a type of page border.

Reverse Page Orientation

Turn this on to change the paper orientation.

Flip Horizontally

Turn this on to reverse left and right of the document.

4. Complete the setup

Click Print.

When you execute print, the specified number of pages will be arranged on each sheet of paper in the specified order.

Printing on Postcards

This section describes the procedure for printing on postcards.

- 1. Load postcard on the printer
- 2. Select paper size in the Print Dialog

Select Postcard or Postcard Double from the Paper Size menu.

>>> Important

- Return postcards can be used only when you print them from the computer.
- When printing a return postcard, always set the paper size to Postcard Double from your application software or the printer driver.
- Do not fold the return postcard. If a crease is formed, the printer will not be able to feed the postcard properly, and this condition will cause line shifts or a paper jam.
- With return postcards, borderless printing cannot be used.

3. Select Quality & Media from Printer Options

4. Select the media type

For Media Type, select the same paper type loaded in the printer.

Important

- This printer cannot print on postcards that have photos or stickers attached.
- When printing on each side of a postcard separately, you will get cleaner printing if you print the message side first and then print the address side.
- The paper settings in the print dialog are different, depending on whether you are printing on the
 address side or the message side. For details about the paper information to be registered in the
 print dialog and on the printer, see the following:
 - Paper Settings on the Printer Driver and the Printer (Media Type)
 - Paper Settings on the Printer Driver and the Printer (Paper Size)

5. Click Print


The printer prints according to the specified settings.

>>>> Important

 If you check the **Do not show again** check box when a guide message is displayed before printing starts, this will stop any more guide messages from being displayed.

Changing the Clear Coating Settings

When you execute clear coating, the printer applies Chroma Optimizer (CO) ink onto the printing surface and allows you to adjust the glossiness.

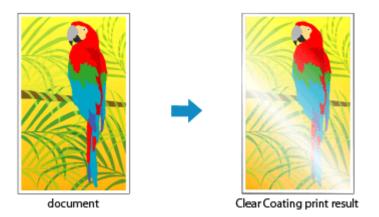

This section explains procedures for changing the clear coating settings.

1. Select Advanced Paper Settings from Printer Options in the Print Dialog

2. Set clear coating

Select the Clear Coating item that matches your purpose.

>>> Note

• The available menu items differ depending on the paper type and print quality.



Auto

The printer automatically sets the areas to be clear-coated and whether clear coating is to be executed.

Overall

The printer clear-coats the entire area, including the margins outside the image area. Clear-coating the entire area improves the overall glossiness, including the margins. This option uses the most Chroma Optimizer (CO) ink.

Printed Areas

Use this option when you want to improve the glossiness only in the image area. White areas (including margins) are not clear-coated.

None

Printing will proceed without clear coating.

Compared to if clear coating is applied, the image quality may deteriorate, or the printed surface may be damaged.

>>>> Note

• Select **None** if clear-coating is not required, such as when laminating after printing.

>>> Important

On the Quality & Media, look at Media Type. If a media type other than Photo Paper Pro
Premium Matte A, Photo Paper Pro Platinum, Photo Paper Pro Luster, Photo Paper Plus
Semi-gloss, Lightweight Photo Paper, Heavyweight Photo Paper, or Baryta Photo Paper is
selected, you can select Auto only.

3. Complete the setup

Click Print

When printing is executed, the clear coating effect that was set is added when the document is printed.

Setting Paper Dimensions (Custom Size)

You can specify the height and width of paper when its size cannot be selected from the **Paper Size** menu. Such a paper size is called "custom size."

The procedure for specifying a custom size is as follows:

1. Creating a new custom paper size

In the Print Dialog, select Manage Custom Sizes... from Paper Size.

In the displayed dialog, click +.

Untitled will be added to the list.

2. Setting details about the custom paper size

Double-click **Untitled**, enter the name of the paper size you want to register, and specify the **Width** and **Height** of the paper.

Select **User Defined** or your model for **Margins**.

3. Registering the custom paper size

Click OK.

The custom size is registered.

>>>> Important

If the application software that created the document has a function for specifying height and width
values, use the application software to set the values. If the application software does not have such a
function or if the document does not print correctly, perform the above procedure from the printer driver
to set the values.

>>> Note

- To duplicate the registered paper size, select the paper size that you want to duplicate from the Custom Paper Sizes list, and click Duplicate.
- To delete a registered paper size, select the paper size that you want to delete from the **Custom Paper Sizes** list, and click -.
- If the paper settings in the printer driver differ from the paper information registered on the printer, an
 error message may appear on the printer's operation panel. You can still print but you may not be able
 to obtain correct print results.

Perform Long-form Printing

This section describes the procedure for printing on long sheets of paper that exceed 990.6 mm.

1. Registering the custom paper size

From Paper Size, use Manage Custom Sizes... to register the paper size that you want to use.

2. Select the media type

In the Print dialog, select a registered custom paper size from the Paper Size list.

- 3. Select Quality & Media from Printer Options
- 4. Select the media type

In Media Type, select Photo Paper (Long-form Printing) or Fine Art Paper (Long-form Print).

5. Load long sheets of paper into the printer

Note

- When loading long sheets of paper, depending on the weight of the paper, the leading edge may lift up, causing printing to be misaligned. Hold the paper by hand by the part protruding from the tray to prevent the leading edge of the paper from lifting up.
- **6.** Complete the setup

Click Print.

When you execute print, the data is printed with the specified paper size.

Note


- When printing on long sheets of paper, hold the ejected paper by hand or use it in a place where the paper will not fall. If the paper falls, it may cause the print surface to get dirty or damaged. When holding the paper by hand, do not pull the paper forcefully during printing.
- When printing on long sheets of paper, if ink runs out during printing, printing will be interrupted, and the paper will be ejected. Before starting printing, make sure that there is enough ink remaining.

Setting the Stapling Margin



The procedure for setting the margin width and the staple side is as follows:

1. Select Page Processing from Printer Options in the Print Dialog

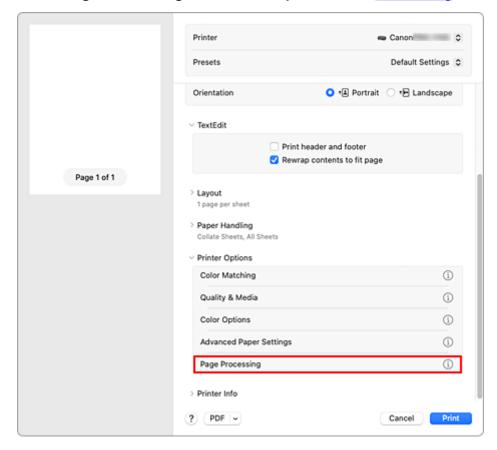

2. Set the margin width and the staple side

If necessary, set the Margin width, and select a stapling position from the Stapling Side list.

>>> Note

• The printer automatically reduces the print area depending on the staple position margin.

3. Click Print

When you perform print, the data is printed with the specified margin width and staple side.

>>> Important

• When borderless printing is enabled, **Margin** and **Stapling Side** appear grayed out and are unavailable.

Scaling the Printing to Fit the Paper Size




The procedure for printing a document that is automatically enlarged or reduced to fit the page size to be used is as follows:

1. Check the paper size

Check that the **Paper Size** in the <u>Print Dialog</u> is the same as the paper size that you set in the application software.

2. Select Paper Handling from the print dialog

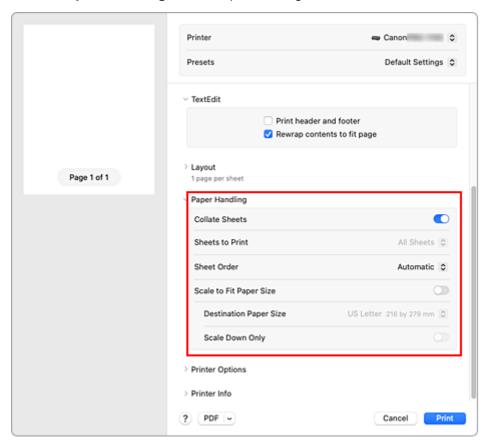

3. Set the print paper size

Turn on **Scale to Fit Paper Size**. Then in **Destination Paper Size**, select the paper size that is actually loaded in the printer.

4. If necessary, turn on Scale Down Only

If you turn on **Scale Down Only**, the document will be reduced to fit the paper size when the document size is larger than the page size. The document will be printed in the original size when the document size is smaller than the page size.

5. Click Print

When printing, the document will be enlarged or reduced to fit the page size.

Switching the Paper Source to Match the Purpose

In this printer, there are two paper sources, a manual feed tray and a top feed.

You can facilitate printing by selecting a paper source setting that matches your media type or purpose.

The procedure for setting paper source is as follows:

- 1. Select Quality & Media from Printer Options in the Print Dialog
- 2. Select the media type

For Media Type, select the same paper type loaded in the printer.

3. Select the paper source

For Paper Source, select the item below that matches your purpose.

Manual Feed

Paper is supplied from the manual feed tray in the back.

>>> Important

- When Plain Paper, Hagaki A, Ink Jet Hagaki, or Hagaki is selected from the Media Type menu of the Quality & Media, paper cannot be supplied from the manual feed tray in the back.
- When 4 x 6, 5 x 7, 7 x 10, A5, JIS B5, L, Postcard, Postcard Double, or Square 5"x5"
 13x13cm is selected for Paper Size on the Print Dialog, paper cannot be supplied from the manual feed tray in the back.

Top Feed

Paper is fed from the top feed.

>>> Important

- When Heavyweight Photo Paper, Baryta Photo Paper, Premium Fine Art Smooth,
 Premium Fine Art Rough, Photo Paper Pro Premium Matte A, Extra Heavyweight Fine
 Art Paper, or Highest Density Fine Art Paper is selected from the Media Type menu of the
 Quality & Media, paper cannot be supplied from the top feed.
- 4. Complete the setup

Click Print.

When you execute print, the printer uses the specified paper source to print the data.

>>>> Note

 If the paper settings in the print dialog differ from the paper information registered on the printer, an error may occur. For instructions on what to do if an error occurs, see "Register Paper Information."

For details about the paper information to be registered on the printer, see the following:

- Paper Settings on the Printer Driver and the Printer (Media Type)
- Paper Settings on the Printer Driver and the Printer (Paper Size)

Changing the Print Quality and Correcting Image Data

- Setting the Print Quality Level (Custom)
- Grayscale Printing
- Specifying Color Correction
 - Optimal Photo Printing of Image Data
 - Adjusting Colors with the Printer Driver
 - Printing with ICC Profiles (Specifying an ICC Profile from the Application Software)
 - Printing with ICC Profiles (Specifying an ICC Profile from the Printer Driver)
 - Interpreting the ICC Profile
- Adjusting Tone
- ➤ Adjusting Color Balance
- Adjusting Brightness
- ▶ Adjusting Contrast


Setting the Print Quality Level (Custom)

The print quality level can be set in the **Custom**.

The procedure for setting the print quality level is as follows:

- 1. Select Quality & Media from Printer Options in the Print Dialog
- 2. Select the print quality

Select Custom for Print Quality.

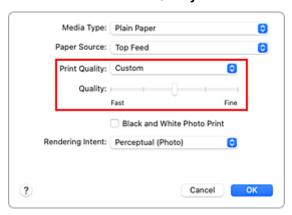

3. Setting the print quality level

Move the Quality slider to select the print quality level.

>>> Important

- Certain print quality levels cannot be selected depending on the settings of media type.
- **4.** Complete the setup


Click Print.

When you execute print, the image data is printed with the selected print quality level.

Related Topics

- → Specifying Color Correction
- Adjusting Color Balance
- Adjusting Brightness
- Adjusting Contrast

Grayscale Printing

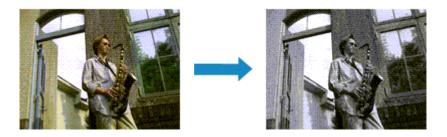

This section describes the procedure for printing a color document or monochrome photo in grayscale.

To print in grayscale, you can either use color ink for subtle color adjustments, or use only black or gray ink to print monochrome photos the way you want them.


When printing in grayscale using only black or gray ink, you cannot adjust grayscale color tones.

- Grayscale Printing Using Color Ink
- · Grayscale Printing Using Only Black and Gray Ink

Grayscale Printing Using Color Ink

- 1. Select Quality & Media from Printer Options in the Print Dialog
- 2. Set black and white photo printing

Check the Black and White Photo Print check box.

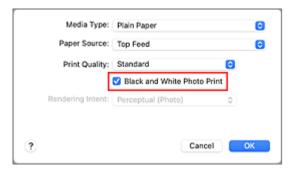

3. Complete the setup

Click Print.

When you execute print, the document is converted to grayscale data. It allows you to print the color document in monochrome.

Grayscale Printing Using Only Black and Gray Ink

To print in grayscale using only black and gray ink, you need to add **Photo Paper (Grayscale Printing)** or **Fine Art Paper (Grayscale Print)** as a new paper type using the Media Configuration Tool in advance, and <u>update the printer driver's media information</u> by selecting Media Information from the <u>Canon IJ Printer Utility2</u>.

1. Select Quality & Media from Printer Options in the Print Dialog

2. Select the media type

In Media Type, select Photo Paper (Grayscale Printing) or Fine Art Paper (Grayscale Print).

3. Complete the setup

Click Print.

When you execute print, the document is converted to grayscale data. It allows you to print the color document in monochrome.

Related Topic

→ Adjusting Tone

Specifying Color Correction


You can specify the color correction method suited to the type of document to be printed.

Normally, when data is printed, the printer driver automatically adjusts the colors.

When you want to print by using the color space of the image data effectively or by specifying a printing ICC profile from your application software, select **ColorSync**. When you want to print by having the printer driver correct the colors, select **Canon Color Matching**.

The procedure for specifying color correction is as follows:

1. Select Color Matching from Printer Options in the Print Dialog

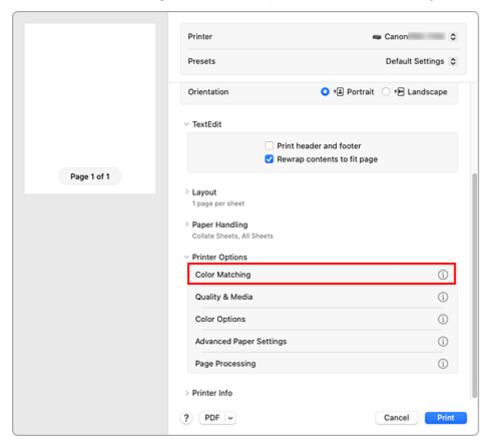

2. Select color correction

Select the item below that matches your purpose.

ColorSync

Perform color correction using ColorSync.

Canon Color Matching

The driver will perform necessary adjustments during printing.

For information about driver matching, see "Adjusting Colors with the Printer Driver."

Important

 If you think that the colors displayed on the monitor are different from the printed results, go to Quality & Media, and then select No Color Correction in Rendering Intent.

3. Complete the setup

Click Print.

When you execute print, the document data is printed with the specified color correction.

>>>> Important

- Depending on the application software, when a printing ICC profile is specified from that application software, **Canon Color Matching** cannot be selected because **ColorSync** is selected automatically.
- The Quality & Media setting is necessary even when ColorSync or Canon Color Matching is selected.

Related Topics

- → Optimal Photo Printing of Image Data
- Adjusting Colors with the Printer Driver
- → Printing with ICC Profiles (Specifying an ICC Profile from the Application Software)
- ➡ Printing with ICC Profiles (Specifying an ICC Profile from the Printer Driver)
- ➡ Interpreting the ICC Profile

Optimal Photo Printing of Image Data

When people print images taken with digital cameras, they sometimes feel that the printed color tones differ from those of actual image or those displayed on the monitor.

To get the print results as close as possible to the desired color tones, you must select a printing method that is best suited to the application software used or to your purpose.

Color Management

Devices such as digital cameras, scanners, monitors, and printers handle color differently. Color management (color matching) is a method that manages device-dependent "colors" as a common color space.

For macOS, a color management system called "ColorSync" is built into the operating system. sRGB is one of the common color spaces that is frequently used.

ICC profiles convert device-dependent "colors" into a common color space. By using an ICC profile and carrying out color management, you can draw out the color space of the image data within the color reproduction area that the printer can express.

Note

Normally, image files are saved in JPEG format. Some digital cameras allow you to save images in a
format called RAW. RAW data refers to an image saving format that requires a computer to develop
the image. You can embed an input ICC profile tag into a RAW file by using special application
software.

Selecting a Printing Method Suited to the Image Data

The recommended printing method depends on the color space of the image data or the application software to be used.

There are two typical printing methods.

Check the color space of the image data and the application software to be used, and then select the printing method suited to your purpose.

Adjusting Colors with the Printer Driver

Describes the procedure for printing by using the color correction function of the printer driver. Select this function when you want to print impressions that are close to those displayed on the monitor, for example, if you corrected the colors while checking the print image on the monitor.

Printing with ICC Profiles (Specifying an ICC Profile from the Application Software)

Describes the procedure for printing by using the color space of the image data effectively.

You can print with a common color space by setting up the application software and the printer driver so that the color management matches the input ICC profile of the image data.

The method for setting up the printer driver differs depending on the application software to be used.

Related Topic

➡ Interpreting the ICC Profile

Adjusting Colors with the Printer Driver

To use printer driver matching when printing, turn on the printer driver's color correction function. Printer driver matching accurately applies the characteristics of data displayed on the monitor and allows you to obtain print results of impressions that are close to those displayed on the monitor.

>>> Important

- When printing using printer driver matching, Canon recommends that you set the monitor and the environment light as follows:
 - Monitor

Color temperature: D50 (5000K) Brightness: 100 to 120cd/m2

Gamma: 2.2 Environment light

Fluorescent light for D50 color evaluation (color temperature 5000K, high color rendering

properties)

Brightness when looking at printed materials: 500 lx ± 125 lx

Note

• When printing from an application software that allows you to identify and specify ICC profiles, use an ICC profile for printing with that application software and select setting items that manage colors.

The procedure for adjusting colors with the printer driver is as follows:

- 1. Select Color Matching from Printer Options in the Print Dialog
- 2. Select color correction

Select Canon Color Matching.

- 3. Select Quality & Media from Printer Options
- 4. Select the rendering intent

Select Perceptual (Photo) in Rendering Intent.

5. Set the other items

From **Printer Options**, select **Color Options**. If necessary, adjust the color balance (**Cyan**, **Magenta**, **Yellow**) and adjust **Brightness**, and **Contrast** settings.

6. Complete the setup

Click Print.

When you execute print, the printer driver adjusts the colors when printing the data.

Related Topics

- **➡** Setting the Print Quality Level (Custom)
- ➡ Specifying Color Correction
- → Adjusting Color Balance
- → Adjusting Brightness
- → Adjusting Contrast

Printing with ICC Profiles (Specifying an ICC Profile from the Application Software)


When you print from Adobe Photoshop, Canon Digital Photo Professional, or any application software that can identify input ICC profiles and allows you to specify such profiles, printer uses the color management system (ColorSync) built-into macOS when printing. The printer prints the editing and touch-up results of the application software and effectively uses the color space of the input ICC profile specified in the image data.

To use this printing method, use your application software to select color management items and specify an input ICC profile and a printing ICC profile in the image data.

Even if you print using a printing ICC profile that you created yourself or one for special Canon paper, be sure to select color management items from your application software.

For instructions, refer to the manual of the application software you are using.

1. Select Color Matching from Printer Options in the Print Dialog

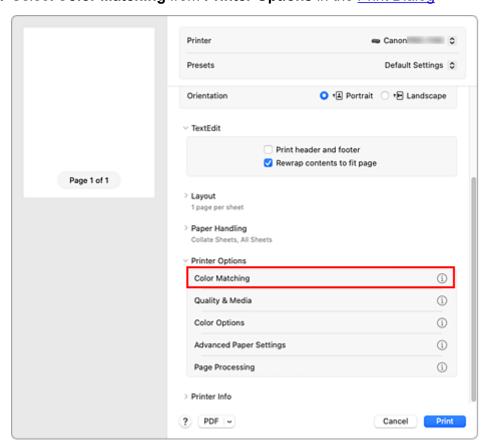

2. Select color correction

Select ColorSync.

You can leave Profile set to Automatic.

>>> Important

- Depending on the application software you use, you may not be able to select setting items other than ColorSync.
- If you choose a **Profile** setting other than **Automatic** or "Printing Paper ICC Profile", the printer will not be able to print with the correct colors.

• If you think that the colors displayed on the monitor are different from the printed results, go to **Quality & Media**, and then select **No Color Correction** in **Rendering Intent**.

3. Complete the setup

Click Print.

When you execute print, the printer uses the color space of the image data.


Related Topics

- → Setting the Print Quality Level (Custom)
- → Specifying Color Correction
- → Adjusting Color Balance
- → Adjusting Brightness
- Adjusting Contrast

Printing with ICC Profiles (Specifying an ICC Profile from the Printer Driver)

Print from an application software that cannot identify or specify input ICC profiles by using the color space of the input ICC profile (sRGB) found in the data.

1. Select Color Matching from Printer Options in the Print Dialog

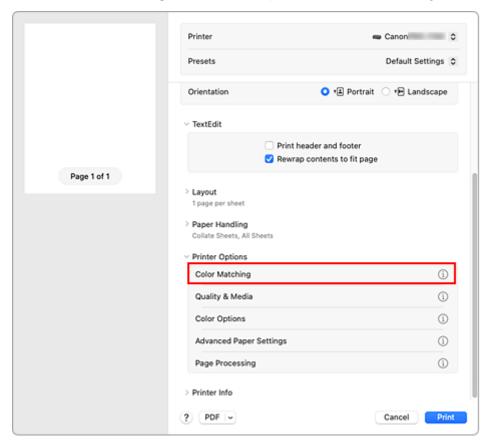

2. Select color correction

Select ColorSync.

You can leave Profile set to Automatic.

Important

 If you choose a Profile setting other than Automatic or "Printing Paper ICC Profile", the printer will not be able to print with the correct colors.

3. Complete the setup

Click Print.

When you execute print, the printer uses the color space of the image data.

>>>> Important

· You cannot specify an input ICC profile from the printer driver.

Related Topics

- **➡** Setting the Print Quality Level (Custom)
- ➡ Specifying Color Correction
- → Adjusting Color Balance
- → Adjusting Brightness
- → Adjusting Contrast

Interpreting the ICC Profile

When specifying an ICC profile for this printer, specify an ICC profile according to the print output media.

The ICC profiles installed for this printer appear as follows.

Canon XXXXX Photo Paper Plus Glossy II (1) (2)

• (1): Printer model

• (2): Media type

This media name corresponds to the following media type:

Baryta Photo Paper: Baryta Photo Paper

Canvas -P: Canvas

Extra Heavyweight Fine Art Paper: Extra Heavyweight Fine Art Paper

Heavyweight Fine Art Paper: Heavyweight Fine Art Paper Heavyweight Photo Paper: Heavyweight Photo Paper

Highest Density Fine Art Paper: Highest Density Fine Art Paper

Japanese Paper Washi -P: Japanese Paper Washi Lightweight Photo Paper: Lightweight Photo Paper

Matte Photo Paper -P: Matte Photo Paper

Photo Paper Pro Luster: Photo Paper Pro Luster
Photo Paper Pro Platinum: Photo Paper Pro Platinum
PhotoPaper Plus Semi-gloss: Photo Paper Plus Semi-gloss
PhotoPaperPro CrystalGrade: Photo Paper Pro Crystal Grade

Photo Paper Pro Premium Matte A: Photo Paper Pro Premium Matte

Photo Paper Plus Glossy II A: Photo Paper Plus Glossy II

Premium Fine Art Rough: Premium Fine Art Rough
Premium Fine Art Smooth: Premium Fine Art Smooth

>>> Note

• For ICC profiles that display "-P" at the end of the media type, the print results are the same as when you set **Rendering Intent** to **Perceptual (Photo)**.

Adjusting Tone

When printing black and white photos, you can produce the cooling effects of cool colors and the warming effects of warm colors.







Cool Tone is selected

Black and White is selected Warm Tone is selected

Note

• If you select Photo Paper (Grayscale Printing) or Fine Art Paper (Grayscale Print) in Media Type under Quality & Media, you cannot adjust grayscale color tones.


The procedure for adjusting tone is as follows:

- 1. Select Quality & Media from Printer Options in the Print Dialog
- 2. Select the media type

For Media Type, select either Photo Paper Plus Glossy II A, Photo Paper Pro Platinum, Photo Paper Pro Luster, Photo Paper Plus Semi-gloss, Photo Paper Pro Crystal Grade, Lightweight Photo Paper, Heavyweight Photo Paper, Photo Paper (Long-form Printing), Baryta Photo Paper, Premium Fine Art Smooth, Premium Fine Art Rough, Photo Paper Pro Premium Matte A, Heavyweight Fine Art Paper, Extra Heavyweight Fine Art Paper, Highest Density Fine Art Paper, Fine Art Paper (Long-form Print), Canvas, or Japanese Paper Washi.


3. Set black and white photo printing

Check the Black and White Photo Print check box.

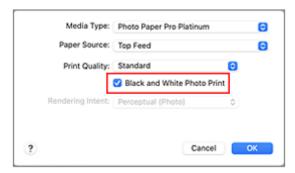

- 4. Select Color Options from Printer Options
- 5. Adjusting monochrome tones

Specify one of the following items from Tone. The selected value will be shown in the preview on the left side.

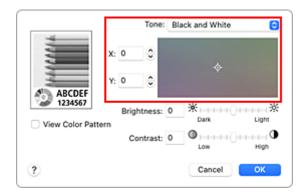

Cool Tone

This item adjusts color tones to cool shades (cool black). When you select **Cool Tone**, a value of -30 is entered for **X**, and a value of 0 for **Y**.

Black and White

This item adjusts color tones to neutral shades. When you select **Black and White**, a value of 0 is entered for **X**, and a value of 0 for **Y**.

Warm Tone

This item adjusts color tones to warm shades (warm black). When you select **Warm Tone**, a value of 30 is entered for **X**, and a value of 0 for **Y**.

Custom

You can adjust the color tones while checking the colors in the adjustment area.

To adjust the color tones, either enter values directly or click the up/down arrows. When you enter values, set values in the range of -100 to 100 for **X**, and -50 to 50 for **Y**.

You can also adjust the color tones by clicking or dragging the adjustment area with the mouse. If you select another color tone and then select **Custom** again, the values that were preset in **Custom** are restored.

>>>> Important

• Tone and X, Y (Monochromatic adjustment value) are displayed when Black and White Photo Print check box is selected for Quality & Media.

6. If necessary, adjust monochromatic colors manually

To adjust the color tones, either enter values directly to \mathbf{X} or \mathbf{Y} (Monochromatic adjustment value) or click the up/down arrows.

You can also adjust the color tones by clicking or dragging the adjustment area with the mouse.

7. Complete the setup

Click Print.

When you execute print, the color document is converted to grayscale data with adjusted tones. It allows you to print the color document in monochrome.

>>>> Important

• If you select **ColorSync** for **Color Matching**, then **Tone**, **X**, and **Y** appear grayed out and are unavailable.

Related Topics

- → Grayscale Printing
- → Adjusting Brightness
- → Adjusting Contrast

Adjusting Color Balance

You can adjust the color tints when printing.

Since this function adjusts color balance of the output by changing the ink ratios of each color, it changes the total color balance of the document. Use the application software when you want to change the color balance significantly. Use the printer driver only when you want to adjust the color balance slightly. The following sample shows the case when color balance is used to intensify cyan and to diminish yellow so that the overall colors are more uniform.





No adjustment Adjust color balance


The procedure for adjusting color balance is as follows:

1. Select Color Options from Printer Options in the Print Dialog

2. Adjust color balance

There are individual sliders for **Cyan**, **Magenta**, and **Yellow**. Each color becomes stronger when the corresponding slider is moved to the right, and becomes weaker when the corresponding slider is moved to the left. For example, when cyan becomes weaker, the color red becomes stronger.

You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50. The current settings are displayed in the settings preview on the left side of the printer driver.

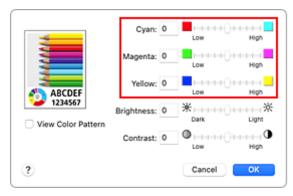

3. Complete the setup

Click Print.

When you execute print, the document is printed with the adjusted color balance.

Related Topics

- **➡** Setting the Print Quality Level (Custom)
- → Specifying Color Correction
- → Adjusting Brightness
- → Adjusting Contrast

Adjusting Brightness

You can brighten or darken the colors of the overall image data during printing.

The following sample shows the case when light colors are darkened when the image data is printed.



No adjustment

Darken light colors

The procedure for adjusting brightness is as follows:

1. Select Color Options from Printer Options in the Print Dialog

2. Adjust brightness

Moving the **Brightness** slider to the right brightens the colors, and moving the slider to the left darkens the colors.

You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50. The current settings are displayed in the settings preview on the left side of the printer driver.



3. Complete the setup

Click Print.

When you execute print, the data is printed at the adjusted brightness.

- → Setting the Print Quality Level (Custom)
- Specifying Color Correction
- → Adjusting Color Balance
- Adjusting Contrast

Adjusting Contrast

You can adjust the image contrast during printing.

To make the differences between the light and dark portions of images greater and more distinct, increase the contrast. On the other hand, to make the differences between the light and dark portions of images smaller and less distinct, reduce the contrast.





No adjustment

Adjust the contrast


The procedure for adjusting contrast is as follows:

1. Select Color Options from Printer Options in the Print Dialog

2. Adjust the contrast

Moving the **Contrast** slider to the right increases the contrast, and moving the slider to the left decreases the contrast.

You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50. The current settings are displayed in the settings preview on the left side of the printer driver.

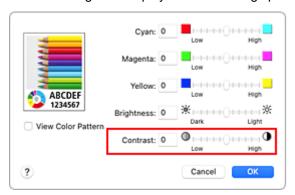

3. Complete the setup

Click Print.

When you execute print, the image is printed with the adjusted contrast.

- → Setting the Print Quality Level (Custom)
- Specifying Color Correction
- → Adjusting Color Balance
- Adjusting Brightness

Printing Using AirPrint

You can print photographs, E-mails, web pages, and other documents using AirPrint, even if the printer driver is not installed or the application is not downloaded.

Important

• There are <u>restrictions</u> for printing with AirPrint. Please be aware in advance. If you want to use all the functions of the printer, use the Canon IJ printer driver.

Checking Your Environment

First, check your environment.

- AirPrint Operation Environment
 Mac running the latest version of OS
- Requirement

The Mac and the printer must be connected by one of the following methods:

- Connected to the same network over a LAN
- Connected directly without wireless router (Direct Connection)
- · Connected by USB

Add The Printer as AirPrint Printer on Your Mac

- 1. Open System Settings -> Printers & Scanners
- 2. Click Add Printer, Scanner or Fax...
- 3. Select your printer listed as Bonjour
- 4. Select your printer from Use
- 5. Click Add

The Printer will be added as AirPrint Printer on Your Mac

Print with AirPrint from a Mac

1. Check that printer is turned on

>>> Note

- If Auto power on is enabled, printer automatically turns itself on when receiving a print job.
- 2. Load paper in printer
- 3. Select paper size and paper type from printer

Register the set paper size and paper type on the printer operation panel.

For instructions, see "Register Paper Information."

4. Start printing from your application software

The Print dialog opens.

5. Select printer

Select your model from the **Printer** list in the Print dialog.

6. Check print settings

Set paper size and other items as needed.

Set paper type from the printer.

>>>> Important

- To feed paper from the manual feed tray, select Multi-purpose Tray from Feed From.
- An error may occur if the paper size set in the print dialog is different from the paper size set
 on the printer. Select the correct items on the print dialog and the printer that correspond to the
 paper being printed.

>>> Note

- Use the Print dialog to set general print settings such as the layout and the print sequence. For information about print settings, refer to macOS help.
- You can set Print quality settings (Color mode and Clear coating), Paper settings
 (Unidirectional printing), and Magnification level for borderless on the operation panel of
 the printer. For details, see "Print settings."

7. Click Print

The printer prints according to the specified settings.

>>> Note

- It can take the Wi-Fi a few minutes to get connected after the printer turns on. Print after checking that the printer is connected to the network.
- You cannot use AirPrint if Bonjour settings of printer are disabled. Check LAN settings of printer and enable Bonjour settings.
- Refer to "Cannot Print Using AirPrint" for printing problems when using AirPrint.
- The display of the settings screen may differ depending on the application software you are using.

Deleting Print Job

Use **Stop** button from printer to cancel the print job.

Restrictions on the AirPrint

• Some paper sizes that are compatible with the Canon IJ printer driver are not compatible with AirPrint. If using these sizes, set a "custom size."

macOS Printer Driver

- Overview of the Printer Driver
- ➤ Description of Print Dialog
- ➤ Updating the Printer Driver

Overview of the Printer Driver

- Canon IJ Printer Driver
- ➤ How to Open the Printer Driver Setup Dialog
- ▶ Page Setup Dialog
- ➤ Print Dialog
- ➤ Canon IJ Printer Utility2
 - Opening the Canon IJ Printer Utility2
- Displaying the Printing Status Screen
- ➤ Instructions for Use (Printer Driver)
- Deleting the Undesired Print Job

Canon IJ Printer Driver

The Canon IJ printer driver (called printer driver below) is a software that is installed on your computer for printing data with this printer.

The printer driver converts the print data created by your application software into data that your printer can understand, and sends the converted data to the printer.

Because different models support different print data formats, you need a printer driver for the specific model you are using.

Using Help of the Printer Driver

You can display Help function from the Print Dialog.

Select a setup item from **Printer Options** in the Print dialog. Then click help ? at the bottom left of the screen to display an explanation of the item.

Help for the printer driver is displayed when the following item in **Printer Options** is selected:

- · Quality & Media
- Color Options
- Advanced Paper Settings
- Page Processing

How to Open the Printer Driver Setup Dialog

You can display the printer driver setup dialog from the application software you are using.

Opening the Page Setup Dialog

Use this procedure to set the page (paper) settings before printing.

Select Page Setup... from the File menu of the application software
 The Page Setup Dialog opens.

Opening the Print Dialog

Use this procedure to set the print settings before printing.

Select Print... from the File menu of the application software
 The Print Dialog opens.

>>> Important


 Depending on the macOS version or the application you are using, the print dialog screen display may differ.

Also, some features may be restricted.

Page Setup Dialog

In the Page Setup dialog, you configure the basic print settings such as the size of paper loaded in the printer or the scaling ratio.

To open the Page Setup dialog, you typically select **Page Setup...** from the **File** menu of your application software.

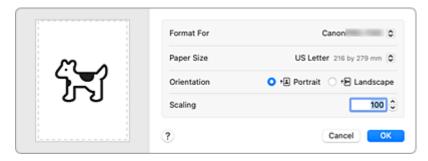

Format For

Select the model to be used for printing.

Paper Size

Select the size of the paper to be used for printing.

To set a non-standard size, select Manage Custom Sizes....

Orientation

Select the print orientation.

Scaling


Set the scaling percentage.

You can expand or reduce the size of the document when printing.

Print Dialog

In the Print dialog, you can set paper type, paper source and print quality to start printing.

To open the Print dialog, you typically select Print... from the File menu of your application software.

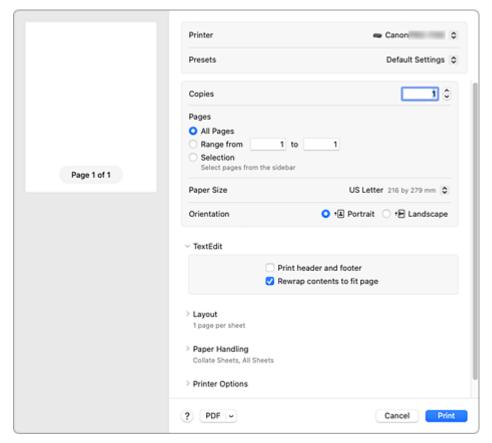

Printer

Select the model to be used for printing.

When you click **Add Printer...**, a dialog for specifying the printer opens.

Presets

You can save or delete the settings of the Print dialog.

Copies

You can set the number of copies to be printed.

>>> Note

· You can set collated printing by choosing Paper Handling.

Pages

You can set the range of pages to be printed.

Paper Size

Select the size of the paper to be used for printing.

To set a non-standard size, select Manage Custom Sizes....

Orientation

Select the print orientation.

Printer Options

You can switch between pages in the Print dialog by **Printer Options**. The first menu to appear differs depending on the application software that opened the Print dialog.

You can choose one of the following items from Printer Options.

Color Matching

You can select the color correction method.

Quality & Media

You can set basic print settings that match the printer.

Color Options

You can adjust the print colors as you desire.

Advanced Paper Settings

Specifies detailed print settings that match the media type loaded in the printer.

Page Processing

Adjusts how much of the document extends outside the paper when full-page borderless printing is used, and specifies the stapling side and stapling margin when multiple sheets of paper are being stapled together.

Printer Info

Supply Levels

A rough indication of the remaining ink level is displayed.

PDF

You can save a document in PDF (Portable Document Format) format.

By starting up Canon imagePROGRAF Free Layout, it is possible to allocate multiple source documents, and display the print results in imagePROGRAF Preview.

Canon IJ Printer Utility2

The Canon IJ Printer Utility2 allows you to perform printer maintenance or change the settings of the printer.

What You Can Do with the Canon IJ Printer Utility2



You can switch between pages in Canon IJ Printer Utility2 by the pop-up menu. You can choose one of the following items from the pop-up menu.

Media Information

Gets the latest media information from the printer and updates the media information in the printer driver.

Custom Settings

Change the settings of this printer.

Note

- To operate the Canon IJ Printer Utility2, you must first turn on the printer.
- Depending on the items selected, the computer communicates with the printer to obtain information. If the computer is unable to communicate with the printer, an error message may be displayed. If this happens, click **Cancel** to display the most recent settings specified on your computer.

Opening the Canon IJ Printer Utility2

To open the Canon IJ Printer Utility2, follow the steps below.

- 1. Open System Settings, and select Printers & Scanners
- 2. Start the Canon IJ Printer Utility2

Select your model from the printer list, and click **Options & Supplies...**.

Click Open Printer Utility in Utility tab.

Canon IJ Printer Utility2 is launched.

Displaying the Printing Status Screen

Check the print progress according to the following procedure:

1. Launch the printing status screen

- If the print data has been sent to the printer
 The printing status screen opens automatically. To display the printing status screen, click the printer icon displayed on the Dock.
- If the print data has not been sent to the printer
 Open System Settings, and select Printers & Scanners.
 To display the printing status screen, select your printer model from the printer list, and then click
 Printer Queue....

2. Check the printing status

You can check the name of the file being printed or ready for being printed.

- Deletes the specified print job.
- Stops printing the specified document.
- Resumes printing the specified document.
- Stops printing all documents.
- Displayed only when printing of all documents is being stopped, and resumes printing all documents.

>>>> Important

- · If an error occurs, an error message will appear on the printing progress confirmation screen.
- The content of the error message may differ depending on the OS version.
- · The printer part names in the error message may differ from what is listed in this manual.
- If the content of the error message is difficult to understand, check the error message displayed on the printer operation panel.

Instructions for Use (Printer Driver)

This printer driver is subject to the following restrictions. Keep the following points in mind when using the printer driver.

Restrictions on the Printer Driver

- When you set up the Page Setup dialog, be sure to begin by selecting the model you are using from the **Format For** list. If you select another printer, printing may not be performed properly.
- The following functions cannot be used in macOS, though they can be used in Windows computers.
 - Duplex Printing
 - Booklet Printing
 - Poster Printing
 - Stamp Printing
- Depending on the macOS version or the application you are using, the print dialog screen display may differ.
 - Also, some features may be restricted.
- If you connect this printer and AirPort with a USB cable and print, you must install the latest AirPort firmware.

Notes on Adding a Printer

 Install the Canon printer driver on a macOS, select your model from the Add Printer dialog, and then select Canon XXX (where "XXX" is your model name) from Use → Select Software....

Deleting the Undesired Print Job

If the printer does not start printing, canceled or failed print job data may be remaining. Delete unnecessary print jobs from the print status check screen.

- 1. Open System Settings, and select Printers & Scanners
- 2. Select your model, and then click Printer Queue...

The print status check screen appears.

3. Select the unnecessary print job and click \otimes (Delete)


The selected print jobs will be deleted.

Description of Print Dialog

- Quality & Media
- ➤ Color Options
- Advanced Paper Settings
- ➤ Page Processing

Quality & Media

This dialog allows you to create a basic print setup in accordance with the paper type. Unless special printing is required, normal printing can be performed just by setting the items in this dialog.

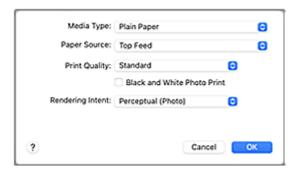

Media Type

Select the type of media to be used.

You must select the type of media actually loaded in the printer. This selection enables the printer to carry out printing properly for the material of the media used.

>>> Note

 After updating media information of the printer, start up the Canon IJ Printer Utility2 and update media information.

Paper Source

Select the source from which paper is supplied.

Manual Feed

Paper is supplied from the manual feed tray in the back.

Top Feed

Paper is fed from the top feed.

Print Quality

Select the one that is closest to the original document type and the purpose.

When one of the radio buttons is selected, the appropriate quality will be set automatically.

Highest

Quality will be prioritized during printing.

Standard

Prints with average speed and quality.

Fast

Gives priority to printing speed over print quality.

Custom

Select this radio button to specify a quality.

Quality

When you select **Custom** in **Print Quality**, you can use the slider bar to adjust the print quality level.

Black and White Photo Print

Set black and white photo printing. Black and white photo printing refers to the function of converting your document to grayscale data in the printer to print it in monochrome.

When you check the check box, both monochrome and color documents will be printed in monochrome. When printing a color document, be sure to uncheck the check box.

Rendering Intent

Specify the method of matching to use when selecting Canon Color Matching in Color Matching.

Perceptual (Photo)

Reproduces colors of general photos naturally and features smooth gradation. In addition, selecting this setting allows you to adjust colors easily using an application software.

No Color Correction

Performs printing without color matching.

Note


- When printing on a double postcard, select Postcard Double for Paper Size, and then print again.
- If you print on paper other than hagaki, load the paper according to usage instructions, and then click **OK**.

- ➡ Switching the Paper Source to Match the Purpose
- Setting the Print Quality Level (Custom)
- → Grayscale Printing
- ➡ Adjusting Colors with the Printer Driver

Color Options

This dialog allows you to adjust the print color as you like. If the color of the printed image is not as expected, adjust the properties in the dialog and retry printing.

The adjustments made here do not affect the colors of the original print data unlike applications dedicated to image processing. Use this dialog just to make fine adjustments.

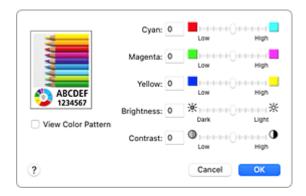

Preview

Shows the effect of color adjustment.

As you adjust each item, the effects are reflected in the color and brightness.

View Color Pattern

Displays a pattern for checking color changes produced by color adjustment.

When you want to display the sample image with a color pattern, check this check box.



 When the Black and White Photo Print check box is checked in the Quality & Media, the sample graphic is displayed in monochrome.

Color balance (Cyan, Magenta, Yellow)

If necessary, adjust the strength of each color. To strengthen a color, drag the slider to the right. To weaken a color, drag the slider to the left.

You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50.

Adjusting the color balance will result in variations in the balance among the volumes of the individual color inks and hence in the hues of the document as a whole.

Use the printer driver only when adjusting the color balance slightly. To change the color balance significantly, use the application software.

Tone

Sets the color adjustment for monochrome printing.

You can select Cool Tone, Black and White, Warm Tone or Custom.

You can also enter **X** and **Y** values while checking the color tone, click the adjustment area with the mouse, or adjust the tone by dragging the slider.

Cool Tone

This item adjusts color tones to cool shades of gray (cool black). When you select **Cool Tone**, a value of -30 is entered for **X**, and a value of 0 for **Y**.

Black and White

This item adjusts color tones to neutral shades of gray. When you select **Black and White**, a value of 0 is entered for **X**, and a value of 0 for **Y**.

Warm Tone

This item adjusts color tones to warm shades of gray (warm black). When you select **Warm Tone**, a value of 30 is entered for **X**, and a value of 0 for **Y**.

Custom

You can adjust the color tones while checking the colors in the adjustment area. To adjust the color tones, either enter values directly or click the up/down arrows. You can also adjust the color tones by clicking or dragging the adjustment area with the mouse. If you select another color tone and then select **Custom** again, the values that were preset in **Custom** are restored.

X, Y (Monochromatic adjustment value)

If necessary, you can adjust monochromatic colors manually. To adjust the color tones, either enter values directly or click the up/down arrows. You can also adjust the color tones by clicking or dragging the adjustment area with the mouse. When you enter values, set values in the range of -100 to 100 for **X**, and -50 to 50 for **Y**. The selected value will be shown in the preview on the left side.

>>> Important

- Tone and X, Y (Monochromatic adjustment value) are displayed when Black and White Photo Print check box is selected for Quality & Media.
- When selecting Plain Paper, Matte Photo Paper, Hagaki A, Ink Jet Hagaki, or Hagaki as the Media Type under Quality & Media, the Tone, X, and Y options will be grayed out and you will be unable to use these settings.

Brightness

Adjusts the brightness of your print. You cannot change the levels of pure white and black. However, the brightness of the colors between white and black can be changed. Colors become brighter as you drag the slider toward the right and darker as you drag the slider toward the left. You can also directly enter brightness values that are linked to the slider bar. Enter a value in the range from -50 to 50.

Contrast

The Contrast function changes the differences between light and dark in images during printing. To make the differences between the light and dark portions of images greater and more distinct, increase the contrast. On the other hand, to make the differences between the light and dark portions of images smaller and less distinct, reduce the contrast.


You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50.

- Specifying Color Correction
- → Adjusting Tone
- Adjusting Color Balance
- Adjusting Brightness
- Adjusting Contrast

Advanced Paper Settings

Use this dialog box to set detailed print settings that match the media type loaded on the printer.

If the paper becomes stained during printing or if the quality of the print results is less than expected, using these settings may improve the print results.

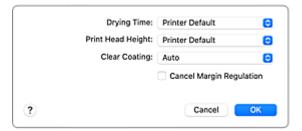

Drying Time

Allows you to set how long the printer rests before printing of the next page starts.

If the next page is ejected before the print surface dries completely and the paper becomes stained, set a longer ink drying wait time.

Print Head Height

Allows you to widen the gap between the print head and the paper to reduce paper abrasion when printing high density pages. To reduce paper abrasion, select **Avoid Paper Abrasion**.

Clear Coating

Specify Clear Coating settings.

Note

• The available menu items differ depending on the paper type and print quality.

Auto

The printer automatically sets the areas to be clear-coated and whether clear coating is to be performed.

Overall

The printer clear-coats the entire area, including the margins outside the image area.

Clear-coating the entire area improves the overall glossiness, including the margins.

This option uses the most Chroma Optimizer (CO) ink.

Printed Areas

Use this option when you want to improve the glossiness only in the image area.

White areas (including margins) are not clear-coated.

None

Printing will proceed without clear coating.

Compared to if clear coating is applied, the image quality may deteriorate, or the printed surface may be damaged.

Note

 Chroma Optimizer (CO) ink is used during automatic maintenance to maintain printer performance.

Cancel Margin Regulation

Cancels the safety margin regulation when you set **Media Type** to **Matte Photo Paper**, **Premium Fine Art Smooth**, **Premium Fine Art Rough**, or **Photo Paper Pro Premium Matte A** from the **Quality & Media** menu displayed from **Printer Options** of the print dialog.

When you check this item, the safety margin regulation is canceled, printing in a wider print area and borderless full-page printing become possible, and printing can be performed for all paper sizes. When the safety margin regulation is canceled, the paper may become smudged or the print quality may drop depending on the paper size used and the environment.


If that happens, we recommend that you print on a paper size that has large margins.

Related Topic

Changing the Clear Coating Settings

Page Processing

Use this dialog to adjust how much of the document extends outside the paper when full-page borderless printing is used and to specify the stapling side and stapling margin when multiple sheets of paper are being stapled together.

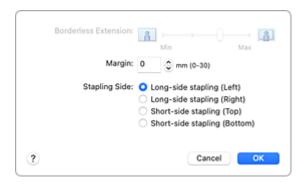

Borderless Extension

Adjusts how much of the document extends outside the paper by using the **Borderless Extension** slider bar.

Drag to slider bar to the right to increase the extension amount, and to the left to decrease the extension amount.

Margin

Sets the margin width for stapling multiple sheets of paper together. Values from 0 mm to 30 mm (0 in. to 1.2 in.) can be entered.

Stapling Side

Sets the side of the paper to be stapled.

Long-side stapling (Left) / Long-side stapling (Right)

Select this when stapling the long side of the paper.

Select either left or right.

Short-side stapling (Top) / Short-side stapling (Bottom)

Select this when stapling the short side of the paper.

Select either top or bottom.

- Perform Borderless Printing
- Setting the Stapling Margin

Updating the Printer Driver

- ➤ Installing the Printer Driver
- ➤ Obtaining the Latest Printer Driver
- ➤ Delete the Unnecessary Canon IJ Printer from the Printer List
- ➤ Before Installing the Printer Driver

Installing the Printer Driver

You can access our web site through the Internet and download the latest printer driver for your model.

The procedure for installing the downloaded printer driver is as follows:

1. Mount the disk

Double-click the disk image file you have downloaded.

The file is unpacked, and then the disk is mounted.

2. Start the installer

Double-click "PrinterDriver_XXX_YYY.pkg" (where "XXX" is your model name, and "YYY" is version) contained in the disk.

3. Start the installation

Install the printer driver according to the messages on the screen.

When the Software License Agreement is displayed, check the contents, and click **Continue**. If you do not agree to the terms of the Software License Agreement, you cannot install this software.

4. Selecting the install destination

If necessary, select where you want to install the printer driver, and then click **Continue**.

5. Executing the installation

Click Install.

When the authentication screen is displayed, enter the name and password of the administrator, and then click **Install Software**.

6. Complete the installation

When the completion message appears, click Close.

The printer driver is installed successfully.

>>> Important

- If the Installer does not operate properly, select **Quit Installer** from the **Installer** menu of the Finder to quit the Installer. Then start the Installer again.
- You can download the printer driver for free, but you are responsible for paying any connection fees to the Internet.

- → Obtaining the Latest Printer Driver
- Delete the Unnecessary Canon IJ Printer from the Printer List
- → Before Installing the Printer Driver

Obtaining the Latest Printer Driver

By updating the printer driver to the latest version of the printer driver, unresolved problems may be solved.

You can access our website and download the latest printer driver for your model.

>>>> Important

• You can download the printer driver for free, but any Internet access charges incurred are your responsibility.

- ➡ Before Installing the Printer Driver
- ➡ Installing the Printer Driver

Delete the Unnecessary Canon IJ Printer from the Printer List

A Canon IJ Printer that you no longer use can be deleted from the printer list.

Before deleting the Canon IJ Printer, disconnect the cable that connects the printer to the computer.

The procedure to delete the unnecessary Canon IJ Printer from the printer list is as follows:

You cannot delete the Canon IJ Printer unless you are logged on as a user with administrative rights.

- 1. Open System Settings, and select Printers & Scanners
- 2. Delete the Canon IJ Printer from the printer list

From the printer list, select the Canon IJ Printer to be deleted, and then click **Remove Printer...**.

Click Remove Printer when the confirmation message appears.

Before Installing the Printer Driver

This section describes the items that you should check before installing the printer driver. You should also refer to this section if the printer driver cannot be installed.

Checking the Personal Computer Settings

- · Terminate all running applications.
- Log on as a user who has the administrator account. The installer will prompt you to enter the name and password of the administrative user. When multiple users are using macOS, log on with the account of the administrator who registered first.

>>> Important

• When you upgrade macOS, all printer drivers that were installed will be deleted. If you plan to continue using this printer, re-install the latest printer driver.

- Obtaining the Latest Printer Driver
- ➡ Installing the Printer Driver

Printing from Printer

➤ Printing Templates Such as Lined or Graph Paper

Printing Templates Such as Lined or Graph Paper

This section describes how to print a standard form.

- ➡ Printable Template Form
- Printing Templates


Printable Template Form

You can print a standard form such as pattern paper that can be used for an album mount or place mat, graph paper, staff paper, a checklist, or a schedule form.

Printing Templates

Print template form following the procedure below.

- 1. Select Template print on the HOME screen, then press the **OK** button.
- Use the ▲▼ buttons to select template you want to print and press the OK button.
 When a message appears, check it and press the OK.
- 3. Use the **b** buttons to select the form you want to print and press the **OK** button.
- **4.** If necessary, change the settings using the ▲▼ buttons and press the **OK** button.

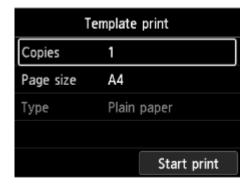

Copies

Use the ▲▼ buttons to specify the number of copies and press the **OK** button.

· Page size

Use the ▲▼ buttons to select the page size and press the **OK** button.

Note

• Depending on the form, some setting of page size cannot be specified. If it is selected, and **Error details** are displayed on the printer's LCD. In this case, select on the upper left on the printer's LCD to check the message and change the setting.

Type

Use the ▲▼ buttons to select the media type and press the **OK** button.

>>>> Note

- The paper type is set to **Plain paper**, except pattern paper.
- 5. Load paper.
 - ▶ Loading Paper in the Top Feed
- 6. Select Start print.

The printer starts printing.

Printing from Smartphone/Tablet

For more on printing from a device, refer to the device's or application's instruction manual.

- Print Easily from a Smartphone or Tablet with Canon PRINT
- Printing from iOS Device (AirPrint)
- About Mopria®
- Printing with Canon Print Service

Printing from iOS Device (AirPrint)

Use AirPrint to print photographs, E-mails, web pages, and other documents without having to download special applications.

Checking Your Environment

First, check your environment.

- AirPrint Operation Environment iPhone, iPad, and iPod touch running the latest version of iOS / iPadOS
- Requirement

The iOS device and the printer must be connected by one of the following methods:

- Connected to the same network over a LAN
- · Connected directly without wireless router (Direct Connection)

Printing with AirPrint from iOS Device

1. Check that printer is turned on

Note


- If Auto power on is enabled, printer automatically turns itself on when receiving a print job.
- 2. Load paper in printer
- 3. Tap operation icon using your iOS device's application

The following screen appears when printing from iOS 12's Safari. The screen differs depending on the devices or applications.



Menu options appear.

4. Tap Print

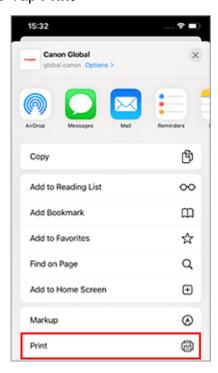

5. Select your model name from Printer on Printer Options

>>> Important

• Because some applications do not support AirPrint, **Printer Options** may not be displayed. If an application does not let you use printer options, you cannot print from that application.

6. Check Print Settings

Set the number of copies to be printed and print options, as needed.

Note

 You can set Print quality settings (Color mode and Clear coating), Paper settings (Unidirectional printing), and Magnification level for borderless on the operation panel of the printer. For details, see "Print settings."

7. Tap Print

The printer prints according to the specified settings.

Note

- It can take the Wi-Fi a few minutes to get connected after the printer turns on. Print after checking that the printer is connected to the network.
- You cannot use AirPrint if Bonjour settings of printer are disabled. Check LAN settings of printer and enable Bonjour settings.
- Refer to "Cannot Print Using AirPrint" for printing problems when using AirPrint.

Paper Size

With AirPrint, the paper size is selected automatically according to the application being used on the iOS device and the region in which AirPrint is used.

When you use the photo application, the default paper size is L size in Japan, and 4"x6" or KG in other countries and regions.

When you use the document application, the default paper size is letter size in the U.S. region, and A4 in Japan and Europe.

If the paper settings when printing differ from the paper information registered on the printer, the document will be printed using the paper settings configured on the printer.

Important

 Depending on the device or OS, the initial settings of paper size may differ from the above mentioned.


Test printing is recommended.

• Depending on the application you are using, the available paper size may differ.

Checking Print Status

You can check the print status of AirPrint from **Print Center**.

Tap **Print Center** that is displayed in multitasking mode on your iOS device.

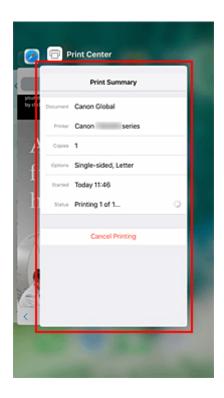

Deleting Print Job

To delete a print job with AirPrint, use one of the following two methods:

- From printer: Use **Stop** button to cancel the print job.
- From iOS device: Tap **Print Center** that is displayed in multitasking mode. In the screen that appears, tap on the print job to be deleted, and then tap **Cancel Printing**.

Handling Paper

Loading Paper

- Paper Sources to Load Paper
- Loading Paper in the Top Feed
- Loading Paper in the Manual Feed Tray
- Register Paper Information

➤ Information about Paper

- Media Types You Can Use
- Paper Load Limit
- Handling Paper
- Before Printing on Art Paper
- Managing Paper Information on Printer Using Media Configuration Tool

Loading Paper

- ➤ Paper Sources to Load Paper
- ➤ Loading Paper in the Top Feed
- ➤ Loading Paper in the Manual Feed Tray
- Register Paper Information


Paper Sources to Load Paper

The printer has two paper sources for feeding paper, the top feed (A) and manual feed tray (B).

>>>> Important

- The paper source used depends on the page size and media type.

 - → Paper Load Limit
- When printing, select the correct page size, media type, and paper source. If you select the wrong page size or media type, the printer may not print with the proper print quality.

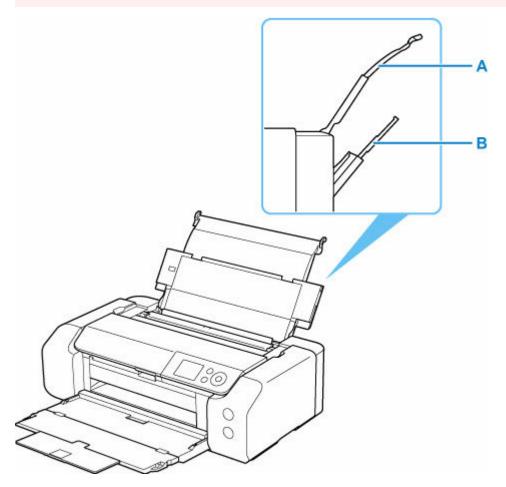

Top Feed

Load paper from 4" x 6" (10 x 15 cm) size to A3+ size.

Two or more sheets of the same size and type of paper can be loaded at the same time, and fed automatically one sheet at a time.

Load plain paper or postcard in the top feed.

Loading Paper in the Top Feed

Manual Feed Tray

Load paper from 8" x 10" (20 x 25 cm) size to A3+ size.

Load a sheet of paper at a time.

Load thick paper such as art paper in the manual feed tray.

★ Loading Paper in the Manual Feed Tray

Loading Paper in the Top Feed

You can load multiple sheets of paper of the same type and size in the top feed.

When printing on postcards, check the contents of "Precautions when printing on postcards" before loading postcards.

>>> Important

- For the paper types (Canon genuine paper), size, and weight/thickness that can be used with the printer, see Media Types You Can Use.
- If you cut plain paper to a size of 5" x 7" (13 x 18 cm) or smaller to perform trial print, it can cause paper jams.


Note

- We recommend Canon genuine photo paper for printing photos.
- You can use general copy paper or Canon Red Label Superior WOP111 / Canon Océ Office Colour Paper SAT213.
- Print in an environment (temperature and humidity) suitable to the paper in use. For the temperature
 and humidity conditions of Canon genuine papers, refer to the paper's packaging or the supplied
 instructions.

How to Load Paper

1. Prepare paper.

Align the edges of paper. If paper is curled, flatten it.

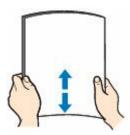


Note

- Align the edges of paper neatly before loading. Loading paper without aligning the edges may cause paper jams.
- If paper is curled, hold the curled corners and gently bend them in the opposite direction until the paper becomes completely flat.
 - For details on how to flatten curled paper, see "Correct curl before loading paper." in <u>Paper Is</u> Smudged/Printed Surface Is Scratched/Ink Blots/Paper Curl.
- When using **Photo Paper Plus Semi-gloss** SG-201, even if the sheet is curled, load one sheet at a time as it is. If you roll up this paper to flatten, this may cause cracks on the surface of the paper and reduce the print quality.


- 2. Open the paper support (A) of the top feed.
- **3.** Open the paper output tray (B) gently.

>>> Important

- If the multi-purpose tray guide (C) is open, be sure to close it.
- **4.** Open the output tray extension (D), then pull out the paper output support (E).

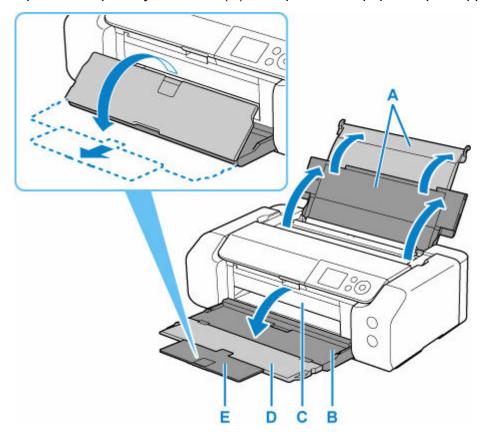


5. Open the feed slot cover (F).

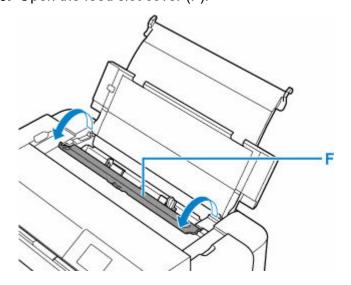

- **6.** Slide the paper guides (G) to open them, and load the paper in the center of the top feed WITH THE PRINT SIDE FACING YOU.
- **7.** Slide the paper guides (G) to align them with both sides of the paper stack.

Do not slide the paper guides too hard against the paper. The paper may not be fed properly.

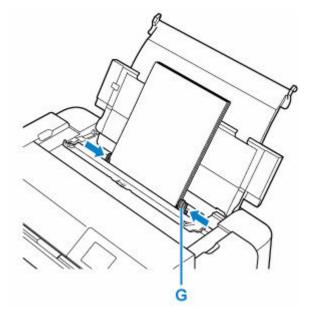


>>>> Important

• Always load paper (except return postcard) in the portrait orientation (H). Loading paper in the landscape orientation (I) can cause paper jams.



Note


• Do not load sheets of paper higher than the load limit mark (J).

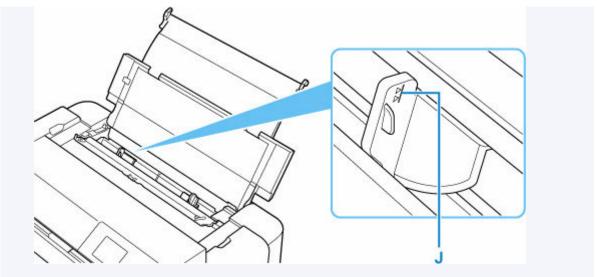


• For loading long-length paper, the leading edges of paper are lifted depending on the paper weight and printouts may be misaligned. Prevent the leading edges of paper from lifting by holding the parts protruding from the tray with your hand or other ways.

8. Close the feed slot cover gently.

The paper information registration screen for the top feed is displayed on the LCD.

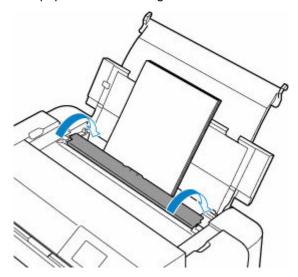

9. Select the size and type of paper loaded in the top feed at **Page size** and **Type**, select **Register**.

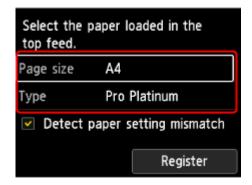

>>> Note

- There are various types of paper, such as paper with a special surface coating for printing photos
 at optimal quality and paper suitable for documents. Each media type has specific preset settings
 (how ink is used and sprayed, distance from nozzles, etc.), that allow you to print to that type with
 optimal image quality. The wrong paper settings may cause poor printout color quality or scratches
 on the printed surface. If you notice blurring or uneven colors, increase the print quality setting and try
 printing again.
- To prevent incorrect printing, this printer has a function that detects whether the settings for the paper loaded on the top feed matches the paper settings. Before printing, make print settings in accordance with the paper settings. When this function is enabled, an error message is displayed if these settings do not match to prevent incorrect printing. When this error message is displayed, check and correct the paper settings.
- For printing on long-length paper, hold ejected paper with your hand or use the printer at the location that paper does not fall. If paper falls, the printed surface may get dirty or be damaged. If you hold paper with your hand, do not pull it forcibly while printing.


Precautions when printing on postcards

>>> Important

- The address side cannot be printed from the operation panel.
- This printer cannot print on postcards affixed with photos or stickers.
- · Return postcards cannot be printed from the operation panel and do not support borderless printing.
- Do not fold the return postcard. If a crease is formed, the printer will not be able to feed the postcard properly, and this condition will cause line shifts or a paper jam.
- Depending on the type of postcard, the paper size may not be detected. In that case, set the printer not to detect the paper width.

Note

 When printing on postcards or return postcards, load them with the side you want to print facing up and the post code facing down.

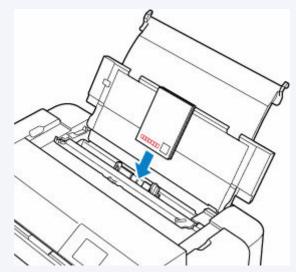

- ➡ Printing on Postcards (Windows)
- ➡ Printing on Postcards (macOS)
- When printing on each side of a postcard separately, you will get cleaner printing if you print the message side first and then print the address side.
- When holding the postcard, hold it by the edges as much as possible, and avoid touching the printed surface until the ink dries.
- We recommend Canon genuine photo paper for printing photos.

Loading Paper in the Manual Feed Tray

You can load one sheet of 8" x 10" (20 x 25 cm) size paper or larger in the manual feed tray at a time.

>>> Important

• For the paper types (Canon genuine paper), size, and weight/thickness that can be used with the printer, see Media Types You Can Use.

>>> Note

- · We recommend Canon genuine photo paper for printing photos.
- Print in an environment (temperature and humidity) suitable to the paper in use. For the temperature
 and humidity conditions of Canon genuine papers, refer to the paper's packaging or the supplied
 instructions.
- Plain paper and postcard cannot be fed from the manual feed tray. When printing on plain paper or postcard, load it in the top feed.
- **1.** Prepare paper.


If paper is curled, flatten it.

Note

- If paper is curled, hold the curled corners and gently bend them in the opposite direction until the paper becomes completely flat.
 - For details on how to flatten curled paper, see "Correct curl before loading paper." in <u>Paper Is</u> Smudged/Printed Surface Is Scratched/Ink Blots/Paper Curl.
- When using **Photo Paper Plus Semi-gloss** SG-201, even if the sheet is curled, load one sheet at a time as it is. If you roll up this paper to flatten, this may cause cracks on the surface of the paper and reduce the print quality.
- 2. Open the manual feed tray (A), then extend the paper support (B).
- 3. Open the paper output tray (C) gently.


>>> Important

- If the multi-purpose tray guide (D) is open, be sure to close it.
- **4.** Open the output tray extension (E), then pull out the paper output support (F).

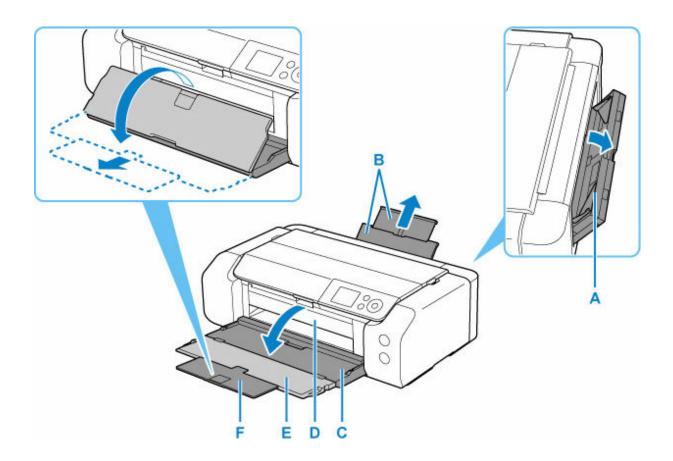


- **5.** Slide the paper guides (G) to open them, and load ONLY ONE SHEET OF PAPER in the center of the manual feed tray WITH THE PRINT SIDE FACING YOU.
- **6.** Slide the paper guides (G) to align them with both sides of the paper stack.

 Do not slide the paper guides too hard against the paper. The paper may not be fed properly.

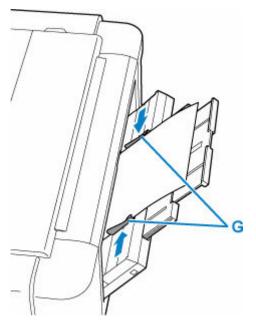


>>> Important

• Always load paper in the portrait orientation (H). Loading paper in the landscape orientation (I) can cause paper jams.

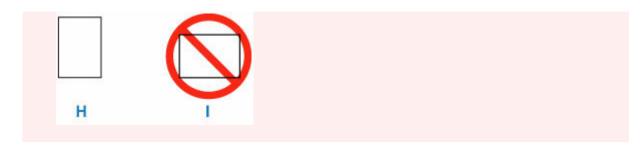

7. Check if the paper is set properly in the manual feed tray.

Make sure that the paper is set firmly against the bottom of the manual feed tray and against the paper guides by slightly jiggling the paper up and down.

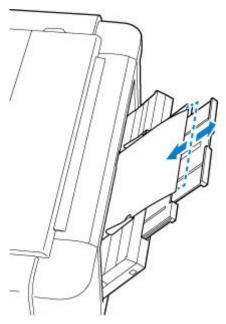

8. Select the size and type of paper loaded in the manual feed tray at **Page size** and **Type**, select **Register**.



>>> Note

- To continue printing from the manual feed tray, wait until printing is complete, then load the next sheet.
- There are various types of paper, such as paper with a special surface coating for printing photos at optimal quality and paper suitable for documents. Each media type has specific preset settings (how ink is used and sprayed, distance from nozzles, etc.), that allow you to print to that type with optimal image

- quality. The wrong paper settings may cause poor printout color quality or scratches on the printed surface. If you notice blurring or uneven colors, increase the print quality setting and try printing again.
- To prevent incorrect printing, this printer has a function that detects whether the settings for the paper loaded on the manual feed tray matches the paper settings. Before printing, make print settings in accordance with the paper settings. When this function is enabled, an error message is displayed if these settings do not match to prevent incorrect printing. When this error message is displayed, check and correct the paper settings.
- For loading long-length paper, the leading edges of paper are lifted depending on the paper weight and printouts may be misaligned. Prevent the leading edges of paper from lifting by holding the parts protruding from the tray with your hand or other ways.
 - When printing on long-length paper, hold ejected paper with your hand or use the printer at the location that paper does not fall. If paper falls, the printed surface may get dirty or be damaged. If you hold paper with your hand, do not pull it forcibly while printing.


Register Paper Information

By registering the paper size and the media type loaded in the top feed or the manual feed tray, you can prevent the printer from misprinting by displaying the message before printing starts when the paper size or the media type of the loaded paper differs from the paper settings.


>>> Note

- The default setting for displaying the message which prevents misprinting varies depending on the printing method.
 - ➡ Default Setting for Displaying the Message which Prevents Misprinting

When you load paper in the top feed and close the feed slot cover, or load paper in the manual feed tray:

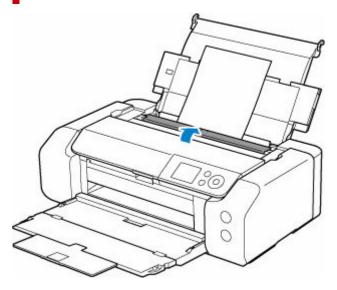

The screen to register the paper information is displayed.

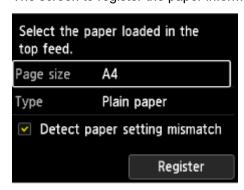

If the loaded paper matches the paper information displayed on the printer's LCD, select Register.

If it is different, select Page size or Type. Then register the correct paper information.

>>>> Important


- For the appropriate combination of the paper settings specified in the printer driver and the paper information registered in the printer, refer to the following.
 - ▶ Paper Settings on the Printer Driver and the Printer (Media Type) (Windows)

- → Paper Settings on the Printer Driver and the Printer (Media Type) (macOS)
- ▶ Paper Settings on the Printer Driver and the Printer (Paper Size) (Windows)
- → Paper Settings on the Printer Driver and the Printer (Paper Size) (macOS)

When the paper settings specified when printing differ from the paper information registered in the printer:

Ex:

- · Paper settings specified on the printer driver when printing: A5
- · Paper information for the top feed registered in the printer: A4

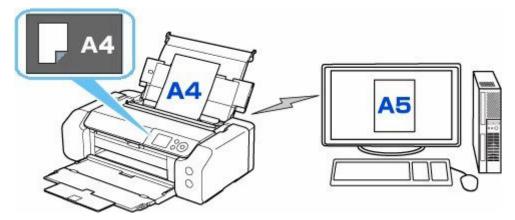

When you start printing, a message is displayed. Resolve the error according to the instruction on the screen.

⇒ 2114

Default Setting for Displaying the Message which Prevents Misprinting

• When you print without using the printer driver (when printing from the printer's operation panel or smartphone/tablet):

The message which prevents misprinting is enabled by default.

To change whether to display a misprint prevention message when printing without using the printer driver:

- Paper-related settings
- When you print using the printer driver:

The message which prevents misprinting is disabled by default.

To change whether to display a misprint prevention message when printing using the printer driver:

- Changing the Printer Operation Mode (Windows)
- ➡ Changing the Printer Operation Mode (macOS)

>>>> Important

• When the message which prevents misprinting is disabled:

The printer starts printing even though the paper settings for printing and the paper information registered to the printer are different.

Information about Paper

- ➤ Media Types You Can Use
- Paper Load Limit
- Handling Paper
- ➤ Before Printing on Art Paper
- Managing Paper Information on Printer Using Media Configuration Tool

Media Types You Can Use

For best results, choose paper designed for how you are printing. A variety of paper for documents as well as photos or illustrations is available from Canon. Use genuine Canon paper to print important photos, when possible.

- → Media Types
- → Page Sizes
- → Paper Weight / Thickness

Media Types

Genuine Canon paper

>>> Note

- For warnings on use of the non-printable side, see each product's usage information.
- Page sizes and media types differ depending on the country or region where the paper is sold. For
 details on page sizes and media types, access the Canon website.
- Genuine Canon paper is not available in some countries or regions. Note that in the United States, Canon paper is not sold by model number. Instead, purchase paper by name.

Paper for printing documents:

- Canon Red Label Superior <WOP111>
- Canon Océ Office Colour Paper <SAT213>

Paper for printing photos:

- Photo Paper Pro Platinum <PT-101>
- Photo Paper Plus Glossy II <PP-201/PP-208/PP-301>
- Photo Paper Pro Luster <LU-101>
- Photo Paper Plus Semi-gloss <SG-201>
- Matte Photo Paper <MP-101>
- Photo Paper Pro Premium Matte <PM-101>
- Premium Fine Art Smooth <FA-SM1>
- Premium Fine Art Rough <FA-RG1>

Paper other than genuine Canon paper

- Plain Paper (including recycled paper)
- · Greeting Card
- · Card Stock
- Paper Load Limit

- ▶ Paper Settings on the Printer Driver and the Printer (Media Type) (Windows)
- → Paper Settings on the Printer Driver and the Printer (Media Type) (macOS)

>>> Note

• When using art paper, see Before Printing on Art Paper.

Page Sizes

You can use the following page sizes.

Note

• Page sizes and media types the printer supports differ depending on the OS you are using.

Standard sizes:

- · top feed
 - Letter
 - Legal
 - 11"x17"(28x43cm)
 - A5
 - A4
 - A3
 - 。 A3+
 - B5
 - 。B4
 - KG/4"x6"(10x15)
 - 5"x7"(13x18cm)
 - 7"x10"(18x25cm)
 - · 9"x13"(23x33cm)
 - 11"x14"
 - · 8"x10"(20x25cm)
 - 10"x12"(25x30cm)
 - · 210x594mm
 - · L(89x127mm)
 - 2L(127x178mm)
 - Square 5"
 - 12"x12"(30x30cm)
 - · Hagaki
 - Hagaki 2
- · manual feed tray

- Letter
- Legal
- 11"x17"(28x43cm)
- A4
- A3
- A3+
- B4
- 9"x13"(23x33cm)
- 11"x14"
- 13"x19" (Super B)
- · 8"x10"(20x25cm)
- 10"x12"(25x30cm)
- · 210x594mm
- 12"x12"(30x30cm)

Special sizes

Special page sizes must be within the following limits:

- · top feed
 - Minimum size: 3.50 x 5.00 in. (89.0 x 127.0 mm)
 - Maximum size: 12.95 x 70.87 in. (329.0 x 1800.0 mm) *1
- · manual feed tray
 - Minimum size: 8.00 x 10.00 in. (203.2 x 254.0 mm)
 - Maximum size: 13.00 x 70.87 in. (330.2 x 1800.0 mm) *1
- *1 When printing on paper longer than 39.00 in. (990.6 mm), select **Photo Paper (Long-form Printing)** or **Fine Art Paper (Long-form Print)** in the paper type.
- → Perform Long-form Printing (Windows)
- ➡ Perform Long-form Printing (macOS)

Paper Weight / Thickness

You can use paper in the following weight/thickness ranges.

- * Do not use paper heavier or thicker than this, as it could jam in the printer.
 - · top feed

Plain paper: From 17 to 28 lb (64 to 105 g /m²)

Specialty paper: Up to 101 lb (380 g /m²)

· manual feed tray

Specialty paper: Up to 101 lb (380 g/m²) / from 4 to 23.6 mil (0.1 to 0.6 mm)

Media Types You Cannot Use

Do not use the following types of paper. Using such paper will cause not only unsatisfactory results, but also the printer to jam or malfunction.

- · Folded, curled, or wrinkled paper
- Damp paper
- · Paper that is too thin
- · Paper that is too thick
- Paper with unstraightened edges like manualy cut paper.
- · Picture postcards
- · Return postcard that has been folded once
- · Postcards affixed with photos or stickers
- Envelopes
- · Any type of paper with holes
- Paper that is not rectangular
- Paper bound with staples or glue
- Paper with an adhesive surface on the back such as label seal
- Paper decorated with glitter, etc.

Paper Load Limit

This section shows the paper load limits of the top feed, the manual feed tray, and the paper output tray.

- → Paper Load Limits of Top Feed and Manual Feed Tray
- → Paper Load Limit of Paper Output Tray

Note

• Page sizes and media types differ depending on the country or region where the paper is sold. For details on page sizes and media types, access the Canon website.

Paper Load Limits of Top Feed and Manual Feed Tray

Genuine Canon Paper

Paper for printing documents:

Media Name <model no.=""></model>	Top Feed
Canon Red Label Superior <wop111></wop111>	Approx. 100 sheets
Canon Océ Office Colour Paper <sat213></sat213>	Approx. 100 sheets

Paper for printing photos:

Media Name <model no.=""></model>	Top Feed	Manual Feed Tray
Photo Paper Pro Platinum <pt-101>*1 Photo Paper Plus Glossy II <pp-201 pp-208="" pp-301="">*1</pp-201></pt-101>	KG/4"x6"(10x15), L(89x127mm), Square 5", Ha- gaki: 20 sheets	1 sheet
Photo Paper Pro Luster <lu-101>*1 Photo Paper Plus Semi-gloss <sg-201>*1 Matte Photo Paper <mp-101></mp-101></sg-201></lu-101>	A4, A3, Let- ter, 5"x7"(13x18cm), 8"x10"(20x25cm), 2L(127x178mm): 10 sheets	
	A3+, 10"x12"(25x30cm), 9"x13"(23x33cm), 11"x14": 1 sheet	
Photo Paper Pro Premium Matte <pm-101> Premium Fine Art Smooth <fa-sm1> Premium Fine Art Rough <fa-rg1></fa-rg1></fa-sm1></pm-101>	N/A	1 sheet

Paper other than Genuine Canon Paper

Common Name	Top Feed	Manual Feed Tray
Plain Paper (including recycled paper)*2	A5, A4, B5, Letter: Approx.	N/A
	100 sheets	

	A3, B4, Legal, 11"x17"(28x43cm): Approx. 50 sheets	
Greeting Card	1 sheet	1 sheet
Card Stock	1 sheet	1 sheet

^{*1} Feeding from a loaded stack of paper may leave marks on the printed side or prevent efficient feeding. In this case, load one sheet at a time.

Note

• When using non-Canon genuine specialty paper, load one sheet at a time in the top feed or manual feed tray.

Paper Load Limit of Paper Output Tray

Genuine Canon Paper

Paper for printing documents:

Media Name <model no.=""></model>	Paper Output Tray
Canon Red Label Superior <wop111></wop111>	Approx. 50 sheets
Canon Océ Office Colour Paper <sat213></sat213>	

Paper other than Genuine Canon Paper

Common Name	Paper Output Tray
Plain Paper (including recycled paper)	Approx. 50 sheets

When continuing printing with paper other than the above, we recommend removing already printed paper from the paper output tray to avoid smearing or discoloration.

^{*2} Normal feeding at maximum capacity may not be possible with some types of paper, or under very high or low temperature or humidity. In this case, load half the amount of paper or less.

Handling Paper

- Be careful not to rub or scratch the surfaces of any types of paper when handling.
- Hold the paper as closely as possible to its edges and try not to touch the printing surface. The print
 quality may be degraded if the printing surface is smudged with sweat or oil that comes from your
 hands.
- Do not touch the printed surface until the ink is dried. Even when the ink is dried, be careful not to touch the printed surface as much as possible when handling. Due to the nature of the pigment ink, the ink on the printed surface may be removed when being rubbed or scratched.
- Take out only the necessary number of paper from the package, just before printing.
- To avoid curling, when you do not print, put unused paper back into the package and keep it on a level surface. And also, store it avoiding heat, humidity, and direct sunlight.

Before Printing on Art Paper

When using art paper, dust is liable to be generated.

It is therefore recommended that paper dust be removed on art paper just before printing.

You will need a soft hair brush (or similar brush used to clean office automation equipment).

The wider the brush, the more effective it will be.



OK - soft brush made from material such as polypropylene, polyethylene, horse hair or goat hair.

>>> Important


• Be sure not to use brushes as shown below. The printing surface may be damaged.



Not OK - brush made from hard material, cloth or washcloth, sticky and abrasive materials.

Paper dust removal procedure:


- 1. Check that the brush is not wet and free from dust or dirt.
- 2. Brush the overall printing surface carefully in one direction.

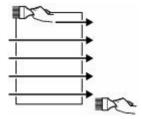

>>> Important

- Be sure to brush all the way across the paper; do not start brushing at the middle or stop halfway.
- Be careful not to touch the printing surface as much as possible.

3. To complete the removal of paper dust, brush the paper in the other direction from top to bottom.

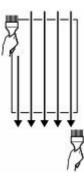

Settings

Changing Settings from Operation Panel

- LCD and Operation Panel
- Setting Items on Operation Panel
- Setting Administrator Password on Operation Panel

Changing Printer's Setting Using Web Browser

- Start up Remote UI
- Changeable Setting Items Using Remote UI
- Setting Passwords Using Remote UI
- Registering Printer's Root Certificate to Web Browser for SSL Communication
- Registering Printer's Root Certificate to Local Computer for SSL Communication
- Generating Server Certificate

Network Setting

- Printer Connection Methods
- Another Printer Found with Same Name
- Printing Network Settings
- Network Status and Troubleshooting
- Checking Printer Connection Status Using Wi-Fi Connection Assistant
- Sharing the Printer on a Network (Windows)
- Sharing the Printer on a Network (macOS)

Set Up/Manage Security


Changing Settings from Operation Panel

- ► LCD and Operation Panel
- ➤ Setting Items on Operation Panel
- Setting Administrator Password on Operation Panel

LCD and Operation Panel

Turning on the printer displays the HOME screen.

Using the ▲, ▼ button to select an item from the menu and pressing the **OK** button enable you to perform each setting.

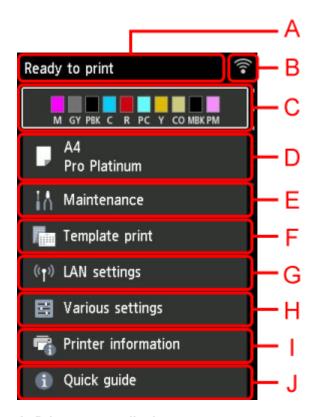

A: Printer status display area

Displays printer status, messages, and other information.

Notification Messages

B: Network

Displays network status by the icon.


The icon differs depending on the network of use or the network status.



Wi-Fi is enabled and the printer is connected to the wireless router.

Note

• Depending on the signal state, the icon will change.

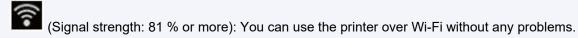

(Signal strength: 51 % or more): The problem such as the printer cannot print may occur according to the network status. We recommend placing the printer near the wireless router.



(Signal strength: 50 % or less): The problem such as the printer cannot print may occur.

Place the printer near the wireless router.



Wi-Fi is enabled but the printer is not connected to the wireless router.



Wired LAN is enabled.



Wireless Direct is enabled.



Network is disabled.

C: Ink status display area

Displays the ink status. Selecting this item enables you to check the remaining amount of ink and model number of ink tank.

Checking Ink Level

D: Paper settings display area

Displays information about the paper in the top feed. Selecting this item enables you to specify the size and type of paper loaded in the top feed.

E: Maintenance

Select this item to perform maintenance of the printer.

F: Template print

You can print and make as lined or graph paper.

G: LAN settings

You can perform settings relating to network.

H: Various settings

You can change printer settings such as settings when printing.

I: Printer information

Displays printer information and error histories.

J: Quick guide


Displays how to operate the printer and QR code accessing to the Online Manual.

>>> Note


• When printing is in progress, you cannot select grayed out items.

Notification Messages

When the ink is low or there is another notification, New notice appears in the printer status display area.

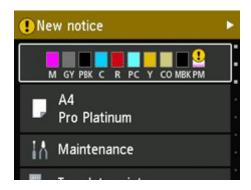

Press the button to display the **Notice list** screen to check messages.

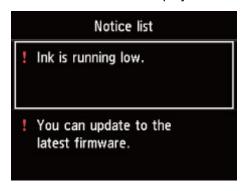


Setting Items on Operation Panel

Note

 The administrator password is required to change some setting items if it is enabled for changing settings using the operation panel.

For more on setting items which the administrator password is required:

→ Setting Administrator Password on Operation Panel

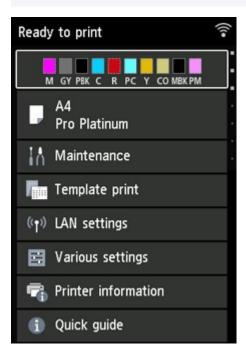





➡ Printing Templates Such as Lined or Graph Paper





- Printer settings
 - Security settings
 - Print settings

- LAN settings
- Other printer settings
- Language selection
- Firmware update
- Paper-related settings
- Power control
- Quiet setting
- Auto maintenance settings
- Administrator password settings
 - **▶** Setting Administrator Password on Operation Panel
- Reset settings
- Web service setup



Maintenance

This item is displayed on the HOME screen.

Nozzle Check

Prints out the nozzle check pattern.

★ Checking for Nozzle Clogging

Cleaning

Select this to clean the print head.

Cleaning the Print Head

Deep Cleaning

Use this mode if no ink is ejected at all or if Cleaning does not solve the problem.

Deep Print Head Cleaning

Print Head Alignment

Adjusts the alignment of print head.

- → Automatic Adjustment to Straighten Lines and Align Colors
- Manual Adjustment to Straighten Lines and Align Colors

Roller Cleaning

Select this mode when cleaning the paper feed rollers.

• Bottom Plate Cleaning

Select this mode when cleaning the inside of the printer.

➡ Performing Bottom Plate Cleaning

LAN settings

This item is displayed on the HOME screen.

>>> Important

- The administrator password is required to change the settings if it is enabled to change the settings on the operation panel using the administrator password.
- **→** Wi-Fi
- → Wireless Direct
- → Wired LAN
- → Advanced

Wi-Fi

See settings

The network settings information of the printer appears when it is connected by Wi-Fi. (Some setting items are not displayed depending on the printer settings.)

Items	Setting	
Connection	Enabled (connected)/Enabled (disconnected)/Disable	
Network name (SSID)	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
Frequency	2.4 GHz/5 GHz	
Wi-Fi security	Disable / WPA-PSK (AES) / WPA2-PSK (AES) / WPA/WPA2-PSK / WPA3-SAE (AES) / WPA2/WPA3-PSK / WPA-EAP (AES) / WPA2-EAP (AES) / WPA3-EAP (AES) / WPA2-EAP (AES) / WPA3-EAP (AES)	
Signal strength (%)	xxx	
IPv4 address	XXX. XXX. XXX	
IPv4 subnet mask	XXX. XXX. XXX	
IPv4 default gateway	XXX. XXX. XXX	
IPv6 link-local address	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 manual address	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 manual prefix length	xxx	
IPv6 stateless address 1	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 stateless prefix length 1	xxx	
IPv6 stateless address 2	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 stateless prefix length 2	XXX	

IPv6 stateless address 3	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
IPv6 stateless prefix length 3	xxx
IPv6 stateless address 4	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
IPv6 stateless prefix length 4	xxx
IPv6 default gateway 1	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
IPv6 default gateway 2	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
IPv6 default gateway 3	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
IPv6 default gateway 4	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
MAC address (Wi-Fi)	XX: XX: XX: XX: XX
Printer name	xxxxxxxxxxxx
Bonjour service name	XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXX

("XX" represents alphanumeric characters.)

• Enable/disable Wi-Fi

Enables/disables Wi-Fi.

· Wi-Fi setup

Selects the setup method for Wi-Fi connection.

Easy wireless connect

Select if you specify the settings of the access point information to the printer directly from a device (e.g. smartphone, or tablet) without operating the wireless router. Follow the on-screen instructions of the connecting device for the setup procedure.

Manual connect

Select when you perform settings for Wi-Fi manually using the operation panel of the printer.

WPS (Push button method)

Select when you perform settings for Wi-Fi using a wireless router supporting a Wi-Fi Protected Setup (WPS) push button method. Follow the on-screen instructions during setup.

Other connection types

WPS (PIN code method)

Select when you perform settings for Wi-Fi using a wireless router supporting a Wi-Fi Protected Setup (WPS) PIN code method. Follow the on-screen instructions during setup.

Wireless Direct

· See settings

The network settings information of the printer appears when it is connected by the wireless direct. (Some setting items are not displayed depending on the printer settings.)

Note

• To show or hide the password, select **Show password/Hide password** in the **Wireless Direct setting list** screen.

Items	Setting
Connection	Enable/Disable
Network name (SSID)	DIRECT-XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
Password	xxxxxxxxx
Frequency	2.4 GHz/5 GHz
Wi-Fi security	WPA2-PSK(AES)
No. of printers connected now	XX/XX
IPv4 address	XXX. XXX. XXX
IPv4 subnet mask	XXX. XXX. XXX
IPv4 default gateway	XXX. XXX. XXX
IPv6 link-local address	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX
MAC address (Wi-Fi)	XX: XX: XX: XX: XX
Printer name	xxxxxxxxxxxx
Bonjour service name	XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXXX XXXX

("XX" represents alphanumeric characters.)

· Connect to smartphone

Enables to connect the smartphone to the printer by reading the QR code displayed on the LCD with the smartphone, or also by manually obtaining the network name and password.

• Enable/disable Wireless Direct

Enables/disables Wireless Direct.

Change network name (SSID)

Changes the identifier (SSID/the printer's name displayed on a Wi-Fi Direct compatible device) for Wireless Direct.

Change password

Changes the password for Wireless Direct.

• Connection request confirmation

Selecting **ON** displays the confirmation screen when a Wi-Fi Direct compatible device is connecting the printer.

• 2.4GHz/5GHz Switch

Sets the frequency to use.

Wired LAN

See settings

The network settings information of the printer appears when it is connected by wired LAN. (Some setting items are not displayed depending on the printer settings.)

Items	Setting	
Connection	Enabled (connected)/Enabled (disconnected)/Disable	
IPv4 address	XXX. XXX. XXX	
IPv4 subnet mask	xxx. xxx. xxx	
IPv4 default gateway	XXX. XXX. XXX	
IPv6 link-local address	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 manual address	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 manual prefix length	xxx	
IPv6 stateless address 1	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 stateless prefix length 1	xxx	
IPv6 stateless address 2	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 stateless prefix length 2	xxx	
IPv6 stateless address 3	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 stateless prefix length 3	xxx	
IPv6 stateless address 4	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 stateless prefix length 4	xxx	
IPv6 default gateway 1	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 default gateway 2	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	

IPv6 default gateway 3	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
IPv6 default gateway 4	XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX: XXXX	
MAC address (Wired LAN)	XX:XX:XX:XX:XX	
Printer name	xxxxxxxxxxxx	
Bonjour service name	XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXX	

("XX" represents alphanumeric characters.)

• Enable/disable Wired LAN

Enables/disables wired LAN.

Advanced

· Set printer name

Specifies the printer name.

Note

- You cannot use the same printer name as that already used for other LAN connected devices.
- You cannot use a hyphen for the initial or last character of the printer name.

TCP/IP settings

Performs IPv4 or IPv6 setting.

WSD settings

Setting items when you use WSD (one of the network protocols supported in Windows).

Enable/disable WSD

Selects whether WSD is enabled or disabled.

>>> Note

 When this setting is enabled, the printer icon is displayed on the Network Explorer in Windows.

Optimize inbound WSD

Selecting **Enable** allows you to receive the WSD printing data faster.

Timeout settings

Specifies the timeout length.

Bonjour settings

Setting items when you use Bonjour.

· Enable/disable Bonjour

Selecting **Enable** allows you to use Bonjour to perform the network settings.

Service name

Specifies the Bonjour service name.

>>> Note

 You cannot use the same service name as that already used for other LAN connected devices.

· LPD settings

Enables/disables the LPD setting.

· RAW settings

Enables/disables RAW printing.

LLMNR settings

Enables/disables LLMNR (Link-Local Multicast Name Resolution). Selecting **Enable** allows the printer to detect printer's IP address from the printer name without a DNS server.

· IPP settings

Selecting **Enable** allows you to print via the network with the IPP protocol.

Wi-Fi DRX settings

Selecting **Enable** allows you to activate discontinuous reception when using Wi-Fi (discontinuous reception).

Note

- Depending on the Wi-Fi router used, discontinuous reception may not be activated even though **Enable** is selected.
- Discontinuous reception is enabled only while the printer is on standby. (The LCD is in the screen saver mode.)

Wired LAN DRX settings

Selecting **Enable** allows you to activate discontinuous reception when the printer is connected to a device compatible with wired LAN.

Easy wireless connect

When set to **Auto start: ON**, the device will automatically put into the standby mode for easy wireless connect.

To prevent the device from putting into the standby mode for easy wireless connect at unintended times, set to **Auto start: OFF**.

Security settings

럟

This item is displayed when you select **Printer settings** from

Various settings on the HOME

>>>> Important

screen.

• The administrator password is required to change the settings if it is enabled to change the settings on the operation panel using the administrator password.

Recommended security settings

Enables to set the security appropriate for your environment. Check the Security Settings Navigator for details on each setting.

Set Up/Manage Security

Lockout settings

Set whether to lock password input for a period of time after multiple incorrect attempts.

· Enable/disable lockout

Enable or disable the lockout setting.

Lockout threshold (times)

Set the number of attempts before input is locked.

· Lockout period

Set the length of time to lock input for.

· Use of Remote UI

Set whether to lock use of the Remote UI.

· Password policy settings

Set whether to limit the characters that can be used when setting or inputting passwords.

· IPsec settings

Selecting **Enable** allows you to specify the IPsec security.

IEEE802.1X/EAP settings

Setting item when you use IEEE802.1X/EAP (WPA/WPA2/WPA3 Enterprise).

>>>> Note

- Refer to the Security Guide for details on **Security settings**.
 - Set Up/Manage Security

Print settings

랿

This item is displayed when you select **Printer settings** from screen.

Various settings on the HOME

· Prevent paper abrasion

Use this setting only if the print surface becomes smudged.

>>> Important

• Be sure to set this back to **OFF** after printing since it may result in lower print quality.

· Adjust horizontal print position

Adjusts the print position when the left/right margins are not aligned.

You can adjust the left/right margins in increments of 0.01 inch/0.1 mm between -0.12 inch/-3 mm and +0.12 inch/+3 mm centered on the horizontal center of the paper.

>>>> Important

• For A3, A3+ and 12" x 12" (30 x 30 cm), you can adjust the left/right margins between -0.06 in. (-1.5 mm) and +0.06 in. (+1.5 mm) even if you specify the value over 0.06 in. (1.5 mm).

· Magnification level for borderless

Sets magnification level when performing borderless printing in the following print method.

Normally, the image is enlarged slightly and printed so that there is no border. If the border remains, change this setting.

· IPP printing such as AirPrint

IPP print settings

Sets the image quality and paper settings for IPP printing.

For example, when printing using AirPrint or Mopria Print Service, this setting value is applied.

· Print quality settings

Color mode

Select the color correction method suited to the type of document to be printed.

Important

• Even if you select ICC profile, printing is performed without ICC profile if ICC profile is not included in the paper information added with Media Configuration Tool. Even if ICC profile is included in the paper information, printing will fail and the paper will be ejected as the blank paper if the Profile is not supported with the printer.

Clear coating

Set Clear Coating. Perform Clear Coating to adjust glossiness by applying the Chroma Optimizer (CO) ink to the printed surface.

Auto

Automatically sets the Clear Coating area and whether to perform Clear Coating.

Overall

Applies Clear Coating to the entire print area including the margins outside the image area (print area).

Improves the glossiness of the entire print area including the margins by applying Clear Coating to the entire surface.

This setting consumes the most Chroma Optimizer (CO) ink.

Printed areas

Applies Clear Coating to the margins and the non-white areas in the image.

Set this when you want to improve the glossiness of only the image area.

OFF

Prints without performing Clear Coating.

Compared to when Clear Coating is performed, the image quality may seem lower or the print surface may be more susceptible to scratches.

Note

• If Clear Coating is unnecessary (for example, when laminating the printed image), select **OFF**.

>>> Important

- Depending on the paper type and print quality, it may not work even if you select Overall/
 Printed areas/OFF.
- If you select **OFF** for **Clear coating**, the Chroma Optimizer (CO) ink will not be used during printing, but it will be used during automatic maintenance to maintain the printer performance.

Other printer settings

롴

This item is displayed when you select **Printer settings** from

Various settings on the HOME

screen.

>>>> Important

• The administrator password is required to change the settings if it is enabled to change the settings on the operation panel using the administrator password.

· Date/time settings

Sets the current date and time.

· Date display format

Selects the display format of the date displayed on the LCD.

· Daylight saving time setting

Enables/disables the summer time setting. If you select **ON**, you can select additional sub-settings. This setting may not be available depending on the country or region of purchase.

Start date/time

Sets the date and time that summer time starts.

Month: Specify the month.

Week: Specify the week.

DOW: Specify the day of the week.

The screen to set the shift time to start summer time will be displayed after specifying the items above and selecting **OK**.

After specifying the shift time and selecting **OK**, you can specify the end date/time.

End date/time

Sets the date and time that summer time ends.

Month: Specify the month.

Week: Specify the week.

DOW: Specify the day of the week.

The screen to set the shift time to end summer time will be displayed after specifying the items above and selecting **OK**.

Specify the shift time and select **OK**.

Key repeat

Enables/Disables continuous input by pressing and holding down the ▲ ▼ ◀ ► button when selecting a menu or setting item.

Keyboard layout

Enables to change the keyboard layout.

• Ink level monitor

Timing for ink level notification

Sets the timing of the remaining ink level notification.

Selecting **Check settings** allows you to check the notification timing set for each color.

Language selection

롴

This item is displayed when you select **Printer settings** from screen.

Various settings on the HOME

Changes the language for the messages and menus on the LCD.

>>> Important

• The administrator password is required to change the settings if it is enabled to change the settings on the operation panel using the administrator password.

Firmware update

Various settings on the HOM

This item is displayed when you select **Printer settings** from screen.

You can update the firmware of the printer, check the firmware version, or perform settings of a notification screen, a DNS server and a proxy server.

>>> Important

• The administrator password is required to change settings if it is enabled for changing settings using the operation panel.

Note

• If LAN is disabled, you cannot use Install update, DNS server setup, Proxy server setup.

· Install update

Updates the printer's firmware.

➡ Firmware update

· Check current version

You can check the current firmware version.

· Update notification settings

You can set the printer to display the firmware update information on the LCD when the firmware update is available.

When **Idle/Power off** is selected, the printer informs you of the update during idle and the update information also appears when you press the **ON** button.

Auto update settings

Select **ON** to keep the firmware updated to the latest version.

DNS server setup

Performs settings for a DNS server. Select **Auto setup** or **Manual setup**. If you select **Manual setup**, follow the display on the LCD to perform settings.

· Proxy server setup

Performs settings for a proxy server. Follow the display on the LCD to perform settings.

Paper-related settings

럟

This item is displayed when you select **Printer settings** from

Various settings on the HOME

· Top feed paper settings

screen.

Set the paper size and the media type of paper loaded in the top feed.

· Manual feed tray paper settings

Set the paper size and the media type of paper loaded in the manual feed tray.

· Check paper replacement

If you select **ON**, the printer detects that the paper is loaded or removed.

When the paper registration screen is displayed after loading paper, register the paper size and the media type.

Detect paper setting mismatch

If you select **Enable**, the printer detects whether the paper size and the media type are the same as those registered. If printing starts with the settings that do not match, an error message appears on the LCD.

→ Register Paper Information

Advanced paper settings

Perform the following settings for each media type.

- Paper thickness (head height)
- Extension for borderless printing
- Unidirectional printing
- Pause between scans
- Pause between pages
- Detect paper width
- Reset paper settings by paper

Selecting **Reset paper settings for all paper**, **Yes** and pressing the **OK** button initializes the settings. Entering the administrator password is required if it is enabled.

Print advanced paper settings

Prints out each setting specified in **Advanced paper settings**.

· Reset paper settings for all paper

Initializes each setting specified in **Advanced paper settings**.

Entering the administrator password is required if it is enabled.

Power control

Various settings o

This item is displayed when you select **Printer settings** from screen.

Allows you to turn on/off the printer automatically to save electricity. In addition, you can specify the time and day to turn it on/off.

>>>> Important

• The administrator password is required to change settings if it is enabled for changing settings using the operation panel.

· Use auto power control

Auto power off

Specifies the length of time to turn off the printer automatically when no operation is made or no printing data is sent to the printer.

Auto power on

Selecting **ON** enables the printer to turn on automatically when printing data is sent to the printer.

Use scheduling

Specifies the time to turn on/off the printer automatically for each day of the week.

Do not use power control

Disables the function to turn on/off the printer automatically.

Quiet setting

Various settings on the He

This item is displayed when you select **Printer settings** from screen.

Enable this function on the printer if you want to reduce the operating noise, such as when printing at night.

>>> Important

• The administrator password is required to change the settings if it is enabled to change the settings on the operation panel using the administrator password.

• ON

Select to reduce the operating noise when printing.

>>> Important

- Operating speed is reduced compared to when **OFF** is selected.
- This function may not be so effective depending on the printer's setting. Furthermore, certain noise, such as when the printer is preparing for printing, is not reduced.

OFF

Select when you do not use the quiet mode.

Note

• You can set **Quiet setting** from the operation panel of the printer or the printer driver. No matter how you set the quiet mode, the mode is applied when you perform operations from the operation panel of the printer or printing from the computer.

Auto maintenance settings

랿

This item is displayed when you select **Printer settings** from screen.

Various settings on the HOME

>>> Important

• The administrator password is required to change settings if it is enabled for changing settings using the operation panel.

Auto nozzle check

Enables/Disables automatic nozzle checking.

Reset settings



This item is displayed when you select **Printer settings** from screen.

Various settings on the HOME

You can set the settings back to the default.

>>> Important

• The administrator password is required to change the settings if it is enabled to change the settings on the operation panel using the administrator password.

· Web service setup only

Sets the Web service settings back to the default.

· LAN settings only

Sets the LAN settings back to the default.

· Settings only

Returns the settings such as the paper size, media type, or other setting items back to the default. The LAN settings is not returned back to the default.

· Reset all

Sets all settings you made to the printer back to the default. The administrator password specified for the printer is initialized.

Default Administrator Password

After resetting, perform setup again as necessary.

>>> Note

- · You cannot set the following setting items back to the default:
 - Security policy
 - The language displayed on the LCD
 - The current position of the print head
 - CSR (Certificate Signing Request) for encryption method (SSL/TLS) setting
 - Media information registered to the printer by using Media Configuration Tool

· Security policy only

The Security administrator password and all Security policies will be reset. If a security administrator password has been set, the security administrator password is required to perform the reset.

Set Up/Manage Security

>>> Note

• User mode settings restricted by the security policy will not be changed. (Feature settings will not be returned to the settings prior to security restrictions under the security policy.)

Web service setup

This item is displayed when you select



Various settings on the Home screen.

>>>> Important

 The administrator password is required to change settings if it is enabled for changing settings using the operation panel.

Settings for Data Sending

Performs settings for the following data sending.

- Data necessary for services
- Data about your activities

· Web service connection setup

The following setting items are available.

Cloud Printing Center setup

Registers/Deletes the printer to/from Canon Cloud Printing Center.

Check Web service setup

Make sure whether the printer is registered to Canon Cloud Printing Center.

• Issue registration code

In order to link the web service and printer, obtain the registration code from the service origin.

DNS server setup

Performs settings for a DNS server. Select Auto setup or Manual setup. If you select Manual setup, follow the display on the LCD to perform settings.

· Proxy server setup

Performs settings for a proxy server. Follow the display on the LCD to perform settings.

Printer information

This item is displayed on the HOME screen.

• System information

Displays printer's system information.

• Error history

Displays the error history.

For more on the error code, refer to <u>List of Support Code for Error</u>.

Usage

Displays the total number of sheets printed.

Setting Administrator Password on Operation Panel

The administrator password can be set or canceled.

Specifying the administrator password requires you to enter the password to use the items or change the settings below.

- · Web service setup
- Security settings
- LAN settings
- · Other printer settings
- · Language selection
- · Firmware update
- Power control
- Quiet setting
- · Auto maintenance settings
- Administrator password settings
- Reset settings (excluding Reset all)

Follow the procedure below to specify the administrator password.

>>> Important

• The administrator password of the printer is set from the time of purchase.

To check the initial password, select **Printer information > System information** on the printer's operation panel, and select **Show password** on the displayed screen. The **Default password** value is displayed on the **System information** screen.

If the administrator password has been changed, the Default password value is not displayed.

Default Administrator Password

- 1. Select Various settings on the HOME screen.
- 2. Select Printer settings.
- 3. Select Administrator password settings.

If you have set an administrator password, enter the password.

- 4. Select Change administrator password.
- **5.** Select the effective range of the administrator password.

Remote UI and other tools

To change the setting using the remote UI or a certain software, the administrator password needs to be entered.

LCD, Remote UI, and other tools

To change the setting using the operation panel of this printer, remote UI or a certain software, the administrator password needs to be entered.

6. Enter new administrator password.

>>> Important

- When changing the password, the character is limited as follows.
 - Single-byte alphanumeric characters, spaces, and the following symbols are available.

- Set the password according to the password policy.
 - Security settings
- 7. Select Apply.
- 8. Enter the administrator password again.
- 9. Select Apply.

The administrator password is available.

Changing Printer Settings from Your Computer (macOS)

- Registering a Changed Printing Profile
- ➤ Changing the Printer Operation Mode
- Updating Media Information in Printer Driver
 - Correcting Media Information in Printer Driver (When Printer Used in Shared Environment)
- ➤ Reducing the Printer Noise

Registering a Changed Printing Profile

You can name and register the printing profile you made in the <u>Print Dialog</u>. The registered printing profile can be called up from **Presets** to be used. You can also delete the unnecessary printing profile.

The procedure for registering a printing profile is as follows:

Registering a Printing Profile

- 1. In the Print dialog, set the necessary items
- 2. Select Save Current Settings as Preset... from the Presets
- 3. Save the settings

In the displayed dialog, enter a name in **Preset Name**, and if necessary, set **Available For**. Then click **OK**.

>>> Important

· There are also print settings that cannot be saved to preset.

Using Registered Printing Profile

1. On **Presets** in the Print dialog, select the name of printing profile you want to use Printing profile in the Print dialog will be updated to the called profile.

Deleting Unnecessary Printing Profile

1. Select the printing profile to be deleted

In the print dialog, select **Edit Preset List...** in the **Presets** section. Then in the dialog that appears, select the name of the printing profile to be deleted.

2. Delete the printing profile

Click -, and click **OK**. The selected printing profiles will be deleted from **Presets**.

Changing the Printer Operation Mode

If necessary, switch between various modes of printer operation.

The procedure for configuring **Custom Settings** is as follows:

1. Select Custom Settings from the pop-up menu on the Canon IJ Printer Utility2

>>> Note

- If the computer is unable to communicate with the printer, a message may be displayed because the computer cannot access the function information that was set on the printer.
 - If this happens, click Cancel to display the most recent settings specified on your computer.

2. If necessary, complete the following settings:

Detects a printable disc in the disc tray

Detects whether compatible media is loaded on the multi-purpose tray during printing on a printable disc, and displays a message if compatible media is not loaded.

Check this check box to detect whether compatible media is loaded when printing.

Uncheck this check box to print without detecting whether compatible media is loaded.

>>> Important

- If you leave this check box unchecked, the printer may print to the multi-purpose tray even if compatible media is not loaded on the multi-purpose tray. Therefore, you should check this check box under normal circumstances.
- If you load compatible media that has already been printed onto the multi-purpose tray, the printer may detect that no compatible media is loaded on the multi-purpose tray. In this case, uncheck this check box.

Don't detect mismatch of paper settings when printing from computer

When you print documents from your computer, the paper settings in the printer driver and the paper information registered on the printer do not match, this setting disables the message display and allows you to continue printing.

To disable detection of paper setting mismatches, select this check box.

Disable paper width detection when printing from computer

Even if the paper width identified by the printer during printing from the computer differs from the paper width that was set for **Paper Size** in the print dialog box, this function disables the message display and allows you to continue printing.

To disable detection of the paper width during printing, check this check box.

3. Apply the settings

Click Apply and when the confirmation message appears, click OK.

The printer operates with the modified settings hereafter.

Updating Media Information in Printer Driver

This function gets the latest media information from the printer and updates the media information in the printer driver.

When the media information is updated, the media displayed for **Media Type** on the **Quality & Media** screen is updated to the latest information.

The procedure for updating media information is described below.



Update Media Information

1. From the Canon IJ Printer Utility2 pop-up menu, select Media Information

2. Click Update Media Information

A dialog appears.

3. Check that the media information has updated

By following the dialog instructions, check that the printer is on, and then click **OK**.

After checking whether or not the printer media information needs to be updated, a message will be displayed.

If the printer media information is up to date, click **OK** and finish updating media information.

If the information needs to be updated, follow the below steps to do so:

4. Update media information

Check the message and click **Update**.

The printer driver media information will update.

When the authentication screen appears, enter the administrator's name and password, and then click **Install Helper**.

>>> Important

- It may take some time to update the media information.
- Do not change media information on the printer while you are updating media information on the driver.

5. Finish updating media information

When a confirmation message appears, click OK.

The media information will be updated.

>>>> Important

Restart the application or software you are printing from after updating media information.

>>> Important

- Ensure that a user with administrator privileges carries out the media information update.
 Users other than administrators can check if a media information update is required, but cannot carry out the update itself.
- When you have added, deleted, or edited media using administrative tools (the Media Configuration Tool) but have not updated the media information, issues may arise such as the inability to print.

>>> Note

• If the printer is being shared, **Correct Media Information** will display on the client machine.

Correcting Media Information in Printer Driver (When Printer Used in Shared Environment)

The printer driver media information will be corrected.

Carrying out a media information correction will correct the configuration of the media information in the printer driver.

The procedure for correcting media information is described below.



Correct Media Information

1. From the Canon IJ Printer Utility2 pop-up menu, select Media Information

2. Click Correct Media Information

After checking whether or not the printer driver's media information is correct, a message will be displayed.

If the printer media information is set correctly, click **OK** and finish correcting media information. If the information needs to be corrected, follow the below steps to do so:

3. Correct media information

When a confirmation message appears, click **OK**.

The printer driver media information will be corrected.

When the authentication screen appears, enter the administrator's name and password, and then click **Install Helper**.

4. Complete media information correction

When a confirmation message appears, click **OK**.

The paper information will be corrected.

>>> Important

Restart the application or software you are printing from after correcting media information.

Note

 Media Information will only be displayed on the client machine in use when the printer is being shared.

Reducing the Printer Noise

The quiet mode allows you to reduce the operating noise of this printer. Select when you wish to reduce the operating noise of the printer at night, etc.

Using this function may lower the print speed.

1. Select Printer settings from Remote UI

2. Click Quiet setting

3. Set the quiet mode

If necessary, specify one of the following items:

Do not use quiet mode

Select this option when you wish to use the printer with volume of normal operating noise.

Use quiet mode

Select this option when you wish to reduce the operating noise of the printer.

4. Apply the settings

Click OK.

The settings are enabled hereafter.

Changing Printer's Setting Using Web Browser

- Start up Remote UI
- ➤ Changeable Setting Items Using Remote UI
- Setting Passwords Using Remote UI
- ➤ Registering Printer's Root Certificate to Web Browser for SSL Communication
- ➤ Registering Printer's Root Certificate to Local Computer for SSL Communication
- Generating Server Certificate

Start up Remote UI

You can check the printer status and change the printer settings using the web browser on your smartphone, tablet, or computer.

To check the printer status and to change the printer settings, display "Remote UI" on the web browser.

Note

Remote UI is a software that enables you to perform operations, which are usually performed on the
printer's operation panel, using a Web browser over a network.

LAN connection with the printer is required to use Remote UI.

- You can use Remote UI on the following OS and the web browser.
 - iOS device

Web browser: iOS standard Web browser (Mobile Safari)

- iPadOS device

Web browser: iPadOS standard Web browser (Mobile Safari)

- Android device

Web browser: Android standard Web browser (Browser or Chrome)

macOS device

Web browser: macOS standard Web browser (Safari)

Windows device

Web browser: Microsoft Edge, Mozilla Firefox, Google Chrome

- · Enable JavaScript and cookies in the web browser.
- **1.** Check printer's IP address.
 - 1. Select LAN settings on the HOME screen.
 - 2. Select the enabled LAN.

Diagonal lines are displayed for disabled LAN icons.

- 3. Check IPv4 address.
- **2.** Open web browser on your smartphone, tablet, or computer and enter IP address.

Enter as following in the URL field of the web browser.


http://XXX.XX.X.XXX

Enter the IP address of the printer in "XXX.XX.XXXX".

>>> Note

• If you have set a DNS host name, you can also enter this.

When you access, "Remote UI" will be displayed on the web browser on your smartphone, tablet, or computer.

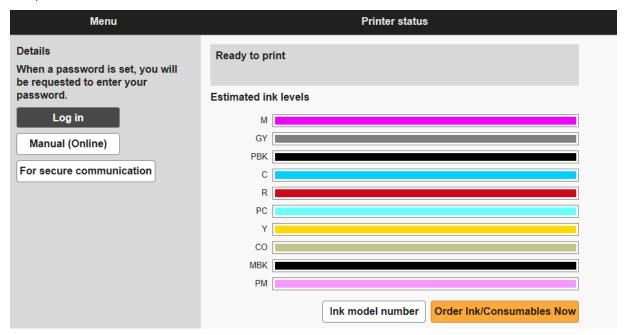

>>> Note

- If you display Remote UI for the first time on your smartphone, tablet, or computer, download the root certificate, and then register it.
 - Registering Printer's Root Certificate to Web Browser for SSL Communication
- If the root certificate is not registered, a message to warn you that the secure connection is not guaranteed may appear.

3. Select Log in.

The password authentication screen appears.

>>> Note

• When the standard user mode is enabled, choose either administrator mode or standard user mode to log on.

After choosing a mode and selecting **Log in**, the password authentication screen of each mode appears.

4. Enter password.

When the password authentication is complete, the menus that can be utilized are displayed on the web browser.

>>> Important

• The administrator password of the printer is set from the time of purchase.

To check the initial password, select Printer information > System information on the printer's operation panel, and select Show password on the displayed screen. The Default password value is displayed on the System information screen.

If the administrator password has been changed, the **Default password** value is not displayed.

→ Default Administrator Password

For details on setting password, see Setting Passwords Using Remote UI.

5. Confirm that the main screen of Remote UI is displayed.

For changeable setting items, see below.


➡ Changeable Setting Items Using Remote UI

When you finish checking printer status and changing printer settings, select Log out.

Changeable Setting Items Using Remote UI

Note

• The item which can be used is different in administrator mode or in standard user mode.

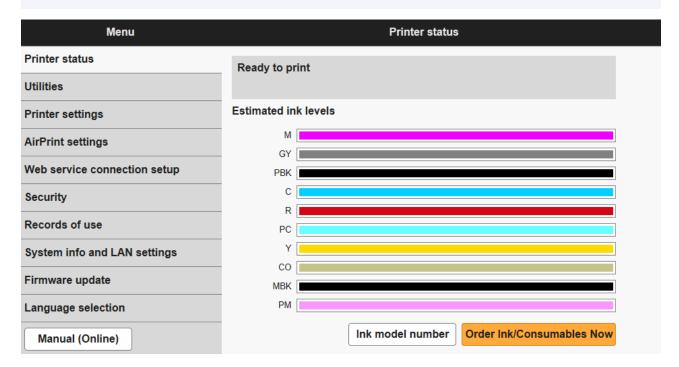

Printer status

This function displays printer information such as the remaining ink amount, the status, and detailed error information.

You can also connect to the ink purchase site or support page, and use Web Services.

Utilities

This function allows you to set and perform maintenance such as cleaning.

Printer settings

You can change various settings, such as print settings.

You can disable any operations using the operation panel from **Operation panel lock** on **Custom settings**.

>>> Note

Some of the menu is available only when you logged on in administrator mode.

AirPrint settings

This function allows you to specify the AirPrint settings when printing with AirPrint.

Web service connection setup

This function configures web services that use printer device information.

Job history

This function allows you to display the job history and print it.

Note

• When you are logging on in administrator mode, you can restrict this function in standard user mode.

Security

Set passwords, make settings related to certificates for encrypted communication, and other security settings.

Records of use

You can check the number of sheets printed on the device.

System info and LAN settings

- Confirm system information
- LAN settings
- Error history

Firmware update

You can update the firmware of the printer, check the firmware version, or perform settings of a DNS server and a proxy server.

➡ Firmware update

Language selection

This function allows you to change the language on the display.

Manual (Online)

This function displays the Online Manual.

Security

· Recommended security settings

Enables to set the recommended security appropriate for your environment. Check the Security Settings Navigator for details on each setting.

Set Up/Manage Security

· Administrator password setting

➡ Setting Passwords Using Remote UI

· Standard user mode settings

Select Enable/Disable for the standard user mode.

• TLS server settings

Make settings related to certificates for encrypted communication.

Advanced TLS settings enables you to specify the range of TLS versions to be used, the algorithm to be used, and so on.

• IEEE802.1X/EAP settings

Authentication

Select an authentication method for IEEE802.1X/EAP authentication.

>>> Note

- In the case of using IEEE802.1X certificate, Security > IEEE802.1X/EAP settings > CA certificate, and register the CA certificate.
- · Supported authentication method
 - EAP-TLS(Extensible Authentication Protocol-Transport Level Security)
 - EAP-TTLS(EAP-Tunneled TLS)
 - PEAP(Protected EAP)

Key and certificate settings

Perform settings for key and client certificate.

CA certificate

Perform settings for the CA certificate that verifies a server certificate.

Enable/disable IEEE802.1X/EAP

Enable or disable IEEE802.1X/EAP authentication.

· IPsec settings

If enabled, you can set the IPsec security.

· Import printer settings

Imports the printer security settings.

Export printer settings

Exports the printer security settings.

Security policy

Allows you to set the security policy and check the setting values.

➡ Set Up/Manage Security

Encryption settings

Performs settings related to encryption.

· Password policy settings

Sets the minimum number of characters and combinations of characters that can be set for the printer passwords such as the administrator password.

Lockout settings

Performs settings for the function that locks operations that require entering the password if the incorrect password is entered a specified number of times on the password entry screen.

USB settings

Performs settings related to USB connection.

>>> Note

- Refer to the Security Guide for details on Security settings.
 - → Set Up/Manage Security

LAN settings

• Wi-Fi

Enables/Disables Wi-Fi.

Wireless Direct

Enables/Disables Wireless Direct.

Wired LAN

Enables/Disables Wired LAN.

Confirm LAN settings

The LAN setting information is displayed.

Advanced setup

Set printer name

Specifies the printer name.

>>> Note

- You cannot use the same printer name as that already used for other LAN connected devices.
- You cannot use a hyphen for the initial or last character of the printer name.

TCP/IP settings

Performs IPv4 or IPv6 setting.

WSD settings

Perform settings to use WSD.

Bonjour settings

Perform settings to use Bonjour.

LPD settings

Perform settings for printing with LPD.

RAW settings

Enables/Disables the RAW printing.

LLMNR settings

Enables/disables LLMNR (Link-Local Multicast Name Resolution). If you select **Enable**, you can determine the printer's IP address from the printer name even in an environment without the DNS server.

SNMP settings

Perform settings for using SNMP to manage and control the printer.

IPP Settings

Perform settings for printing with IPP.

CHMP settings

Perform settings for communication at the time when printer drivers or applications acquire the information on status, paper, and job log, from the printer.

Selecting **Enable HTTPS redirection** redirects the communication using CHMP to encrypted communication.

Note

- To use CHMP for encrypted communication, you need to register the printer's root certificate to your computer.
 - → Registering Printer's Root Certificate to Local Computer for SSL Communication
- CHMP is a Canon proprietary protocol.

DRX settings

When enabled, data is received intermittently during network connection.

IP filtering

Allows or denies access for specific IP addresses.

Settings for both IPv4 and IPv6 addresses can be specified.

>>>> Important

If the device address for the administrator has been set to rejection by mistake, select
 Various settings on the HOME screen of the operation panel, and then select Printer settings
 Reset settings > LAN settings only in this order, and initialize network information of the printer.

After resetting, perform setup again as necessary.

• MTU

Performs the MTU settings.

Easy wireless connect settings

When set to **Auto start: ON**, the device will automatically put into the standby mode for easy wireless connect.

To prevent the device from putting into the standby mode for easy wireless connect at unintended times, set to **Auto start: OFF**.

Setting Passwords Using Remote UI

Each of passwords for administrator and standard user can be set.

When logging on with password for administrator, all settings can be changed.

When logging on with password for standard user, some of the settings can be changed.

- Setting Administrator Password
- Setting Standard User Password

Note

- · Password can be set only when you are logged in administrator mode.
- · The standard user password is disabled by default.

Setting Administrator Password

Change the administrator password by following the steps below.

>>> Important

• The administrator password of the printer is set from the time of purchase.

To check the initial password, select **Printer information > System information** on the printer's operation panel, and select **Show password** on the displayed screen. The **Default password** value is displayed on the **System information** screen.

If the administrator password has been changed, the **Default password** value is not displayed.

- Default Administrator Password
- 1. Start up Remote UI.
 - Start up Remote UI
- 2. Select Security.
- 3. Select Administrator password setting.
- 4. Select Change administrator password.

If an administrator password is not specified, the confirmation message appears. Confirm the message and select **Yes**. When message appears again, confirm it and select **OK**.

5. Select range where administrator password is valid and select **OK**.

Remote UI and other tools

Entering the administrator password is required to change the setting items using the Remote UI or some software.

Operation panel/Remote UI/other tools

Entering the administrator password is required to change the setting items using the operation panel of the printer, the Remote UI, or some software.

6. Enter password and select **OK**.

>>>> Important

- The following character restrictions apply to the password:
 - The allowed characters are single-byte alphanumeric characters, blank space, umlaut characters, and the below characters.

- Set the password according to the password policy.
 - → Security
- 7. When completion message appears, select **OK**.

Setting Standard User Password

For restricting the function for standard user, enable the standard user mode and set a standard user password by following the steps below.

- 1. Start up Remote UI.
 - → Start up Remote UI
- 2. Select Security.
- 3. Select Standard user mode settings.
- **4.** Confirm the message and select **Yes**.
- 5. Enter password and select OK.

>>>> Important

- The following character restrictions apply to the password:
 - The allowed characters are single-byte alphanumeric characters, blank space, umlaut characters, and the below characters.

- Set the password according to the password policy.
 - Security
- **6.** When completion message appears, select **OK**.

Registering Printer's Root Certificate to Web Browser for SSL Communication

If the printer's root certificate has not been registered to the web browser, a message to warn you that the secure connection is not guaranteed may appear.

When you display Remote UI for the first time on your smartphone, tablet, or computer, download the root certificate, and then register it to the web browser. The secure connection will be confirmed and a message will not appear. However, the message may appear depending on a web browser even after you have registered the root certificate.

How to register the root certificate varies depending on the web browser.

Operating procedure may differ depending on the version of your web browser. For other web browser, refer to each help.

>>> Important

- Make sure that you have accessed to the printer IP address correctly by checking the URL field of the web browser before registering the root certificate.
- If the printer is connected via IPv6 using Windows, you need to generate a server certificate using Remote UI.

For details, see **Generating Server Certificate**.

For Microsoft Edge

- 1. Select For secure communication on Remote UI.
- 2. Select Download.

Downloading the root certificate is started.

3. If confirmation screen appears, select Open.

Certificate screen is displayed.

>>> Note

- To save the certificate file and register it, select Save. To register, select Control Panel >
 Network and Internet > Internet Options, and register the root certificate from Certificates on
 Content sheet.
- 4. Select Install Certificate.

Certificate Import Wizard screen is displayed.

- 5. Select Next.
- **6.** Select Place all certificates in the following store.
- 7. Select Browse.

Select Certificate Store screen is displayed.

- 8. Select Trusted Root Certification Authorities and OK.
- 9. Select Next on Certificate Import Wizard screen.
- 10. If Completing the Certificate Import Wizard appears, select Finish.

Security Warning screen is displayed.

11. Make sure that thumbprint on **Security Warning** screen matches printer's thumbprint.

To display the printer's root certificate thumbprint in Root cert. thumbprint (SHA-1) or Root cert.

thumbprint (SHA-256), select Printer information on the HOME screen of the operation panel, and then select System information.

- **12.** If thumbprint on **Security Warning** screen matches printer's thumbprint, select **Yes**.
- **13.** Select **OK** on **Certificate Import Wizard** screen.

The root certificate registration is completed.

For Safari

- 1. Select For secure communication on Remote UI.
- 2. Select Download.

Downloading the root certificate is started.

3. Open the downloaded file.

Keychain access starts up and Add Certificates screen is displayed.

4. Select Add.

Information on the certificate is displayed.



- You can also add the certificate by selecting Show Certificate, checking certificate name to add, and then selecting the same certificate on Keychain access.
- **5.** Make sure that fingerprint of certificate detail information matches printer's thumbprint.

To display the printer's root certificate thumbprint in Root cert. thumbprint (SHA-1) or Root cert.

thumbprint (SHA-256), select **Printer information** on the HOME screen of the operation panel, and then select **System information**.

6. If fingerprint of certificate detail information matches printer's thumbprint, display information on certificate from the menu or by double-clicking the certificate, and select Always Trust on Trust.

The root certificate registration is completed.

Note

• If a password is set on your device, entering a password may be required.

For Chrome on Android

- 1. Select For secure communication on Remote UI.
- 2. Select Download.

Downloading the root certificate is started and then **Name the certificate** screen is displayed.

3. As entering the root certificate name is required, enter an arbitrary certificate name and select **OK**.

The root certificate registration is completed.

>>> Note

• If PIN or password is not set as security type, the attention screen may appear. Select **OK**, and then set the security type to PIN or password.

After Root Certificate Registration

We recommend that you make sure that the correct root certificate has been registered.

To make sure that the correct root certificate has been registered, make sure that thumbprint of certificate information matches printer's thumbprint. Follow the steps below.

>>> Note

- Some Android devices cannot be checked the thumbprint of a registered route certificate.
- 1. From Settings menu on your device, select Security, Trust credentials, and USER.

The list of downloaded certificates appears.

2. Select downloaded certificate.

The certificate information appears.

3. Make sure that thumbprint of certificate information matches printer's thumbprint.

To display the printer's root certificate thumbprint in Root cert. thumbprint (SHA-1) or Root cert.

thumbprint (SHA-256), select Printer information on the HOME screen of the operation panel, and then select System information.

4. If thumbprint of certificate information screen matches printer's thumbprint, select **OK**.

The root certificate registration is completed.

If the message to warn you that the secure connection is not guaranteed appears when you select **Log in** on Remote UI after registering the root certificate, restart the web browser. The message will not appear on the web browser.

>>> Note

 Depending on the Android device, a warning may appear even after registering the proper root certificate.

For Mobile Safari on iOS

- 1. Select For secure communication on Remote UI.
- 2. Select Download.

Downloading the root certificate is started and then Install Profile screen is displayed.

3. Select Install.

Warning screen is displayed.

Note

- If a password is set on your device, entering a password may be required.
- 4. Select Install.
- 5. Select Install on displayed dialog.

The root certificate registration is completed.

Registering Printer's Root Certificate to Local Computer for SSL Communication

To use Device Management Console or Accounting Manager, etc. when you connect the printer to a computer using SSL encrypted communication, you need to register (import) the printer's root certificate to your computer.

Procedure to register the certificate varies depending on your operation environment.

>>> Important

 If the printer is connected via IPv6 using Windows, you need to generate a server certificate using Remote UI.

For details, see **Generating Server Certificate**.

Operation procedure may differ depending on your OS version.

For Windows 11/Windows 10/Windows 8.1

The procedure below describes how to import a root certificate in Windows 11/Windows 10/Windows 8.1.

- 1. Start up Remote UI.
 - → Start up Remote UI
- 2. Select For secure communication.

>>> Note

- · You can download a certificate from Status Monitor.
 - **1.** Open status monitor.

Open the Printing preferences, and select Status Monitor... on Main.

2. Download a certificate.

Select Download Security Certificate from the Remote UI menu.

3. Select Download.

The root certificate will be downloaded.

4. When download confirmation screen is displayed, select **Open**.


The **Certificate** screen appears.

5. Select Install Certificate.

The Certificate Import Wizard screen appears.

6. Select Local Machine.

1. Select Local Machine on the startup screen of Certificate Import Wizard.

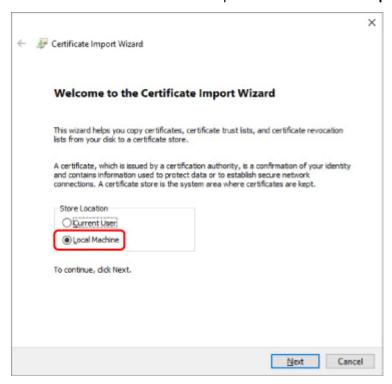

- 2. Select Next.
- 3. Select Yes on the displayed screen.

The Certificate Store screen appears.

- 7. Select Place all certificates in the following store.
- 8. Select Trusted Root Certificate Authorities.
 - 1. Select Browse to open the Select Certificate Store screen.
 - 2. Select Trusted Root Certificate Authorities from the list and select OK.
 - 3. Select Next on the Certificate Store screen.
- 9. Select Finish.

When the **Completing the Certificate Import Wizard** screen appears, check the settings and select **Finish**.

For Windows 7

The procedure below describes how to import a root certificate in Windows 7.

>>>> Important

• Be sure to create a certificate snap-in before importing a root certificate.

The root certificate will be registered to the local user if you import it without creating a certificate snap-in.

Creating Certificate Snap-in


1. Start up Microsoft Management Console.

Enter MMC on Search programs and files in the Start menu and press the Enter key.

- 2. Select Yes on displayed screen.
- 3. Select Add/Remove Snap-in from File menu.

The Add or Remove Snap-ins screen appears.

- 4. Add Certificate snap-in.
 - 1. Select Certificates from Available snap-ins list and select Add.
 - 2. Select Computer account for This snap-in will always manage certificates for on the Certificates snap-in screen and select Next.
 - 3. Select Local computer on the Select computer screen and select Finish.

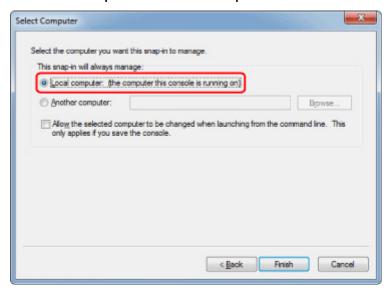

4. Select **OK** on the **Add or Remove Snap-ins** screen.

Downloading Certificate

- **1.** Start up Remote UI.
 - ➡ Start up Remote UI
- 2. Select For secure communication.



- You can download a certificate from Status Monitor.
 - 1. Open status monitor.

Open the **Printing preferences**, and select **Status Monitor...** on **Main**.

2. Download a certificate.

Select Download Security Certificate from the Remote UI menu.

- 3. Select Download.
- 4. Select Save.

Importing Certificate

- 1. Open Certificate Import Wizard.
 - 1. On the left window, open Trusted Root Certificate from Certificate on Console Root.
 - 2. Right-click Certificates and select Import from All tasks.
- 2. Specify certificate file to import.
 - 1. Select Next.
 - 2. Specify the certificate file to import on File name and select Next.
- **3.** Specify certificate store.
 - 1. Select Place all certificates in the following store.
 - 2. Select Trusted Root Certificate Authorities for Certificates Store.
- **4.** Finish certificate import wizard.
 - 1. Select **Next** and check the specified settings.
 - 2. Select Finish to finish the wizard.
 - 3. Select **OK** on the displayed screen.

Checking Imported Certificate

Make sure the imported certificate has been registered to your computer.

1. Display certificate list.

On the left window of Microsoft Management Console, select **Console Root > Certificates (Local Computer) > Trusted Root Certificate Authorities** in this order, and Select **Certificates** to display the certificate list.

2. Check registered certificate.

Make sure the imported certificate name is displayed on the list.

Note

 Make sure you can see the registered certificate from Current user by creating the Current user snap-in.

>>> Note

 When you finish Microsoft Management Console, a message asking you whether to save the console setting. If you continue to apply the same settings next, select Yes to save.

For macOS

The procedure below describes how to import a root certificate in macOS.

- 1. Start up Remote UI.
 - **➡** Start up Remote UI
- 2. Select For secure communication.
- 3. Select Download.

The root certificate will be downloaded.

4. Open downloaded certificate file.

When the download procedure is completed, a downloaded item pops up on the right of the screen.

Double-click the downloaded certificate on the list starts up **Keychain Access** and the **Add Certificates** screen appears.

Note

- If the downloaded item does not pop up, select the **Show Downloads** button on the right.
- Selecting the magnifying glass icon on the right of download list displays the folder containing the certificate.

5. Select Add.

Select the destination for the certificate on Keychain.

Selecting Add displays information on the certificate.

Note

- You can add the certificate by selecting the same certificate on Keychain Access. Check the name of certification to add after selecting View Certificates.
- 6. Check certificate.

Make sure the fingerprint of certificate shown on **Details** corresponds with the root certificate thumbprint of the printer.

To display the printer's root certificate thumbprint in Root cert. thumbprint (SHA-1) or Root cert.

thumbprint (SHA-256), select Printer information on the HOME screen of the operation panel, and then select System information.

7. Select Always Trust.

If the fingerprint of certificate detail information matches printer's thumbprint, display information on certificate from the menu or by double-clicking the certificate, and select **Always Trust** on **Trust**.

The root certificate has been registered.

>>>> Note

• Entering the password may be required if you specify it for your printer.

Generating Server Certificate

When you use SSL connection via IPv6 network, you need to generate an IPv6 server certificate using the printer.

Generate the server certificate from Remote UI.

Follow the procedure below.

- 1. Checking Printer's IP Address
- 2. Generating Server Certificate
- 3. Checking Generated Server Certificate

>>> Important

If you generate an IPv6 server certificate, a warning message may appear if you are using Remote UI.
 To reset the IPv6 server certificate, select Security > TLS server settings > Delete key and certificate in this order, and select OK on the displayed screen.

Checking Printer's IP Address

- 1. Select LAN settings on the HOME screen.
- 2. Select the enabled LAN.

Diagonal lines are displayed for disabled LAN icons.

3. Check the value on IPv6 link-local address.

Write down the value on **IPv6 link-local address** for your reference when you generate a server certificate.

Generating Server Certificate

- 1. Start up Remote UI.
 - ➡ Start up Remote UI
- 2. Select Security.
- 3. Select TLS server settings.
- 4. Select Generate key and certificate.
- 5. Select Generate self-signed cert.
- 6. Specify each setting item.

· Key algorithm

Specify the signature algorithm and key information.

· Specify the expiration date.

Enter the date you generated the server certificate on **Valid from**.

Enter the date the server certificate expires on Valid to.

• Enter the common name.

On Common name, enter the IPv6 link-local address you checked in abbreviated form.

>>> Note

- When you enter the common name, add [] to each end of the abbreviation value of the printer's IPv6 address.
- Do not use a comma or make a space for the common name.

7. Select Next.

Enter Country, State or province, Locality, Organization and Organizational unit as required.

Enter the same information in **Subject Alternative Names** as in **Common name**.

8. Select Generate.

The server certificate starts to be generated.

When the server certificate has been generated, **Generated a self-signed certificate.** appears.

9. Select Restart LAN.

LAN will be restarted.

When LAN has been restarted, **Printer status** on Remote UI appears.

Note

• If you cannot access to Remote UI after you restart LAN, reload your web browser.

Checking Generated Server Certificate

- 1. Select Security on Remote UI.
- 2. Select TLS server settings.

3. Select Check key and certificate.

Make sure the issuer of the root certificate is displayed on **Issued by**, and the value you entered is displayed on **Common name** on **Subject**.

Network Setting

- Printer Connection Methods
 - Wi-Fi Connection
 - Wireless Direct Connection
 - Wired Connection
 - USB Connection
- Default Network Settings
- Another Printer Found with Same Name
- Printing Network Settings
- Countermeasures against Unauthorized Access
- Network Status and Troubleshooting
- Checking Printer Connection Status Using Wi-Fi Connection Assistant
- Sharing the Printer on a Network (Windows)
 - Setting Up a Shared Printer
 - Restrictions on Printer Sharing
- Sharing the Printer on a Network (macOS)
 - Settings on Print Server
 - Settings on Client PC
 - Restrictions on Printer Sharing

Printer Connection Methods

4 connection methods are available on the printer.


• Wi-Fi Connection




• Wireless Direct Connection



• Wired Connection

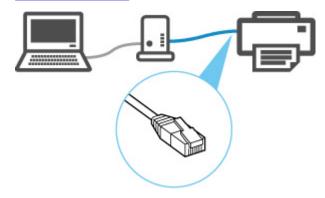

USB Connection

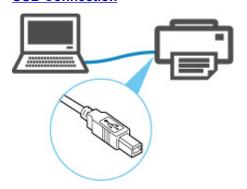

The printer cannot use a wired LAN connection simultaneously with a Wi-Fi or wireless direct connection.

When connecting another device while the devices are already connected to the printer, connect using a method other than the above.

➡ Restrictions

>>> Important

• If you connect a device connected to the Internet via a wireless router to the printer that is in the wireless direct, the connection between the device and wireless router will be disabled. In that case, the connection of the device may switch to a mobile data connection automatically depending on your device. Transmission fees for connecting to the Internet using a mobile data connection apply.


Wi-Fi Connection

>>>> Important

• If printer is performing cleaning, print head alignment, or other processes, wait for the process to finish, before starting setup.


Note

- Refer to the following notes when connecting to Wi-Fi.
 - Notes on Wi-Fi Connection
 - 1. Press the **HOME** button to display the HOME screen.

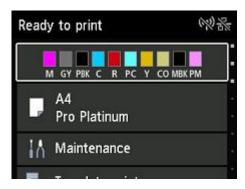

Note

- If an error screen is displayed, press the **OK** button, and then press the **HOME** button.
- 2. Select LAN settings on the HOME screen.

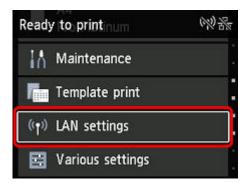

3. Select Wi-Fi.



4. Select Wi-Fi setup.



5. Select a connection method below.

Easy wireless connect

Set wireless router information to the printer directly from a device (such as a computer), without operating the wireless router

Easy wireless connect may take some time. Internet connection may become temporarily unavailable during setup.

Easy wireless connect is not available on Windows 10 in S mode or Windows 11 in S mode. Select other connection type.

Manual connect

Connect to wireless router using a password

WPS


Connect to a WPS-compatible wireless router

WPS (PIN Code) Connection

A wireless connection can also be set up by using the WPS PIN code method

WPS Connection

1. Select WPS (Push button method).

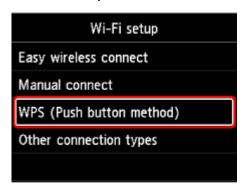

2. Press the OK button.



3. Press and hold the WPS button on the wireless router.

Note

- For more on pressing the WPS button, see the wireless router manual.
- **4.** Press the **OK** button on the printer within 2 minutes.



5. When the screen on the below appears, press the **OK** button.



6. Press the **HOME** button.

The network connection setup is now complete.

Once connection is complete, appears on the screen.

If performing setup with software, return to the software and proceed with the installation.

If performing setup without using computer, smartphone, etc.

Download and install software.

Go to the download site

After installing the software, start the software, and then follow the on-screen instructions to proceed with setup.

If performing setup using computer, smartphone, etc.

Windows



In the **taskbar**, click the application software you have been using for setup, and then follow the on-screen instructions to proceed with setup.

macOS




Click in the **Dock**, and then follow the on-screen instructions to proceed with setup.

Smartphone/tablet/Chromebook


Return to the app you have been using for setup on the smartphone, and then follow the on-screen instructions to proceed with setup.

WPS (PIN Code) Connection


1. Select Other connection types.

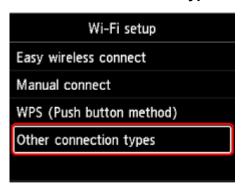

2. Select WPS (PIN code method).

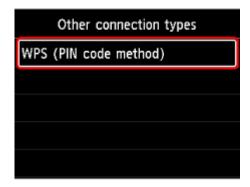

3. Follow the on-screen instructions on a computer to set a PIN code on the wireless router.

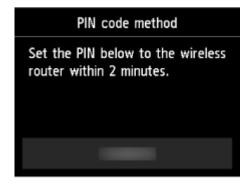

4. When the screen on the below appears, press the **OK** button.



5. Press the **HOME** button.

The network connection setup is now complete.

Once connection is complete,



appears on the screen.

If performing setup with software, return to the software and proceed with the installation.

If performing setup without using computer, smartphone, etc.

Download and install software.

Go to the download site

After installing the software, start the software, and then follow the on-screen instructions to proceed with setup.

If performing setup using computer, smartphone, etc.

Windows



In the **taskbar**, click the application software you have been using for setup, and then follow the on-screen instructions to proceed with setup.

macOS




Click in the **Dock**, and then follow the on-screen instructions to proceed with setup.

Smartphone/tablet/Chromebook

Return to the app you have been using for setup on the smartphone, and then follow the on-screen instructions to proceed with setup.

Manual connect

1. Select Manual connect.

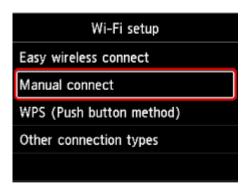

2. Select your wireless router.

If you select a Wi-Fi router name, proceed to step 8 and continue with the settings.

If you select "Directly enter the wireless router name", proceed to step 3 and continue with the settings.

If **"Failed to connect to the wireless router."** appears, see <u>"Failed to connect to the wireless router."</u> Appears.



3. Press the OK button.



4. Enter the wireless router name (SSID). Text entry is case-sensitive.




If you don't know your wireless router name, see the wireless router manual or contact its manufacturer.

5. After entry, select **OK** on the keyboard.



- **6.** Make sure the wireless router name (SSID) is correct.
- 7. Press the **OK** button.

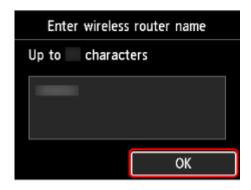

8. The screen below will appear.

If **"Connected to the wireless router."** appears, the network does not require a password. Continue from step 13.



- 9. Press the OK button.
- **10.** Enter the password. Text entry is case-sensitive.



If you don't know the password for your wireless router, see the wireless router manual or contact its manufacturer.

11. After entry, select **OK** on the keyboard.



12. Press the OK button.




13. When the screen on the below appears, press the **OK** button.



14. Press the **HOME** button.

The network connection setup is now complete.

Once connection is complete,

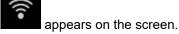

If performing setup with software, return to the software and proceed with the installation.

If performing setup without using computer, smartphone, etc.

Download and install software.

Go to the download site

After installing the software, start the software, and then follow the on-screen instructions to proceed with setup.

If performing setup using computer, smartphone, etc.

Windows



In the **taskbar**, click the application software you have been using for setup, and then follow the on-screen instructions to proceed with setup.

macOS




Click in the **Dock**, and then follow the on-screen instructions to proceed with setup.

Smartphone/tablet/Chromebook

Return to the app you have been using for setup on the smartphone, and then follow the on-screen instructions to proceed with setup.

Easy wireless connect

1. Select Easy wireless connect.

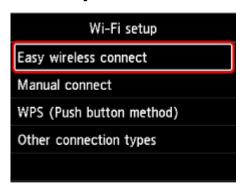

2. Select Start.



3. When the printer preparation is complete, the screen below appears.



4. Return to the application software and proceed with the setup.

If performing setup without using computer, smartphone, etc.

Download and install software.

Go to the download site

After installing the software, start the software, and then follow the on-screen instructions to proceed with setup.

If performing setup using computer, smartphone, etc.

Windows



In the **taskbar**, click the application software you have been using for setup, and then follow the on-screen instructions to proceed with setup.

macOS



Click in the **Dock**, and then follow the on-screen instructions to proceed with setup.

Smartphone/tablet/Chromebook

Return to the app you have been using for setup on the smartphone, and then follow the on-screen instructions to proceed with setup.

Wireless Direct Connection

You can connect devices (e.g. computer, smartphone, or tablet) to the printer by two methods below.

- Wireless connection (connecting devices via a wireless router)
- Direct wireless connection (connecting devices directly without a wireless router)

This section describes Wireless Direct, which allows you to print by connecting the devices to the printer directly.

>>> Important

- You can connect up to 5 devices to the printer at the same time with Wireless Direct.
- Check the usage restrictions and connect the printer to the Wireless Direct.
 - Restrictions

Connecting a smartphone/tablet/computer to the printer



1. Enable Wi-Fi function on smartphone/tablet/computer.

Enable Wi-Fi in the Settings menu on your smartphone/tablet/computer.

For instructions on enabling the Wi-Fi function, refer to the instruction manual for your smartphone/ tablet/computer.

- 2. Select LAN settings on the HOME screen.
- 3. Select Wireless Direct.
- 4. Select Connect to smartphone.
- **5.** Select **iPhone/iPad** to connect with an iPhone/iPad, **Android device** to connect with an Android device, and **Others** to connect with other device.
 - · iPhone/iPad
 - 1. Select QR Code.
 - 2. Scan the displayed QR code with the iPhone/iPad standard camera app or smartphone/



The iPhone/iPad is connected to the printer.

Note

• If the QR code cannot be read, press the **Back** button in the screen displayed QR code and connect the printer from **Connect to smartphone** > **Others**.

· Android device

- 1. Select QR Code.
- 2. Scan the displayed QR code with the Android device in one of the following ways.
 - Select network and Wi-Fi on the setting of Android device. Select QR code icon to the right of the Add network at the bottom of the list of Wi-Fi connections and scan the QR code.
 - Scan the displayed QR code with the Android standard camera app or smartphone/



tablet app

• Scan the displayed QR code with a QR code reading app.

The Android device is connected to the printer.

Note

- Wireless Direct using QR code can be used with Android 5.0 or later.
- It is available in Android 10 or later to scan QR code from setting and read QR code with the Android standard camera.
- · Depending on the smartphone/tablet, QR code may not be readable.
- If the QR code cannot be read, press the **Back** button in the screen displayed QR code and connect the printer from **Connect to smartphone** > **Others**.

Others

1. Select Next.

Network name (SSID) and Password are displayed.

Note

- To show the password, select Show password. To hide the password, select Hide password.
- The password is required when connecting smartphone/tablet/computer to the printer.
- 2. Select "DIRECT-XXXX- ModelName" ("X" represents alphanumeric characters) on your smartphone/tablet/computer.
- 3. Enter **Password** on smartphone/tablet/computer.

The smartphone/tablet/computer is connected to the printer.

>>> Note

If the printer is set to display a confirmation screen in Connection request
 confirmation of Changing Wireless Direct Setting, when the wireless direct compatible
 device connects to the printer, a confirmation screen asking for permission to connect
 is displayed on the printer operation panel.

Make sure the name on the operation panel is the same as that of your wireless communication device and select **Yes**.

You can print from your smartphone or tablet by installing the App. Download it from App Store and Google Play.

- For iOS device
- For Android device

Changing Wireless Direct Setting



Change the settings for the Wireless Direct following the procedure below.

1. Select LAN settings on the HOME screen.

2. Select Wireless Direct.

Note

• To change the Wireless Direct settings, you need to enable Wireless Direct in advance.

Select **Enable/disable Wireless Direct** on the menu screen displayed when selecting **Wireless Direct** and enable Wireless Direct.

3. Select a setting item.

Scroll down if necessary.

See settings

The setting values for using the printer with Wireless Direct are displayed.

Change network name (SSID)

Change the identifier (SSID) for Wireless Direct.

The identifier (SSID) is the printer's name (device name) displayed on a Wi-Fi Direct compatible device.

Follow the procedure below to change the identifier (SSID).

- To set manually
 - 1. Select the displayed identifier (SSID).
 - 2. Change using the keyboard that appears.
 - 3. When you have finished making changes, select **OK**.
- To set automatically

- 1. Select Auto update.
- 2. Select Yes.

You can check the updated setting.

>>> Note

 To show the password, select Show password. To hide the password, select Hide password.

Change password

Change the password for Wireless Direct.

- To set manually
 - 1. Select Change manually.
 - 2. Select the displayed password.
 - 3. Enter the new password.

Change using the keyboard that appears.

- 4. When you have finished making changes, select **OK**.
- To set automatically
 - 1. Select Auto update.
 - 2. Select Yes.

You can check the updated setting.

>>> Note

 To show the password, select Show password. To hide the password, select Hide password.

· Connection request confirmation

Change the confirmation screen setting when a Wi-Fi Direct compatible device is connecting to the printer.

If you want the printer to display the screen to inform you a Wi-Fi Direct compatible device is connecting to the printer, select **ON**.

>>> Important

 To prevent an unauthorized access, we recommend you should select the setting to display the confirmation screen.

· 2.4GHz/5GHz Switch

Change the frequency used for Wireless Direct.

While using Wireless Direct (2.4 GHz), the connection of nearby Bluetooth speakers may be interrupted from time to time. In such a case, switching to 5 GHz will reduce the trouble.

>>> Note

• If you change the Wireless Direct setting of the printer, also change the wireless router setting of the device.


Wired Connection

>>> Important


• If printer is performing cleaning, print head alignment, or other processes, wait for the process to finish, before starting setup.

Note


- Refer to the following for notes when connecting to a wired LAN.
 - Notes on Wired Connection
 - **1.** Press the **HOME** button to display the HOME screen.

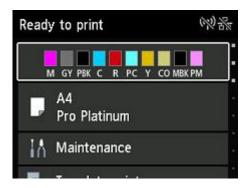


2. You will need an Ethernet cable (sold separately).

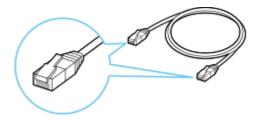


3. Remove the Cap (B) from the port located on the left side at the back of the printer.

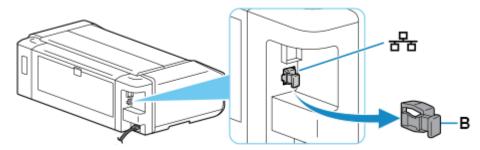

4. Connect the printer and a network device (router, etc.) with an Ethernet cable (C). Do not connect to any other port.

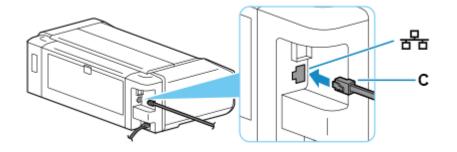


5. Select LAN settings on the HOME screen.

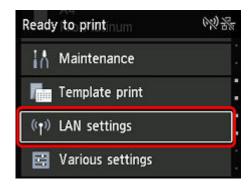

6. Select Wired LAN.



7. Select Enable/disable Wired LAN.

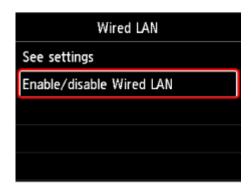

8. Select Enable.



9. Press the HOME button.

The network connection setup is now complete.

Once connection is complete, appears on the screen.

If performing setup with software, return to the software and proceed with the installation.

If performing setup without using computer, smartphone, etc.

Download and install software.

Go to the download site

After installing the software, start the software, and then follow the on-screen instructions to proceed with setup.

If performing setup using computer, smartphone, etc.

Windows



In the **taskbar**, click the application software you have been using for setup, and then follow the on-screen instructions to proceed with setup.

macOS




Click in the **Dock**, and then follow the on-screen instructions to proceed with setup.

Smartphone/tablet/Chromebook

Return to the app you have been using for setup on the smartphone, and then follow the on-screen instructions to proceed with setup.

USB Connection

Connect the printer to a computer using a USB cable.

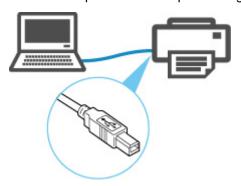


➡ What Is USB Cable?

In USB connection, the printer is connected one-on-one to the computer.

If your computer is connected to LAN, you can use the printer with other devices by enabling the sharing setting on your computer.

>>> Note

• You can connect the printer to a computer via USB even when the printer is already connected to another one via wired LAN.

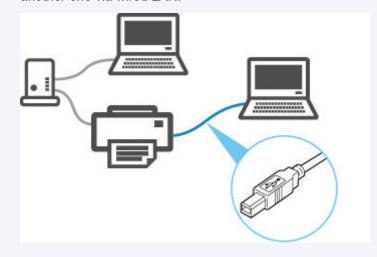

Default Network Settings

LAN Connection Defaults

Item	Default
Enable/disable Wired LAN	Disable
Network name (SSID)	BJNPSETUP
Wi-Fi security	Disable
IP address (IPv4)	Auto setup
IP address (IPv6)	Auto setup
Set printer name *	xxxxxxxxxx
Enable/disable IPv6	Enable
Enable/disable WSD	Enable
Timeout settings	15 minutes
Enable/disable Bonjour	Enable
Service name	Canon ModelName
LPD settings	Enable
RAW settings	Enable
LLMNR settings	Enable
Wi-Fi DRX settings	Enable
Wired LAN DRX settings	Enable

("XX" represents alphanumeric characters.)

► LAN settings

Wireless Direct Defaults

Item	Default
Network name (SSID)	DIRECT-abXX-YY-NNNN *1
Password	ZZZZZZZZZZ *2
Wi-Fi security	WPA2-PSK (AES)
Connection request confirmation	Displayed

^{*} Default value depends on printer. To check value, use operation panel.

2.4GHz/5GHz Switch	2.4GHz

^{*1 &}quot;ab" is specified at random and "XX" represents last two digits of printer's wireless MAC address. "YY" is alphanumeric, and "NNNN" means your printer model.

^{*2} The password is specified automatically when the printer is turned on for the first time.

Another Printer Found with Same Name

When the printer is found during setup, other printers with the same name may appear on the results screen.

Select a printer with checking the printer settings against those on detection result screen.

Check the printer's MAC address or serial to select the correct printer from the results.

>>>> Note

• Serial number may not appear on result screen.

Check the printer's MAC address and serial number by selecting **Printer information** > **System information**.

→ Printer information

Printing Network Settings

Use the operation panel to print the printer's current network settings.

>>> Important

• The network settings printout contains important information about your network. Handle it with care.

Items to Prepare

5 sheets of A4 or Letter-sized plain paper

- 1. Load paper.
 - ▶ Loading Paper in the Top Feed
- 2. Select LAN settings on the HOME screen.
- 3. Select Print details.
- 4. Select Yes on displayed screen.
- **5.** Select **ON** or **OFF** on displayed screen.

The printer starts printing network settings information.

Countermeasures against Unauthorized Access

This section describes countermeasures against an unauthorized access to the printer from outside. When you use the printer via a network or you are an administrator, we recommend you read this section before using the printer.

Four countermeasures below can be helpful against an unauthorized access.

- Specify a Private IP Address
- Restrict Communication Using Firewall or Wi-Fi Router
- Specify a Password for the Printer
- Apply higher security level for Wi-Fi connection

Note

• As the setting procedure described below is an example, it may be different from that of your printer. For details, refer to your printer's manual.

Specify a Private IP Address

An IP address is a numeric label assigned to each device on the network. There are two types of IP address. One is used for internet connection ("global IP address"), and the other is used for a local area network such as an inhouse LAN ("private IP address").

If a global IP address is specified for the printer, many and unspecified users on internet can access to the printer. As a result, you will face an increased risk of information leakage caused by an unauthorized access from outside. On the other hand, if a private IP address is specified for the printer, users who can access to the printer are confined to those on a local area network such as an inhouse LAN. Therefore, we recommend you specify a private IP address for the printer.

The range of addresses used as a private IP address is shown below. Make sure whether a private IP address is specified for your printer.

Range of private IP address

- 10.0.0.0 to 10.255.255.255
- 172.16.0.0 to 172.31.255.255
- 192.168.0.0 to 192.168.255.255

Procedure to check the IP address

Select **Setup > Device settings > LAN settings** on your printer to select a network connection method and check the IP address. For the procedure to check and specify the IP address, refer to your printer's manual.

Note

• Establishing an environment to protect an access from outside using a firewall can reduce a risk of an unauthorized access even though a global IP address is specified for your printer.

Restrict Communication Using Firewall or Wi-Fi Router

Firewall is a system which prevents an unauthorized access from an external network user to protect an inhouse network against attack or intrusion.

Firewall enables your network to be protected against an unauthorized access by restricting a communication from the specific external IP address which seems to have a risk.

A home use Wi-Fi router has a similar function. Be careful when you change the settings.

Specify a Password for the Printer

Even if a malicious third party accesses to your printer by any chance, you can reduce a risk of information leakage drastically by specifying a password to protect various information on your printer.

In addition, though the printer can be protected by specifying a password, it is important to manage the specified password for security. Manage your password referring to the four points below. For details, refer to your printer's manual.

- · Be sure to change the default password.
- · Change the password periodically.
- Do not use a password easy to guess for a third party.
- · Do not tell a third party about the specified password casually.

Note

- A password is not specified for some printers at the time of purchase. In this case, specify the password for the printer.
- · A password cannot be specified for some printers.

Password management using Remote UI (User Interface)

Remote UI is a software to access to the printer via a network by using a web browser. You can check the printer status or settings on Remote UI, which allows you to perform operations almost the same as those you can on the operation panel of the printer.

Entering the printer's IP address or host name on the web browser displays the portal page of Remote UI.

For the procedure to start up or operations of Remote UI, refer to your printer's manual.

>>> Important

Do not access to a website while you are using Remote UI on the web browser.

In addition, be sure to close the web browser when you leave your seat before you finish performing settings, or when you have finished performing settings.

Apply higher security level for Wi-Fi connection

When you use the printer via Wi-Fi, we recommend you apply a security method with higher security level (e.g. WPA/WPA2).

For more on operations, refer to your printer's manual.

Network Status and Troubleshooting

Check the network status referring to LAN setting information on the LCD.

➡ Printing Network Settings


Network Status	What to Do
Connected normally.	If you are unable to print, check the items below:
If you are unable to print, see 1 on What to Do.	 whether the computer is connected to Wi-Fi whether the firewall of your security software is enabled whether a privacy separator, SSID separator, or Network separation function is enabled on your wireless router
	If one of the above is enabled, disable it before setup.
	whether the network name (SSID) of the printer matches that of the router to connect
	To change the network connection method (wired/wireless), change it on the printer's network setting screen.
	Note
	Turning off the band steering feature (determines the appropriate frequency band to connect to when the number of devices connected increases and the 2.4 GHz and 5 GHz frequency bands are congested) in your wireless router's settings may help.
	If the same SSID is set for both 2.4 GHz and 5 GHz, changing them to different SSIDs may enable you to connect.
	If you can't connect to the network, use a USB connection.
Wi-Fi is disabled on the printer.	Perform printer setup following the instructions of the manual.
Wired LAN connec-	Make sure the printer is connected to the router with the LAN cable.
tion is disabled.	If the LAN cable is loose, connect the cable properly.
	If the LAN cable is connected to the WAN side of the router, connect the cable to the LAN side of the router.
	Make sure the network devices (e.g. hub or router) are turned on.
IP address is not as-	If you specify the printer's IP address automatically, enable DHCP on the router.
signed.	If you specify the printer's IP address manually, the address is disabled because it is out of the valid range. You specified (0.0.0.0) as the IP address, for example.
	Specify the valid IP address.
The default gateway	Check the items below to communicate by hopping routers (e.g. using a cloud application).
is not specified.	Make sure the device specified as the default gateway is turned on.
	Specify the default gateway address correctly.
Cannot connect to	Check the status of the printer, network devices (e.g. wireless router), or smartphone/tablet.
the specified net-	If they are turned off, turn them on.
work.	Make sure wireless signal is strong.
	Monitor signal status and move the printer and wireless router as necessary.

	The security key specified for the wireless router may not match that you entered. The security key is case-sensitive. Enter the correct security key.
Make sure wireless signal is strong.	Make sure the printer is not placed too far away from the wireless router. Monitor signal status and move the printer and wireless router as necessary.
The number of connected clients reaches the upper limit.	Wireless Direct does not allow more than 5 devices to be connected. If you add a device to connect, disconnect a device you do not use before adding the device.
The signal to noise ratio (S/N ratio) is low.	There is a lot of noise from other devices. Move the printer apart from other devices.
A link local address is assigned.	 Perform printer setup again. The security key specified for the wireless router may not match that you entered. The security key is case-sensitive. Enter the correct security key.
The specified net- work name (SSID) is left default value.	The network name (SSID) is not specified. Enter the network name (SSID) specified for the destination.

Sharing the Printer on a Network (macOS)

When multiple computers are being used in the network environment, you can share the printer connected to one computer with the other computers.

Before carrying out the setup for printer sharing, select **Network** from **System Settings**, and check whether the network settings have been set.

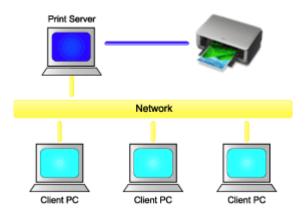

This section describes the procedure for sharing a printer among Mac.

• Settings on Print Server

This section describes how to set up a computer that connects with this printer.

• Settings on Client PC

This section describes the procedure for setting a computer that uses this printer though a network. When you execute print, the data is sent to the printer through the print server system.

Related Topic

Restrictions on Printer Sharing

Settings on Print Server

When you use the printer on a network, set up the printer driver for sharing on the print server system.

The procedure for setting up the print server systems is as follows:

- 1. <u>Install the printer driver</u> on the print server system
- 2. Check that the printer to be used has been added

Open System Settings, and select Printers & Scanners.

The printer list displays the printers that are connected to the computer.

3. Set sharing

Turn on Share this printer on the network.

Note

• Depending on the environment you are using, a message prompting you to restart the computer may be displayed. To complete the installation properly, restart the computer.

The setup on the print server system is complete. Next, set up the client systems.

Settings on Client PC

After setting up the print server system, set up the client system.

The procedure for setting up the client systems is as follows:

- 1. Install the printer driver on the client systems
- **2.** Display the printer list

Open **System Settings**, and select **Printers & Scanners**. Click **Add Printer**, **Scanner or Fax...** to display the printer list.

3. Add a printer to be shared

Select a shared printer displayed in the printer list, and then click **Add**.

The setup on the client systems is now completed.

Note

• The print procedures are the same as when the computer is connected directly to the printer with a USB cable

At the Page Setup dialog, select the printer that is connected to the print server to be used.

Restrictions on Printer Sharing

These are restrictions that apply when you are using a printer in a network environment.

- Install the same version of the printer driver in the print server system and the client systems. You can download the latest printer driver from our web site.
- Use printer sharing with users who have the administrator privilege.
- Depending on how the computer is connected with the printer, the computer may not be able to access the function information that was set on the printer and display the correct settings.
- Media information on the printer driver cannot be changed when using a client machine.

Maintenance

Adjustments for Better Print Quality

- Maintenance Procedure
- Checking for Nozzle Clogging
- Cleaning the Print Head
- Deep Print Head Cleaning
- Adjustment to Straighten Lines and Align Colors

Replacing Consumables

- Replacing Ink Tanks
- Checking Ink Level

Cleaning the Printer

- Cleaning the Printer Exterior
- Cleaning Paper Feed Rollers
- Performing Bottom Plate Cleaning

Performing Maintenance Functions from Your Computer (Windows)

- Maintenance Tab Description
- Cleaning the Print Heads
- Printing a Nozzle Check Pattern

Performing Maintenance Functions from Your Computer (macOS)

- Opening Remote UI for Maintenance
- Cleaning the Print Heads
- Checking Ink Status from Your Computer
- Printing a Nozzle Check Pattern

Other Maintenance

- Transporting Your Printer
- Firmware update

Adjustments for Better Print Quality

- ➤ Maintenance Procedure
- ➤ Checking for Nozzle Clogging
- ➤ Cleaning the Print Head
- ➤ Deep Print Head Cleaning
- ➤ Adjustment to Straighten Lines and Align Colors
 - Automatic Adjustment to Straighten Lines and Align Colors
 - Manual Adjustment to Straighten Lines and Align Colors

Maintenance Procedure

If print results are blurred, colors are not printed correctly, or print results are unsatisfactory (e.g. misaligned printed ruled lines), perform the maintenance procedure below.

Important

 Do not rinse or wipe the print head and ink tank. This can cause trouble with the print head and ink tank.

Note

· Check the ink status on the HOME screen or other screens.

If the ink is running low, take appropriate action.

- → Checking Ink Level
- · Increasing the print quality in the printer driver settings may improve the print result.
 - Set Media Type, Quality, etc. (Media/Quality Tab) (Windows)
 - ➡ Changing the Print Quality and Correcting Image Data (macOS)

When the Print Results Are Blurred or Uneven:

Step1 Print the nozzle check pattern.

From the printer

Checking for Nozzle Clogging

From the computer

- Printing a Nozzle Check Pattern (Windows)
- ➡ Printing a Nozzle Check Pattern (macOS)

Step2 Examine the nozzle check pattern.

If there are missing lines or horizontal white streaks in the pattern:

Step3 Clean the print head.

From the printer

Cleaning the Print Head

From the computer

- Cleaning the Print Heads (Windows)
- ➡ Cleaning the Print Heads (macOS)

After cleaning the print head, print and examine the nozzle check pattern: ▶ Step1

If the problem is not resolved after performing from step 1 to step 3 twice:



Step4 Clean the print head deeply.

From the printer

▶ Deep Print Head Cleaning

From the computer

- Cleaning the Print Heads (Windows)
- ➡ Cleaning the Print Heads (macOS)

>>> Note

• When you have performed the procedure until step 4 and the problem has not been resolved, turn off the power and clean the print head deeply again after 24 hours.

If the problem is still not resolved, the print head may be damaged. Contact your nearest Canon service center to request a repair.

When the Print Results Are Not Even such as the Ruled Lines Are Misaligned:

Step Align the print head.

→ Automatic Adjustment to Straighten Lines and Align Colors

Checking for Nozzle Clogging

If the print is blurred or has different color threading, print a nozzle check pattern to see if each nozzle of the print head is not clogged.

Note

- · You can also check for nozzle clogging from your computer.
 - ➡ Printing a Nozzle Check Pattern (Windows)
 - Printing a Nozzle Check Pattern (macOS)
- · By default, nozzles are checked at fixed intervals.
 - → Auto maintenance settings


Items to Prepare

A sheet of A4 or Letter-sized plain paper

- 1. Load a single sheet of A4 or Letter size plain paper in the top feed.
 - ▶ Loading Paper in the Top Feed

After loading paper, the paper information registration screen for the top feed is displayed.

Select A4 or Letter for Page size and Plain paper for Type, select Register.

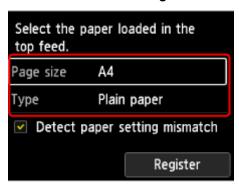

If a message is displayed on the screen, follow the directions in the message to complete registration.

Important

- The manual feed tray is not available for the nozzle check pattern print procedure. Be sure to load paper in the top feed.
- 2. Open the paper output tray gently.

Open the output tray extension gently, then pull out the paper output support.

- 3. Select Maintenance on the HOME screen.
- 4. Select Nozzle Check.


The confirmation screen will appear.

5. Select Yes.

The nozzle check pattern will be printed and two pattern confirmation screens will appear on the LCD.

6. Check the print result.

Check if there are missing lines in the pattern C or horizontal streaks in the pattern D.

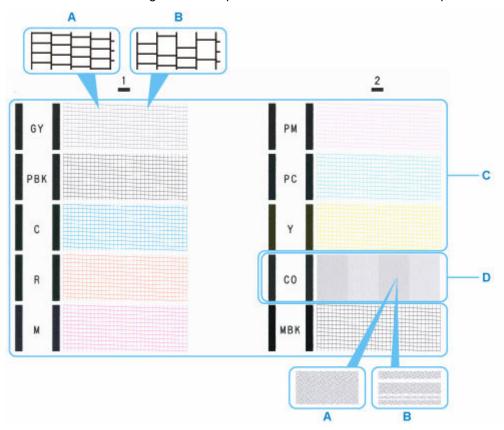


A: No missing lines/No horizontal streaks


B: Lines are missing/Horizontal streaks are present


>>>> Note

• Because CO ink is colorless, its pattern is printed over the black pattern. Check for horizontal streaks (E) in the dark gray bands of the pattern.

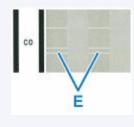

7. Select the pattern that is closer to the printed nozzle check pattern on the confirmation screen.

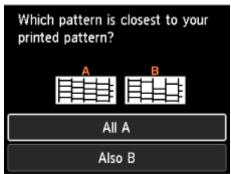

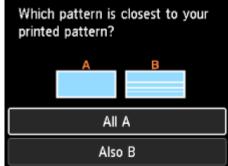

For A (no missing lines or no horizontal streaks) in both the pattern C and pattern D:

Cleaning is not required. Select **All A**, then press the **OK** button.


Confirm the message, then press the **OK** button.

The screen will return to the **Maintenance** screen.

For B (lines are missing or horizontal streaks are present) in the pattern C or pattern D, or in both patterns:

The cleaning is required. Select **Also B**, then go to next step.

If the pattern D or any color in the pattern C is not printed:

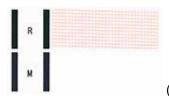

(Example: Magenta pattern is not printed)

The cleaning is required. Select **Also B**, then go to next step.

- **8.** Select **Yes** on the cleaning confirmation screen.
- **9.** Select ink group to be cleaned.
 - · All colors
 - Pattern 1: GY / PBK / C / R / M
 - Pattern 2: PM / PC / Y / CO / MBK

The printer starts cleaning the print head.

>>> Important

- · Do not perform any other operations until the printer completes the cleaning of the print head.
- **10.** Check message and select **Yes**.

A nozzle check pattern is printed and two pattern confirmation screens appear on the LCD.

11. Repeat steps 6 through 10.

>>> Important

• If there is no improvement after repeating the cleaning process twice, perform **Deep Cleaning**.

▶ Deep Print Head Cleaning

Cleaning the Print Head

Clean the print head if lines are missing or if horizontal streaks are present in the printed nozzle check pattern. Cleaning unclogs the nozzles and restores the print head condition. Cleaning the print head consumes ink, so clean the print head only when necessary.

Note

- · You can also clean the print head using the computer.
 - Cleaning the Print Heads (Windows)
 - ➡ Cleaning the Print Heads (macOS)


Items to Prepare

A sheet of A4 or Letter-sized plain paper

- 1. Load a single sheet of A4 or Letter size plain paper in the top feed.
 - ➡ Loading Paper in the Top Feed

After loading the paper, the paper information registration screen for the top feed is displayed.

Select A4 or Letter for Page size and Plain paper for Type, select Register, then press the OK button.

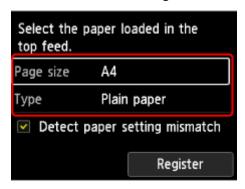

If a message is displayed on the screen, follow the directions in the message to complete registration.

>>>> Important

- The manual feed tray is not available for the nozzle check pattern print procedure. Be sure to load paper in the top feed.
- 2. Open the paper output tray gently.

Open the output tray extension gently, then pull out the paper output support.

- 3. Select Maintenance on the HOME screen.
- 4. Select Cleaning.

The confirmation screen will appear.

5. Select **Yes** on the cleaning confirmation screen.

- **6.** Select ink group to be cleaned.
 - · All colors
 - Pattern 1: GY / PBK / C / R / M
 - Pattern 2: PM / PC / Y / CO / MBK

The printer starts cleaning the print head.


>>> Important

- Do not perform any other operations until the printer completes the cleaning of the print head.
- 7. Check message and select Yes.

The nozzle check pattern will be printed.

8. Check the print result.

Check if there are missing lines in the pattern C or horizontal streaks in the pattern D.

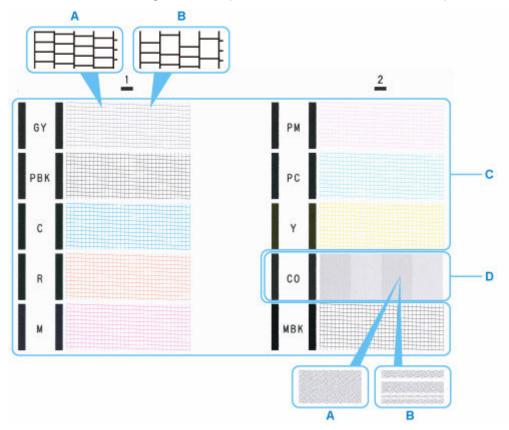

A: No missing lines/No horizontal streaks


B: Lines are missing/Horizontal streaks are present

>>>> Note

• Because CO ink is colorless, its pattern is printed over the black pattern. Check for horizontal streaks (E) in the dark gray bands of the pattern.



9. Select the pattern that is closer to the printed nozzle check pattern on the confirmation screen.

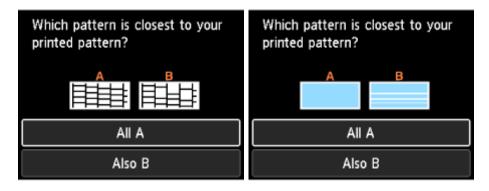

For A (no missing lines or no horizontal streaks) in both the pattern C and pattern D:

Cleaning is not required. Select **All A**, then press the **OK** button.

Confirm the message, then press the **OK** button.

The screen will return to the **Maintenance** screen.

For B (lines are missing or horizontal streaks are present) in the pattern C or pattern D, or in both patterns:

The cleaning is required. Select **Also B**, then go to next step.

If the pattern D or any color in the pattern C is not printed:



(Example: Magenta pattern is not printed)

The cleaning is required. Select **Also B**, then go to next step.

- **10.** Select **Yes** on the cleaning confirmation screen.
- **11.** Select ink group to be cleaned.

The printer starts cleaning the print head.

>>> Important

- Do not perform any other operations until the printer completes the cleaning of the print head.
- 12. Check message and select Yes.

A nozzle check pattern is printed and two pattern confirmation screens appear on the LCD.

>>> Important

- If there is no improvement after repeating the cleaning process twice, perform **Deep Cleaning**.
 - ▶ Deep Print Head Cleaning

Deep Print Head Cleaning

If print quality does not improve by the standard cleaning of the print head, clean the print head deeply. Cleaning the print head deeply consumes more ink than the standard cleaning of the print head, so clean the print head deeply only when necessary.

Note

- · You can also clean the print head deeply using the computer.
 - Cleaning the Print Heads (Windows)
 - ➡ Cleaning the Print Heads (macOS)


Items to Prepare

A sheet of A4 or Letter-sized plain paper

- 1. Load a single sheet of A4 or Letter size plain paper in the top feed.
 - ➡ Loading Paper in the Top Feed

After loading the paper, the paper information registration screen for the top feed is displayed.

Select A4 or Letter for Page size and Plain paper for Type, select Register, then press the OK button.

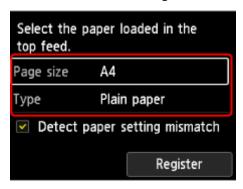

If a message is displayed on the screen, follow the directions in the message to complete registration.

>>>> Important

- The manual feed tray is not available for the nozzle check pattern print procedure. Be sure to load paper in the top feed.
- 2. Open the paper output tray gently.

Open the output tray extension gently, then pull out the paper output support.

- 3. Select Maintenance on the HOME screen.
- 4. Select Deep Cleaning.

The confirmation screen will appear.

5. Select **Yes** on the cleaning confirmation screen.

- **6.** Select ink group to be cleaned.
 - · All colors
 - Pattern 1: GY / PBK / C / R / M
 - Pattern 2: PM / PC / Y / CO / MBK

The printer starts cleaning the print head.


>>> Important

- Do not perform any other operations until the printer completes the cleaning of the print head.
- 7. Check message and select Yes.

The nozzle check pattern will be printed.

- 8. When the completion message appears, select **OK**.
- 9. Check the print result.

Check if there are missing lines in the pattern C or horizontal streaks in the pattern D.

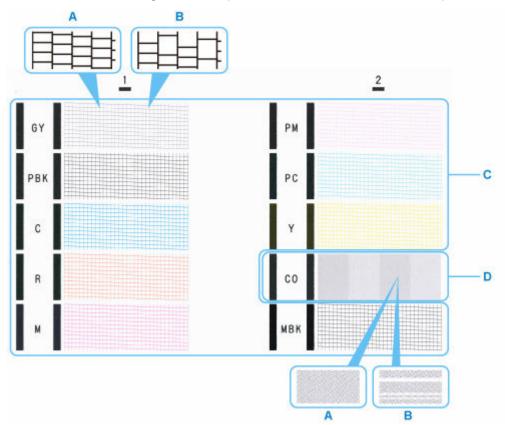


A: No missing lines/No horizontal streaks

B: Lines are missing/Horizontal streaks are present

>>> Note

• Because CO ink is colorless, its pattern is printed over the black pattern. Check for horizontal streaks (E) in the dark gray bands of the pattern.

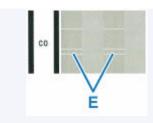

>>> Important

- If a particular color is not printed properly, replace the ink tank of that color.
 - → Replacing Ink Tanks
- If the problem is not resolved, turn off the power and clean the print head deeply again after 24 hours.

 Do not unplug the power cord when turning off the power.
- If the problem is still not resolved, the print head may be damaged. Contact your nearest Canon service center to request a repair.

Adjustment to Straighten Lines and Align Colors

- ➤ Automatic Adjustment to Straighten Lines and Align Colors
- Manual Adjustment to Straighten Lines and Align Colors

Automatic Adjustment to Straighten Lines and Align Colors

If printed vertical lines are warped or colors are out of alignment, execute **Print Head Alignment** and adjust the print head position.

Choose from Auto or Manual for adjusting the print head.

Minor warping and misaligned colors can usually be improved by executing **Auto**. If there is no improvement, perform **Manual**.

→ Manual Adjustment to Straighten Lines and Align Colors

When you execute **Auto**, the adjustment pattern is printed, and the print head position is adjusted based on the printing result automatically.





Important

- Because the results of adjustment vary depending on the type of paper used for adjustment, use the same type of paper as you will use for printing.
- This function is not available for paper with high transparency.

Items to Prepare

For A4 or Letter size paper: 2 sheets

- 1. Select
- Maintenance on the HOME screen.
- 2. Select Print Head Alignment.
- 3. Select Auto.

The confirmation screen will appear.

4. Select Yes.

The paper settings screen will appear.

- 5. Sets the paper to use.
- **6.** Load the prepared paper in the paper source specified in the message.
 - ▶ Loading Paper in the Top Feed
 - → Loading Paper in the Manual Feed Tray

If the paper source is the manual feed tray, load one sheet of paper at a time.

7. Open the paper output tray gently.

Open the output tray extension, then pull out the paper output support.

8. Press the **OK** button.

The print head alignment sheet will be printed and the print head position will be adjusted automatically.

9. When the completion message appears, press the **OK** button.

Note

- If the print results are still not satisfactory after adjusting the print head position as described above, align the print head manually.
 - → Manual Adjustment to Straighten Lines and Align Colors

Manual Adjustment to Straighten Lines and Align Colors

If printed vertical lines are warped or colors are out of alignment, execute **Print Head Alignment** and adjust the print head position.

Normally, execute Auto.

→ Automatic Adjustment to Straighten Lines and Align Colors

However, when printing on special paper or if printing is not improved after Auto, try Manual.

Manual adjustment requires you to examine the printed test pattern and enter an adjustment value.





>>> Important

• Because the results of adjustment vary depending on the type of paper used for adjustment, use the same type of paper as you will use for printing.

Items to Prepare

For A4 or Letter size paper: 1 sheet

- 1. Select Maintenance on the HOME screen.
- 2. Select Print Head Alignment.
- 3. Select Manual.

The confirmation screen will appear.

4. Select Yes.

The paper settings screen will appear.

- **5.** Sets the paper to use.
- **6.** Load the prepared paper in the paper source specified in the message.
 - ➡ Loading Paper in the Top Feed
 - ▶ Loading Paper in the Manual Feed Tray

If the paper source is the manual feed tray, load one sheet of paper at a time.

7. Open the paper output tray gently.


Open the output tray extension, then pull out the paper output support.

8. Press the OK button.


The print head alignment pattern is printed.

- **9.** When the message "Did the patterns print correctly?" appears, confirm that the pattern is printed correctly, select **Yes**.
- **10.** Confirm the message, then press the **OK** button.

The input screen for the head position adjustment values will appear.

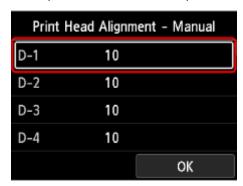


11. Look at the pattern and select the number of the pattern in each column that has straight lines.

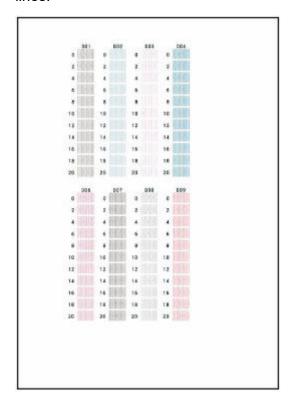

>>> Note

• Look at the pattern and pick the setting that produces the least warped vertical straight lines.

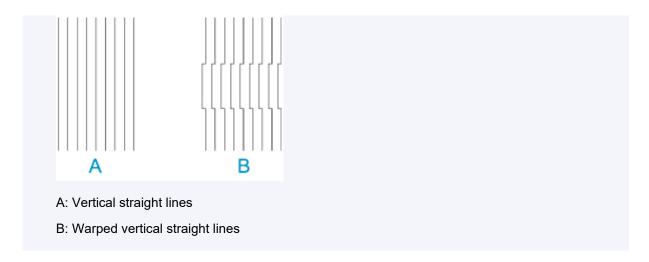

- **12.** Repeat this procedure until you finish inputting a pattern number in all columns, select **OK**. If a message is displayed on the screen, follow the directions in the message.
- **13.** When the completion message appears, press the **OK** button.

Replacing Consumables

- ➤ Replacing Ink Tanks
- ➤ Checking Ink Level

Replacing Ink Tanks

When remaining ink cautions or errors occur, the message will appear on the LCD to inform you of the error. In this state, the printer cannot print. Take appropriate action according to the message.

>>>> Important

- Prepare a new ink tank before you start replacing one.
- Replace the ink tank quickly so as not to leave the printer without an ink tank. The printer may be damaged if it is left without an ink tank, causing a problem such as clogging due to dried ink.


>>> Note

- If print results become faint or white streaks appear despite sufficient ink levels, see <u>Maintenance Procedure</u>.
- For precautionary notes on handling ink tanks, see Notes on ink tanks.

Replacing Procedure

When you need to replace an ink tank, follow the procedure below.


1. Open the top cover (A).

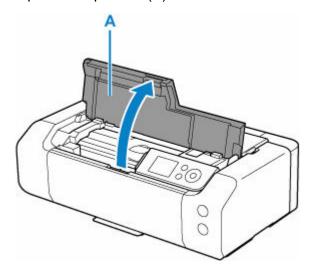

2. When message appears on LCD, press **Stop** button.

3. Select OK.

The print head holder moves to the replacement position.

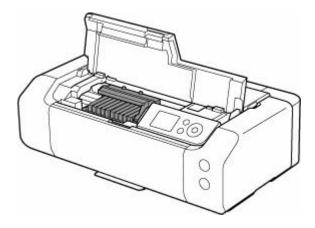


A Caution

• Do not hold the print head holder to stop or move it forcibly. Do not touch the print head holder until it stops completely.


>>>> Important

- Do not touch the metallic parts or other parts inside the printer.
- If the top cover is left open for more than 10 minutes, the print head holder moves to the right. In this case, close and reopen the top cover.
- **4.** Take a new ink tank out of its package.

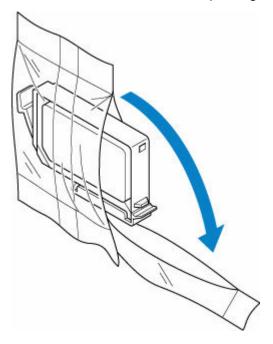

>>> Important

- Handle an ink tank carefully. Do not drop or apply excessive pressure to it.
- **5.** Remove the orange protective cap (B) from the bottom of the ink tank.

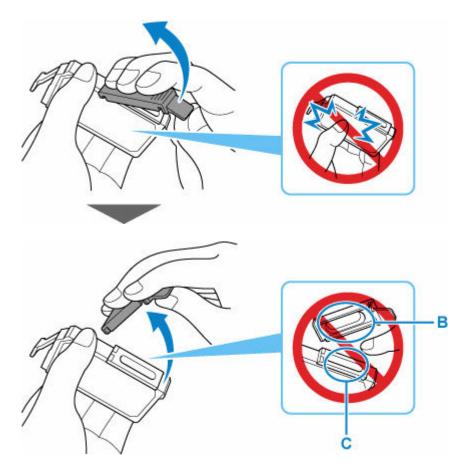


>>> Important

- Do not push the sides of the ink tank. If you push the sides of the ink tank, ink may splash.
- Do not touch the inside of the protective cap (B) or the open ink port (C). The ink may stain your hands if you touch them.
- Do not reattach the protective cap (B) once you have removed it. Discard it according to the local laws and regulations regarding disposal of consumables.

6. Remove the ink tank where the ink runs out.

Push the tab (D) and lift the ink tank to remove.

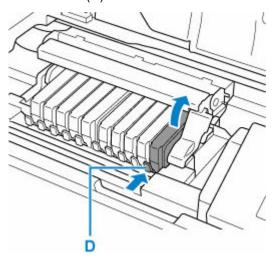

>>>> Important


- Do not touch other parts besides the ink tanks.
- · Handle the ink tank carefully to avoid staining of clothing or the surrounding area.
- Discard the empty ink tank according to the local laws and regulations regarding disposal of consumables.

Note


• Do not remove two or more ink tanks at the same time. Be sure to replace ink tanks one by one when replacing two or more ink tanks.

7. Insert the front end of the ink tank into the print head at a slant.

Make sure that the position of the ink tank matches the label.

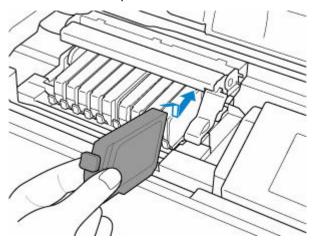

8. Press on the top of the ink tank until the ink tank snaps firmly into place.

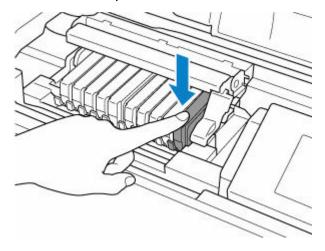

>>>> Important

- You cannot print if the ink tank is installed in the wrong position. Be sure to install the ink tank in the correct position according to the label on the print head holder.
- You cannot print unless all the ink tanks are installed. Be sure to install all the ink tanks.

9. Close the top cover.

The printer will automatically start mixing the ink. Wait until the printer stops making operating noise (it takes up to about 2 minutes or less).

Note

- If the error message appears on the LCD after the top cover is closed, take appropriate action.
- When you start printing after replacing the ink tank, the printer starts cleaning the print head automatically. Do not perform any other operations until the printer completes the cleaning of the print head.
- If the print head is out of alignment, as indicated by misaligned printed ruled lines or similar symptoms, align the print head.
 - ➡ Automatic Adjustment to Straighten Lines and Align Colors

Notes on ink tanks

>>> Important

- There may be ink around the ink holes of an ink tank you removed. Handle the ink tanks carefully during replacement. The ink may stain clothing.
- If you remove an ink tank, replace it immediately. Do not leave the printer with the ink tank removed.
- Use a new ink tank for replacement. Installing a used ink tank may cause the nozzles to clog. Furthermore, with such an ink tank, the printer will not be able to inform you when to replace the ink tank properly.
- Once an ink tank has been installed, do not remove it from the printer and leave it out in the open. This will cause the ink tank to dry out, and the printer may not operate properly when it is reinstalled. To maintain optimal printing quality, use an ink tank within six months of first use.

Note

 Color ink may be consumed even when printing a black-and-white document or when black-andwhite printing is specified. Every ink is also consumed in the standard cleaning and deep cleaning of the print head, which may be necessary to maintain the performance of the printer.


When an ink tank is out of ink, replace it immediately with a new one.

➡ Ink Tips


Checking Ink Level

You can check the remaining amount of ink on the LCD.


- 1. Select the ink status display area on the HOME screen.
 - **▶** LCD and Operation Panel

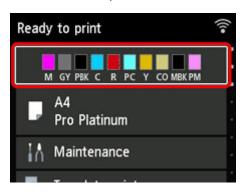

2. Check the ink status.

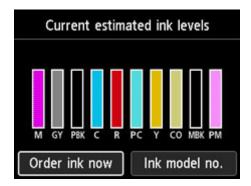

When the ink level is low, is displayed above the ink level on the LCD, and is displayed when ink runs out.

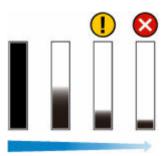

Note

- If a message is displayed indicating to check the remaining ink levels, or after tasks that consume a lot of ink such as large-format printing or head cleaning, check the remaining levels and replace ink tank as needed.
 - ➡ Replacing Ink Tanks

• Select Ink model no. > Order ink now for information on where to purchase ink.

Cleaning the Printer

- ➤ Cleaning the Printer Exterior
- ➤ Cleaning Paper Feed Rollers
- ➤ Performing Bottom Plate Cleaning

Cleaning the Printer Exterior

Be sure to use a soft and dry cloth such as eyeglasses cleaning cloth and wipe off dirt on the surface gently. Smooth out wrinkles on the cloth if necessary before cleaning.

>>>> Important

- Be sure to turn off the power and unplug the power cord before cleaning the printer.
 - Turning the Printer On and Off
- Do not use tissue paper, paper towels, rough-textured cloth, or similar materials for cleaning so as not to scratch the surface. Paper tissue powder or fine threads may remain inside the printer and cause problems such as print head blockage and poor printing results.
- Never use volatile liquids such as thinners, benzine, acetone, or any other chemical cleaner to clean the printer, as this may cause a malfunction or damage the surface of the printer.

Cleaning Paper Feed Rollers


If the paper feed roller is dirty or paper powder is attached to it, paper may not be fed properly. In this case, clean the paper feed roller. Cleaning will wear out the paper feed roller, so perform this only when necessary.

You need to prepare:

For the top feed: three sheets of A4 or Letter size plain paper

For the manual feed tray: a single sheet of A4 or Letter size plain paper

- 1. Select Maintenance on the HOME screen.
- 2. Select Roller Cleaning.
- 3. Select Yes.
- 4. Select paper source (Top feed or Manual tray) for paper feed roller cleaning.
- 5. If Top feed is selected, select No wiping.

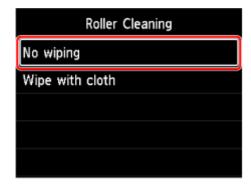

6. If **Top feed** is selected, remove any paper in top feed and press **OK** button.

The paper feed roller will rotate as it is cleaned without paper.

When the paper feed roller stops rotating, the cleaning is complete.

7. Follow the message to load A4 or Letter size plain paper in the paper source you selected.

Load three sheets of paper in the top feed or a single sheet of paper in the manual feed tray.

- ➡ Loading Paper in the Top Feed
- ▶ Loading Paper in the Manual Feed Tray
- 8. Select OK.

The printer starts cleaning. The cleaning will be complete when the paper is ejected.


9. When the completion message appears, select **OK**.

Note

- If the problem is not resolved after performing the paper feed roller cleaning with **No wiping**, wipe the paper feed roller with a damp cloth.
 - ➡ Wiping Paper Feed Rollers with Damp Cloth


Wiping Paper Feed Rollers with Damp Cloth

1. Select Wipe with cloth on Roller Cleaning screen.

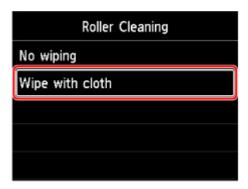

- 2. Check message and select OK.
- **3.** Remove any paper in top feed and press **OK** button.
- **4.** Turn the printer off.
 - ➡ Turning the Printer On and Off
- **5.** Make sure **ON** lamp is turned off and wipe paper feed roller with damp cloth.

Wipe the paper feed roller (A) in the top feed with a moistened cloth or other materials. Do not touch the paper feed roller with your fingers, wipe it as rotating the shaft (B) with your fingers.

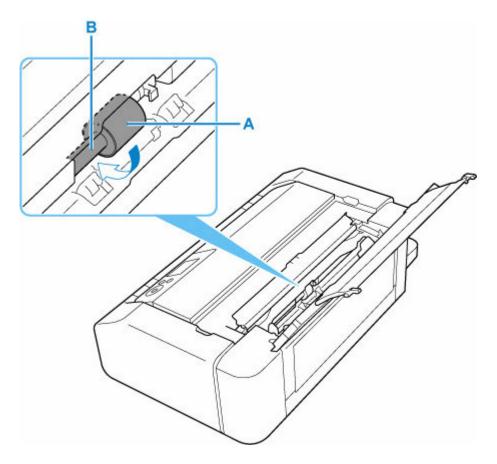

>>> Note

- If the shaft is not rotated, turn off the printer and turn it on again.
- **6.** After wiping with damp cloth, turn the printer on.
- 7. Perform paper feed roller cleaning (No wiping) again.

>>> Note

- If printing data is sent to the printer when performing the paper feed roller cleaning with **Wipe with cloth**, the auto power on setting is disabled even if it is set to be automatically turned on.
 - In this case, set the printer to be automatically turned on again.
 - → Power control

If the problem is not resolved after cleaning the paper feed roller, contact your nearest Canon service center to request a repair.

Performing Bottom Plate Cleaning


Remove stains from the inside of the printer. If the inside of the printer becomes dirty, printed paper may get dirty, so we recommend performing cleaning regularly.

You need to prepare: a sheet of A4 or Letter-sized plain paper*


* Be sure to use a new piece of paper.



- 2. Select Bottom Plate Cleaning.
- 3. Select Yes.
- **4.** Follow the message to remove any paper from the top feed, then press the **OK** button.
- **5.** Fold A4 or Letter-sized plain paper so that short side is in thirds, unfold paper, then press the **OK** button.

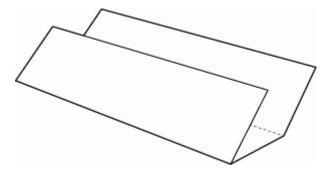

- 6. Load this sheet of paper sideways in the top feed with the open side facing you.
 - ▶ Loading Paper in the Top Feed

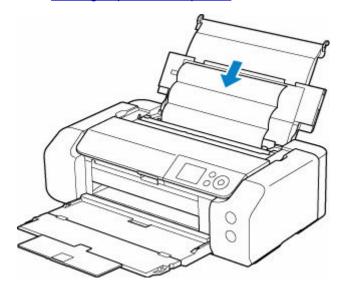

7. Press the **OK** button.

The paper cleans the inside of the printer as it feeds through the printer.

Check the folded parts of the ejected paper. If they are smudged with ink, perform Bottom Plate Cleaning again.

8. When the completion message appears, press the **OK** button.


>>>> Note

• When performing Bottom Plate Cleaning again, be sure to use a new piece of paper.

If the problem is not resolved after performing cleaning again, the protrusions inside the printer may be stained. Wipe off any ink from the protrusions using a cotton swab or the like.

>>>> Important

- Be sure to turn off the power and unplug the power cord before cleaning the printer.
 - → Turning the Printer On and Off

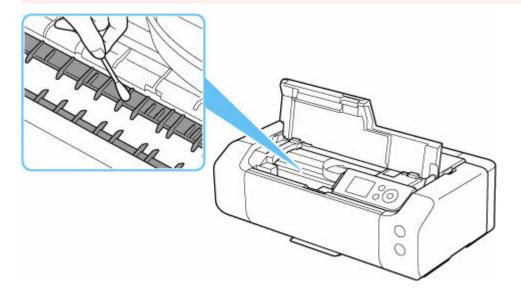

Performing Maintenance Functions from Your Computer (macOS)

- Opening Remote UI for Maintenance
- ➤ Cleaning the Print Heads
- ➤ Checking Ink Status from Your Computer
- ➤ Printing a Nozzle Check Pattern

Opening Remote UI for Maintenance

You can perform maintenance of printer and change the settings from a Remote UI. The following is the procedure to open a Remote UI.

- 1. Open System Settings, and select Printers & Scanners
- 2. Select your model from the printer list, and click Options & Supplies...
- 3. Click Show Printer Webpage... in General tab

Remote UI starts.

>>> Note

 The password may have to be entered after Remote UI starts. In such a case, enter the password and click OK. In case you do not know the password, see "Password and Cookie."

Related Topics

- Cleaning the Print Heads
- ➡ Checking Ink Status from Your Computer
- ➡ Printing a Nozzle Check Pattern
- ➡ Changing the Printer Operation Mode
- → Reducing the Printer Noise

Cleaning the Print Heads

The print head Cleaning and Deep Cleaning functions allow you to clear up clogged print head nozzles. Perform print head Cleaning if printing results are not satisfactory or if a specific color fails to print, even though there is enough ink.

Cleaning

1. Select Utilities from Remote UI

2. Click Cleaning

Before performing Cleaning, check the following items:

Check whether the printer is on and open the printer's cover.

Check the following items for each ink. Then, if necessary, perform Cleaning.

- Is there ink remaining?
- · Did you push in the ink completely until you heard a clicking sound?
- If the orange tape is there, has it been peeled off completely?
 Any remaining tape will hinder ink output.
- · Did you install the inks in their correct positions?

3. Perform Cleaning

Click Yes.

Print head Cleaning starts.

4. Complete Cleaning

Next, the message for Nozzle Check pattern printing is displayed.

5. Check the results

To check whether the print quality has improved, click **Yes**. To cancel the check process, click **No**. If cleaning the head once does not resolve the print head problem, clean it once more.

>>>> Important

Cleaning consumes a small amount of ink.
 Cleaning the print head frequently will rapidly deplete your printer's ink supply. Perform Cleaning only when necessary.

Deep Cleaning

Deep Cleaning is more thorough than Cleaning. Perform Deep Cleaning when two **Cleaning** attempts do not resolve the print head problem.

1. Select Utilities from Remote UI

2. Click Deep Cleaning

Before performing Deep Cleaning, check the following items:

Check whether the printer is on and open the printer's cover.

Check the following items for each ink. Then, if necessary, perform Deep Cleaning.

- Is there ink remaining?
- Did you push in the ink completely until you heard a clicking sound?
- If the orange tape is there, has it been peeled off completely?
 Any remaining tape will hinder ink output.
- Did you install the inks in their correct positions?

3. Perform Deep Cleaning

Click Yes.

Print head Deep Cleaning starts.

4. Complete Deep Cleaning

Next, the message for Nozzle Check pattern printing is displayed.

5. Check the results

To check whether the print quality has improved, click Yes. To cancel the check process, click No.

Important

Deep Cleaning consumes a larger amount of ink than Cleaning.
 Cleaning the print head frequently will rapidly deplete your printer's ink supply. Perform Deep Cleaning only when necessary.

Note

If there is no sign of improvement after Deep Cleaning, turn off the printer, wait 24 hours, and then
perform Deep Cleaning again. If there is still no sign of improvement, the ink may have run out or
the print head may be worn. For details on the remedial action to be taken, see "Ink Does Not Come
Out."

Related Topic

Printing a Nozzle Check Pattern

Checking Ink Status from Your Computer

You can check the detailed information such as the remaining ink level and the ink tank types of your model.

If you select **Printer status** from Remote UI, the ink status appears as an illustration.

Estimated ink levels

You can check the types and levels of ink.

When ink levels are running low or an error occurs because there is no ink, a notification icon will appear.

Ink model number

You can look up the correct ink tank for your printer.

Note

• Ink status can also be checked in **Supply Levels** under **Printer Info** of the print dialog.

Printing a Nozzle Check Pattern

The Nozzle Check function allows you to check whether the print head is working properly by printing a Nozzle Check pattern. Print the pattern if printing results are not satisfactory, or if a specific color fails to print.

Nozzle Check

1. Selecting Utilities from Remote UI

2. Click Nozzle Check

The confirmation message appears.

Before printing the Nozzle Check pattern, check the following items:

Check whether the printer is on and open the printer's cover.

Check the following items for each ink. Then, if necessary, perform Nozzle Check.

- Is there ink remaining?
- Did you push in the ink completely until you heard a clicking sound?
- If the orange tape is there, has it been peeled off completely?

 Any remaining tape will hinder ink output.
- · Did you install the inks in their correct positions?

3. Load paper in the printer

Load one sheet of A4 size or Letter size plain paper into the top feed.

4. Print a Nozzle Check pattern

Click Yes.

Printing of the Nozzle Check pattern begins.

5. Check the print result

When the dialog opens, check the print result. If the print result is normal, click All A.

If the print result is smudged or if there are any unprinted sections, click **Also B** to clean the print head.

Related Topic

Cleaning the Print Heads

Other Maintenance


- ➤ Transporting Your Printer
- ➤ Firmware update

Transporting Your Printer

When relocating the printer for changing your living place or repairing it, make sure of the following.

>>> Important

- Pack the printer in a sturdy box so that it is placed with its bottom facing down, using sufficient protective material to ensure safe transport.
- With the print head and ink tank left installed in the printer, press the **ON** button to turn off the power. This allows the printer to automatically cap the print head, thus preventing it from drying.
- After packing, do not tilt the box containing the printer or turn it on its side or upside down. Doing so may cause the ink to leak during transport and cause damage to the printer.
- When a shipping agent is handling transport of the printer, have its box marked "THIS SIDE UP" to keep the printer with its bottom facing down. Mark also with "FRAGILE" or "HANDLE WITH CARE".

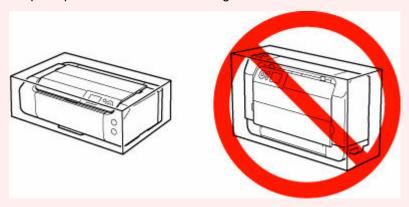

- 1. Turn the printer off.
 - → Turning the Printer On and Off
- 2. Check that **ON** lamp is off and unplug power cord.

>>>> Important

- Do not unplug the printer while the ON lamp is lit or flashing, as it may cause malfunction or damage to the printer, making the printer unable to print.
- **3.** Retract trays.
- **4.** Unplug the printer cable from the computer and from the printer, then unplug the power cord from the printer.
- **5.** Use adhesive tape to secure all the covers on the printer to keep them from opening during transportation. Then pack the printer in the plastic bag.
- **6.** Attach the protective material to the printer when packing the printer in the box.

Firmware update

>>> Important

- When you use this function, make sure the printer is connected to the Internet.
- The administrator password is required to change settings if it is enabled for changing settings using the operation panel.

Using Operation Panel

- 1. Select Various settings on the HOME screen.
- 2. Select Printer settings.
- Select Firmware update.If an administrator password is set, enter the password.
- 4. Select Install update.
- 5. Select Yes.
- **6.** Check message and select **Start update**.

Using Remote UI

- 1. Start up Remote UI.
 - → Start up Remote UI
- 2. Select Firmware update.
- 3. Select Install update.
- 4. Check message and select **Update**.

Note

- If the firmware update is not complete, check the following and take an appropriate action.
 - Check the network settings such as a wireless router.
 - If Cannot connect to the server. is displayed on the LCD, select **OK** and try again after a while.


Frequently Asked Questions

Problems with the Printing Quality



Unevenness, Banding, Faint

- ➡ Printing is faint/Streaks
- ➡ Banding in different colors occurs/Colors in printed images are uneven

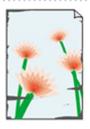

dirt

- → Paper Is Smudged/Printed Surface Is Scratched/Ink Blots/Paper Curl
- → Back of Paper Is Smudged



colors are inaccurate

- ➡ Printed colors are inaccurate
- Documents are printed in monochrome



Line

➡ Lines Are Misaligned/Distorted

Others

- ➡ Lines Incomplete or Missing (Windows)
- ➡ Images Incomplete/Cannot Complete Printing
- ➡ Vertical Line Next to Image

General FAQ

- → When Error Occurred
- ➡ Printer Connection Methods
- ➡ Solve Network Troubles with The Printer's Diagnostic Functions
- → Cannot Proceed Beyond Printer Connection Screen (Cannot Find Printer Connected via USB)
- Printer Does Not Print
- Failed to Printer Driver Installation (Windows)

Search by Category

Cannot Configure Network Settings

- Message Appears on Computer During Setup
- → Cannot Proceed Beyond Printer Connection Screen (Cannot Find Printer Connected via USB)
- ➡ "Failed to connect to the wireless router." Appears
- Printer Cannot Be Used After Replacing Wireless Router or Changed Router Settings
- ➡ Privacy Separator/SSID Separator/Network Separation Function
- Setting Up Using Smartphone/Tablet

Cannot Find Printer on Network

- Cannot Find Printer on Network
- Searching Printer by IP Address or Host Name During Setup

Cannot Print over Network

- Cannot Print from Smartphone/Tablet
- Cannot Print Using AirPrint

Network Connection Problems

- Network Settings and Common Problems
- Solve Network Troubles with The Printer's Diagnostic Functions
- Network Key (Password) Unknown
- Checking Wireless Router SSID/Key
- Cannot Remember Printer's Password
- ➡ Checking Network Information
- ➡ Restoring Printer's LAN Settings to Defaults

- Cannot Connect Smartphone/Tablet to Wireless Router
- Checking Wireless Router Network Name (SSID) for Smartphone/Tablet

Printer Problems

- When Error Occurred
- Printer Does Not Turn On
- Printer Turns Off Unexpectedly or Repeatedly
- → USB Connection Problems
- ➡ Switching Printer's Connection to Network or Devices
- **▶** LCD Is Off
- ➡ Print Head Holder Does Not Move to Replacement Position
- Printer Status Monitor Not Displayed (Windows)
- ➡ Updating Printer Firmware

Installation and Download Problems

- ➡ Failed to Printer Driver Installation (Windows)
- Updating Printer Drivers in Network Environment (Windows)
- ➡ Disable Function to Send Usage Information of Printer
- ➡ Setup Application Asks for the Administrator's Username and Password (Windows)
- **➡** Enable Printing from PC/Smartphone/Tablet
- ➡ Installing Printer Drivers on PC without Network Connection (Windows)

Printing Problems

- Printer Does Not Print
- Printing Stops
- → Cannot Print on the Disc Label
- Default Printer Keeps Changing (Windows)
- → Change to Offline (Windows)/Cannot Communicate (Windows)
- No Ink Level Appears in Canon IJ Status Monitor (Windows)

Paper is not Fed or Ejected Properly

- ➡ What to Do When Paper Is Jammed
- ➡ Printer Does Not Pick up or Feed the Paper/"No Paper" Error
- Paper Does Not Feed from Paper Source Specified in Printer Driver (Windows)
- ➡ What to Do If Paper Is Not Fed/Output Normally

Paper Setting Problems

I want to know the paper types that can be used in this printer

Ink-related Problems


- → Ink Does Not Come Out
- Printer consumes a lot of ink


Problems with the Printing Quality

- Printing is faint/Streaks
- ➤ Banding in different colors occurs/Colors in printed images are uneven
- Paper Is Smudged/Printed Surface Is Scratched/Ink Blots/Paper Curl
- Back of Paper Is Smudged
- Printed colors are inaccurate
- Documents are printed in monochrome
- ➤ Lines Are Misaligned/Distorted
- ➤ Lines Incomplete or Missing (Windows)
- ➤ Images Incomplete/Cannot Complete Printing
- Vertical Line Next to Image



Printing is faint/Streaks

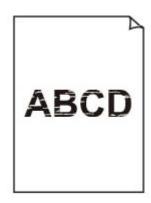

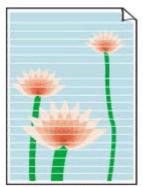



Check 1 Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- ➡ Basic Printing Setup (Windows)
- → Basic Printing Setup (macOS)



Printing from your smartphone/tablet using

Check the settings on the App.

➡ Print Photos from Your Smartphone

Check 2 Make sure appropriate print quality is selected (see list above).

Select a print quality suited to the paper and to what you are printing. If you notice blurs or uneven colors, increase the print quality setting and retry the printing.

Check 3 Is the reverse side of the paper being used for printing?

Print on the printing surface.

Check 4 Is the Print head nozzle blocked?

Print a test pattern to check the nozzles and see if they are clogged.

- ➡ Checking for Nozzle Clogging

>>> Note

- To automatically check for nozzle blockages after printing, set **Auto nozzle check** in the LCD menu to a setting other than **Disable**.
 - Auto maintenance settings

Check 5 Are paper scraps stuck in the printer?

Remove paper scraps left inside the printer.

➡ If the paper is jammed inside the printer



Banding in different colors occurs/Colors in printed images are uneven







Check 1 Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- → Basic Printing Setup (Windows)
- → Basic Printing Setup (macOS)



· Printing from your smartphone/tablet using

Check the settings on the App.

➡ Print Photos from Your Smartphone

Check 2 Make sure appropriate print quality is selected (see list above).

Select a print quality suited to the paper and to what you are printing. If you notice blurs or uneven colors, increase the print quality setting and retry the printing.

Check 3 Is the Print head nozzle blocked?

Print a test pattern to check the nozzles and see if they are clogged.

Checking for Nozzle Clogging

Note

- To automatically check for nozzle blockages after printing, set Auto nozzle check in the LCD menu to a setting other than Disable.
 - ➡ Auto maintenance settings
 - → Maintenance Procedure

Check 4 Perform print head alignment.

➡ Automatic Adjustment to Straighten Lines and Align Colors

Note

- If the problem is not resolved after performing the print head alignment, perform print head alignment manually.
 - Manual Adjustment to Straighten Lines and Align Colors

Check 5 Make sure clear coating area setting.

· For Windows:

On Media/Quality sheet, select Manual for Color/Intensity, and then click Set....

If **Clear Coating Area** in **Clear Coating** sheet of the printer driver is set to **Auto**, Clear Coating may have an unexpected effect on the printing result depending on the image.

In this case, set Clear Coating Area to Overall.

- Changing the Clear Coating Settings
- For macOS:

If **Clear Coating Area** in **Advanced Paper Settings** in the Print dialog is set to **Auto**, Clear Coating may have an unexpected effect on the printing result depending on the image.

In this case, set Clear Coating Area to Overall.

Changing the Clear Coating Settings

Check 6 Enable unidirectional printing function.

On the paper selection screen, select Advanced, and set Unidirectional printing to ON.

Note that the printing speed will be slower when the unidirectional printing function is enabled.

Check 7 Color may be uneven if printing materials were stacked while drying.

To avoid uneven colors, we recommend drying each sheet separately.



Paper Is Smudged/Printed Surface Is Scratched/Ink Blots/Paper Curl









Check 1 Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- ➡ Basic Printing Setup (Windows)
- ➡ Basic Printing Setup (macOS)



· Printing from your smartphone/tablet using

Check the settings on the App.

Print Photos from Your Smartphone

Check 2 Make sure appropriate print quality is selected (see list above).

Select a print quality suited to the paper and to what you are printing. If you notice blurs or uneven colors, increase the print quality setting and retry the printing.

Check 3 Check paper type.

Make sure you are using the right paper for what you are printing.

Check 4 Correct curl before loading paper.

When using **Photo Paper Plus Semi-gloss**, even if the sheet is curled, load one sheet at a time as it is. Rolling this paper in the opposite direction to flatten it may crack the paper surface and reduce the print quality.

We recommend putting unused paper back into the package and storing it flat.

• Plain Paper:

Turn the paper over and reload it to print on the other side.

Other Paper such as postcards:

If the paper corners curl more than 0.1 in. / 3 mm (A) in height, the paper may smudge or may not feed properly. Follow the instructions below to correct the paper curl.



1. Roll up paper in opposite direction to paper curl as shown below.




2. Check that paper is now flat.

We recommend printing curl-corrected paper one sheet at a time.

Note

Depending on paper type, the paper may smudge or may not feed properly even if it is not curled inward.
 Follow the instructions below to curl the paper outward up to 0.1 in. / 3 mm (C) in height before printing.
 This may improve the print result.

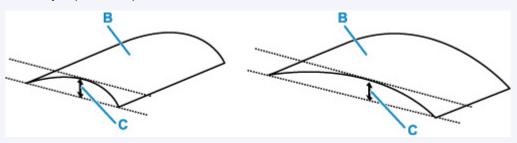

(B) Print side

We recommend feeding paper that has been curled outward one sheet at a time.

Check 5 Set printer to prevent paper abrasion.

Adjusting the setting to prevent paper abrasion will widen the clearance between the print head and the paper. If you notice abrasion even with the media type set correctly to match the paper, set the printer to prevent paper abrasion using the operation panel or the computer.

This may reduce the print speed.

* Once you have finished printing, undo this setting. Otherwise, it will apply to subsequent print jobs.

Select on HOME screen, select Various settings > Printer settings > Print settings in this order, and then set Prevent paper abrasion to ON.

Print settings

Check 6 If brightness is set low, increase brightness setting and try printing again.

If you are printing with a low brightness setting on plain paper, the paper may absorb too much ink and become wavy, causing paper abrasion.

Printing from your computer

Check the brightness setting in the Printer Driver.

- Adjusting Brightness (Windows)
- → Adjusting Brightness (macOS)

Check 7 Specify a paper size that has 25 mm margins.

If the top or bottom edge of the printing surface has been scratched or smudged, print with a paper size that has wide margins (25 mm margins).

When you print on **Photo Paper Pro Premium Matte** or **Matte Photo Paper**, we recommend that you print with a 25 mm margins paper size or 4" x 6" (10 x 15 cm) size.

→ Sizes for 0.98 inch (25 mm) Margin Paper

Check 8 Do not print outside recommended printing area.

If you print outside the recommended printing area of your paper, ink may stain the lower edge of the paper.

Resize the document using application software.

Print Area

Check 9 Is paper feed roller dirty?

Clean paper feed roller.

Cleaning Paper Feed Rollers

>>> Note

• Cleaning the paper feed roller abrades it, so do this only when necessary.

Check 10 Is inside of printer dirty?

During 2-sided printing, ink may stain the inside of the printer, smudging the printout.

Perform bottom plate cleaning to clean inside of printer.

➡ Performing Bottom Plate Cleaning

>>>> Note

• To prevent staining inside the printer, be sure to set the correct paper size.

Check 11 Increase the print interval.

Increasing the print interval allows the printed surface to dry, preventing smudges and scratches.

Press the **HOME** button, select **Various settings > Printer settings > Paper-related settings > Advanced paper settings. Select a media type, select Pause between pages**, and then select a interval setting.

Note


• Alternatively, press the **HOME** button, select **Advanced** on **Top feed paper information** screen to display **Pause between pages** screen.

Check 12 Use Photo Paper to print photos.

To print data with high color saturation such as photographs or images with dark colors, we recommend that you use **Photo Paper Plus Glossy II** or other Canon specialty paper.



Back of Paper Is Smudged

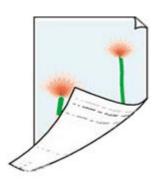



Check 1 Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- → Basic Printing Setup (Windows)
- → Basic Printing Setup (macOS)



· Printing from your smartphone/tablet using

Check the settings on the App.

➡ Print Photos from Your Smartphone

Check 2 Make sure appropriate print quality is selected (see list above).

Select a print quality suited to the paper and to what you are printing. If you notice blurs or uneven colors, increase the print quality setting and retry the printing.

Check 3 Perform bottom plate cleaning to clean inside of printer.

➡ Performing Bottom Plate Cleaning


>>>> Note

• During too much printing, ink may stain the inside of the printer.



Printed colors are inaccurate



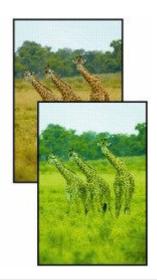



Check 1 Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- → Basic Printing Setup (Windows)
- → Basic Printing Setup (macOS)



· Printing from your smartphone/tablet using

Check the settings on the App.

➡ Print Photos from Your Smartphone

Check 2 Make sure appropriate print quality is selected (see list above).

Select a print quality suited to the paper and to what you are printing. If you notice blurs or uneven colors, increase the print quality setting and retry the printing.

Check 3 Is the Print head nozzle blocked?

Print a test pattern to check the nozzles and see if they are clogged.

- Checking for Nozzle Clogging

Note

- To automatically check for nozzle blockages after printing, set **Auto nozzle check** in the LCD menu to a setting other than **Disable**.
 - Auto maintenance settings

Check 4 Has color been adjusted in the printer driver?

Follow the steps below to adjust color settings.

• Windows

On **Media/Quality** sheet of the printer driver, select **Manual** for **Color/Intensity** and click **Set...**. On **Color Adjustment** sheet, adjust the color.

- → Media/Quality Tab Description (Windows)
- macOS

Adjust the color settings in the printer driver Color Options.

Check 5 Has the computer or monitor color been adjusted?

Take the actions below.

- Refer to the computer and monitor documentation to adjust the colors.
- · Adjust the settings of the color management software, referring to the software documentation as needed.



Documents are printed in monochrome





Check 1 Is the **Black and White Photo Print** check box set on in the printer driver?

Windows

Clear the **Black and White Photo Print** check box in the **Basic Settings** sheet of the printer driver, and then redo the printing.

- → Basic Settings Tab Description (Windows)
- macOS

Clear the **Black and White Photo Print** check box in **Quality & Media** of the printer driver, and then redo the printing.

■ Quality & Media (macOS)

>>>> Note

• If the paper for the monochrome print is selected in **Media Type** of the printer driver, the **Black and White Photo Print** check box cannot be cleared. In that case, select the paper other than that for the monochrome print in **Media Type**.

Check 2 The print head nozzle may be blocked

Print a test pattern to check the color ink nozzles and see if they are clogged.


Checking for Nozzle Clogging

Note

- To automatically check for nozzle blockages after printing, set **Auto nozzle check** in the LCD menu to a setting other than **Disable**.
 - → Auto maintenance settings
 - → Maintenance Procedure



Lines Are Misaligned/Distorted

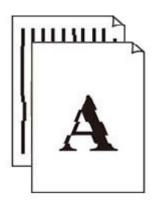



Check 1 Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- → Basic Printing Setup (Windows)
- → Basic Printing Setup (macOS)



· Printing from your smartphone/tablet using

Check the settings on the App.

➡ Print Photos from Your Smartphone

Check 2 Make sure appropriate print quality is selected (see list above).

Select a print quality suited to the paper and to what you are printing. If you notice blurs or uneven colors, increase the print quality setting and retry the printing.

Check 3 Perform print head alignment.

If printed lines are misaligned/distorted or print results are otherwise unsatisfactory, adjust the print head position.

➡ Automatic Adjustment to Straighten Lines and Align Colors

>>> Note

- If the problem is not resolved after performing the print head alignment, perform print head alignment manually.
 - → Manual Adjustment to Straighten Lines and Align Colors

Check 4 Increase print quality and try printing again.

Increasing the print quality using the printer driver may improve the print result.



Lines Incomplete or Missing (Windows)

	Tokyo	London	
Jan.	12,000	10,500	
Feb.	11,500	10,800	
Mar.	13,800	12,800	
Apr.	12,000	10,500	
May.	11,500	10,800	
June	13,800	12,800	



Check 1 Are you using Page Layout Printing or Binding Margin function?

When the Page Layout Printing or Binding margin function is in use, thin lines may not be printed. Try thickening the lines in the document.

Check 2 Are you trying to print a large data file? (Windows)

If you are trying to print a large data file, printing may not be performed properly due to missing print data.

Click **Print Options** on **Page Setup** sheet of the printer driver. Then make sure **Prevention of Print Data Loss** is set to **On (Weak)** in the dialog that appears.

If printing does not start even though **Prevention of Print Data Loss** is set to **On (Weak)**, set it to **On (Strong)** and start printing again.

For details, refer to Page Setup Tab Description.

>>> Important

- · Selecting On (Strong) for Prevention of Print Data Loss may reduce print quality.
- After printing is completed, select Off for Prevention of Print Data Loss.



Images Incomplete/Cannot Complete Printing





If the printing of photos, images, stops in the middle of printing and cannot be printed to the end, check the following items.

Check 1 Select setting not to compress printing data (Windows).

If you select the setting not to compress the printing data with an application software you are using, the printing result may be improved.

Click **Print Options** on **Page Setup** sheet of the Printer Driver. Select the **Do not allow application software to compress print data** check box and click **OK**.

>>>> Important

· Clear the check box once printing is complete.

Check 2 Are you trying to print a large data file? (Windows)

If you are trying to print a large data file, printing may not be performed properly due to missing print data.

Click **Print Options** on **Page Setup** sheet of the printer driver. Then make sure **Prevention of Print Data Loss** is set to **On (Weak)** in the dialog that appears.

If printing does not start even though **Prevention of Print Data Loss** is set to **On (Weak)**, set it to **On (Strong)** and start printing again.


For details, refer to Page Setup Tab Description.

>>> Important

- Selecting On (Strong) for Prevention of Print Data Loss may reduce print quality.
- After printing is completed, select Off for Prevention of Print Data Loss.



Vertical Line Next to Image

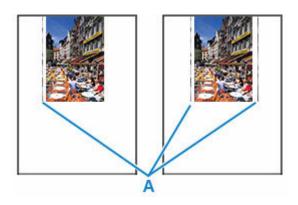



Check Do page size and media type settings match size and type of loaded paper?

If these settings do not match, it is not possible to obtain the proper result.

If you are printing a photograph or an illustration, an incorrect paper type setting may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

Printing from your computer

Check the settings using the Printer Driver.

- → Basic Printing Setup (Windows)
- → Basic Printing Setup (macOS)



· Printing from your smartphone/tablet using

Check the settings on the App.

➡ Print Photos from Your Smartphone

Note

- The direction or pattern of the vertical lines (A) may vary depending on the image data or the print setting.
- This printer performs automatic cleaning when necessary to keep printouts clean. A small amount of ink is ejected for cleaning.

Although the ink is normally ejected onto the ink absorber at the outer edge of the paper, it may get onto the paper if the loaded paper is larger than the set size.

Cannot Configure Network Settings

- Message Appears on Computer During Setup
- Cannot Proceed Beyond Printer Connection Screen (Cannot Find Printer Connected via USB)
- ➤ "Failed to connect to the wireless router." Appears
- Printer Cannot Be Used After Replacing Wireless Router or Changed Router Settings
- ➤ Privacy Separator/SSID Separator/Network Separation Function
- ➤ Setting Up Using Smartphone/Tablet

Message Appears on Computer During Setup

- Screen to Enter Password Appears During Setup (Windows)
- ➡ Encryption Settings Screen Appears When Wireless Router Selected (Windows)
- "You have connected the printer to the non encrypted wireless network" Appears



Screen to Enter Password Appears During Setup (Windows)



If the printer is set up for use with a network and an administrator password has been set, a screen asking you to enter the password appears.

Enter the same password as that specified for the printer.

Note

• An administrator password is already set for the printer at the start of use.

For details:

Default Administrator Password

For improved security, we recommend that you change the administrator password.

➡ Setting Administrator Password on Operation Panel

Encryption Settings Screen Appears When Wireless Router Selected (Windows)



This screen appears automatically if the selected wireless router is encrypted. Set the same encryption settings as those set for the wireless router.

For more on encryption settings, see Performing/Changing Wi-Fi Settings.

"You have connected the printer to the non encrypted wireless network" Appears



Security is not configured on the wireless router. The printer can still be used, so continue the setup procedure and complete it.

>>> Important

• If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.




Cannot Proceed Beyond Printer Connection Screen (Cannot Find Printer Connected via USB)



If you cannot proceed beyond the **Printer Connection** screen, check the following.

Check 1 Make sure USB cable is securely plugged in to printer and computer.

Connect the printer and the computer using a USB cable as the illustration below. The USB port is located at the back of the printer.

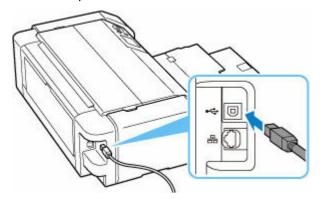

>>> Important

• Check the orientation of the "Type-B" connector and connect to the printer. For details, refer to the instruction manual supplied with the USB cable.

Check 2 Follow procedure below to connect printer and computer again.

- 1. Unplug USB cable from printer and computer and connect it again.
- 2. Make sure no printer operation is in progress and turn off.
- 3. Turn on printer.

Check 3 Follow the steps below to install printer driver again.

- 1. Download the latest printer driver.
- 2. Turn off printer.
- 3. Restart computer.

After restarting, install the latest printer driver downloaded in step 1.

>>>> Important

- When installing the printer driver, make sure you select the correct printer name.
- For Windows:


To restart your computer, choose **Restart** instead of **Shut down**.



"Failed to connect to the wireless router." Appears



Each time you perform each check, select **OK** on the error screen to clear the error and set up the printer again.

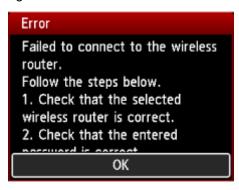

- ➡ When Security Type is WPA/WPA2/WPA3
- ➡ When Security Type is set to Disable

When Security Type is WPA/WPA2/WPA3

Check 1 Check the password entered for the wireless router is correct.

If the password you entered is incorrect, enter the correct password.

Check 2 Check the wireless router's settings.

If the wireless router's DHCP function is off, turn it on and redo the wireless connection settings.

Check 3 Check the MAC address filtering's settings.

If MAC address filtering is enabled on the wireless router, change the settings to accept the printer's MAC address.

The MAC address of the printer can be viewed from **Printer information** > **System information**.

Printer information

Check 4 Check the wireless router's security protocol (encryption method) settings.

For details on changing the wireless router settings, see the wireless router manual or contact its manufacturer.

When Security Type is set to Disable

Check Is the wireless router turned on?

If it is already turned on, turn it off, and then turn it back on.

Do not proceed to the next screen of this guide until the power is turned on. The connection to the wireless router will be temporarily disabled.

Printer Cannot Be Used After Replacing Wireless Router or Changed Router Settings

When wireless router is replaced or router settings are changed, the network settings of your computer, smartphone/tablet or printer must be reconfigured according to the new wireless router.



Check 1 Check if your computer or smartphone/tablet can be connected to Internet through the new wireless router.

If your computer or smartphone/tablet cannot be connected to Internet, check if the wireless router setup is completed and configure the settings on the computer or smartphone/tablet to connect to the wireless router.

Check 2 Resetup printer network.

Refer to Setup Guide to setup.

>>> Note

• Wi-Fi Connection Assistant allows you to diagnose and repair the network status.

Select the link below to download Wi-Fi Connection Assistant and install it.

➡ Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

- For Windows:
 - Starting Up Wi-Fi Connection Assistant
- For macOS:
 - Starting Up Wi-Fi Connection Assistant

If this does not solve the problem, see below.

- **▶** Cannot Communicate with Printer After Enabling MAC/IP Address Filtering or Encryption Key on Wireless Router
- → With Encryption On, Cannot Communicate with Printer After Changing Encryption Type at Wireless Router
- ➡ Privacy Separator/SSID Separator/Network Separation Function

Cannot Communicate with Printer After Enabling MAC/IP Address Filtering or Encryption Key on Wireless Router



Check 1 Check wireless router setting.

For more on setting up a wireless router, see the instruction manual provided with the wireless router or contact its manufacturer. Make sure the computer and the wireless router can communicate with each other under this setting.

Check 2 If filtering MAC addresses or IP addresses at wireless router, check that MAC addresses or IP addresses for computer, network device, and printer are registered.

Check 3 If using WPA/WPA2/WPA3 key or a password, make sure encryption key for computer, network device, and printer matches key set for wireless router.

The length or format of the Wi-Fi password and authentication method must be identical among the wireless router, the printer, and your computer.

For details, see Setting an Encryption Key.

Note

 To configure IEEE802.1X/EAP (WPA/WPA2/WPA3 Enterprise), you also need to configure the authentication (Radius) server.

Contact the network administrator for more information.

With Encryption On, Cannot Communicate with Printer After Changing Encryption Type at Wireless Router



If the printer cannot communicate with the computer after you change the encryption type for the wireless router, make sure the encryption type and passkey or password for the computer matches that of the wireless router.

➡ Cannot Communicate with Printer After Enabling MAC/IP Address Filtering or Encryption Key on Wireless Router



Privacy Separator/SSID Separator/Network Separation Function



If a privacy separator, SSID separator, or Network separation function is enabled on the wireless (mobile) router, you cannot perform setup. Before performing setup, disable these functions. For the procedure, refer to your wireless (mobile) router's instruction manual or visit the manufacturer's website.



Setting Up Using Smartphone/Tablet



Refer to Set Up and set up.

→ Set Up

>>> Note

• If you have a computer, you can set up the printer on the computer more easily.

Cannot Find Printer on Network

- Cannot Find Printer on Network
- Searching Printer by IP Address or Host Name During Setup



Cannot Find Printer on Network



In the following cases, set up the printer again.

- · When you buy a new computer or wireless router
- · When you change the settings on your wireless router
- When the connection method (Wi-Fi / USB) of the printer is changed

For more on the setup procedure:

→ Set Up

In Other Cases Than Above:

If the printer suddenly stops working, even though you have not changed the settings of the device or network to which it is connected, or if you cannot find the printer during the setup process, check and solve the problem, using Wi-Fi Connection Assistant. After the condition improves, redo the setup of the printer.

Wi-Fi Connection Assistant is a powerful solution tool for network problems.

Step 1 Check Basic Items for Network.

Step 2 Solve Problems, Using Wi-Fi Connection Assistant.

Step 3 If the Solution Tool Does Not Solve the Problem.

Step 1: Check Basic Items for Network.

Check 1 Check power status.

Check your printer and the network device (wireless router, etc.) are turned on.

If you are in the process of setting up, interrupt it and check if the wireless router (modem) is turned on and then check if the printer is turned on.

1. Check if network device such as router is turned on.

If network devices are not turned on, turn on the power. If the network devices are on, turn them off and on again.

It may take a while for the network device to become ready for use once they are turned on.

Proceed once the network device such as router is ready for use.

2. Check if printer is turned on.

If printer is not turned on, turn on the power. If the printer is on, turn it off and on again.

Proceed once you complete checking the power status above.

Check 2 Check PC network connection.

If your computer and network devices (wireless router, etc.) are fully configured, your computer is ready to connect to the network.

1. Check the settings of the network device (wireless router, etc.).

Connect to the Internet and see if you can browse any web page. If you cannot view web pages on your computer, check wireless router network connection settings, such as IP address filtering, MAC address filtering, and DHCP function.

To check the network name (SSID) of the wireless router the printer is connected to, print the network settings.

Printing Network Settings

Note

- Depending on the wireless router, note that different network name (SSID) is assigned for a bandwidth (2.4 GHz or 5 GHz) or its usage (for PC or game machine), using alphanumeric characters at the end of network name (SSID).
- For more on checking the settings of the wireless router, refer to the instruction manual supplied with the wireless router or contact the manufacturer.

If you use an encryption key, specify it for the network name (SSID) you are using. For details, see Setting an Encryption Key.

2. Check PC network connection.

For the procedures, refer to the instruction manual supplied with the computer, or contact the manufacturer.

Once you complete setting up the wireless router and your computer, configure the settings on your computer in order to view web pages, using the information of the wireless router.

Proceed once you complete checking the network connection above.

Check 3 Check printer's network settings.

- **→** For Wi-Fi
- For Wired LAN

For Wi-Fi





or indicates that the wireless router and the printer are not connected. Check the setting of printer.

Reconsider the location of the wireless router and the printer in the next check.



The printer is not set to use Wi-Fi.

Select on HOME screen > LAN settings > Wi-Fi in this order, and select Enable for Enable/disable Wi-Fi.

For Wired LAN

1. Check the power and LAN cable.

When the printer cannot be found on the setup screen, using LAN connection setup, make sure that all the network devices are connected to the router and the hub via LAN cables and that all the devices are turned on.

• If LAN cable is not connected:

Connect the router, hub, computer and printer via LAN cables.

Make sure the printer is turned on.

→ Turning the Printer On and Off

Make sure the printer, the router and the hub are turned on.

• If LAN cable is connected, and printer and network device are off:

Turn on printer and network device.

• If LAN cable is connected, and printer and network device are on:

Turn them off and on again.

Note

- Some devices require a couple of minutes after being turned on to become ready for use. Wait until all devices are ready before proceeding.
- 2. Check printer's Wired LAN settings.

Make sure that the is displayed on the printer's LCD.

• If icon is not displayed:

The printer is not set to use wired communication. Enable Wired LAN from the printer settings.

Select LAN settings > Wired LAN on HOME screen, and sets Enable/disable Wired LAN to Enable.

Check 4 Check location of wireless router.

Make sure the printer is not placed too far away from the wireless router.

The printer can be up 50 m (164 ft.) from the wireless router indoors if unobstructed. Make sure the printer is close enough to the wireless router to be used.

Place the printer and wireless router where there are no obstacles between them. Wireless communication between different rooms or floors is generally poor. Wireless communication can be impeded by building materials containing metal or concrete. If the printer cannot communicate with the computer over a Wi-Fi due to a wall, place the printer and the computer in the same room.

In addition, if a device like a microwave oven that emits radio waves of the same frequency bandwidth as a wireless router is nearby, it may cause interference. Place the wireless router as far away from interference sources as possible.

Step 2: Solve Problems, Using Wi-Fi Connection Assistant.

Diagnose and repair the network connections using Wi-Fi Connection Assistant.

Download Wi-Fi Connection Assistant from the below page, and install it on your computer.

➡ Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

- · For Windows:
 - Starting Up Wi-Fi Connection Assistant
- For macOS:
 - Starting Up Wi-Fi Connection Assistant

Step 3: If the Solution Tool Does Not Solve the Problem.

Check 1 Make sure security software's firewall is off.

If your security software's firewall is on, a message may appear warning you that Canon software is attempting to access the network. If this warning message appears, set security software to always allow access.

If you are using any programs that switch between network environments, check their settings.

Check 2 If printer is connected to AirPort Base Station via Wi-Fi, make sure you use alphanumeric characters for network name (SSID). (macOS)

If your network name (SSID) contains characters other than single-byte alphanumeric characters, the connection is not established properly. Change the network (SSID) to use only single-byte alphanumeric characters.

Check 3 Solve network troubles with the printer's diagnostic functions.

See below.

360


 ➡
 Solve Network Troubles with The Printer's Diagnostic Functions



Searching Printer by IP Address or Host Name During Setup



If the printer cannot be found on the **Detect Printer** screen, the **Start Printer Connection** screen appears.

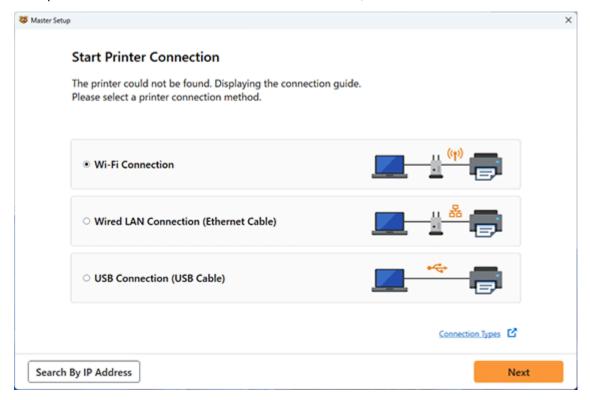

The Windows screen is used as an example above.

Clicking **Search By IP Address** allows you to search for a printer by specifying the IP address or host name of the printer.

1. Check printer's IP address or host name.


To check the printer's IP Address or host name, print out the network settings information or use the operation panel to display it.

- Display on the operation panel.
 - **► LAN settings**
- Print the network settings.
 - Printing Network Settings

Note

- If you use the printer in an office, ask the network administrator.
- 2. Specify searching method.

Select one of the methods below.

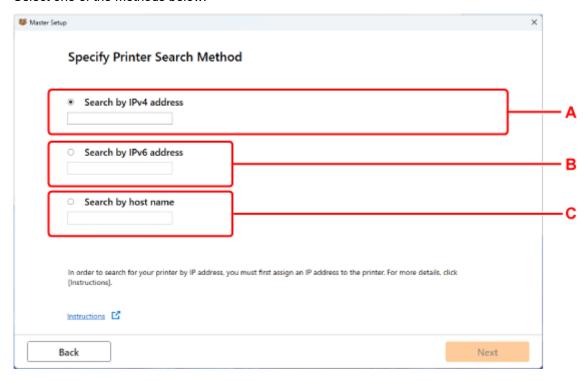

The Windows screen is used as an example above.

A: Search by IPv4 address

Select to search for printers by IPv4 address.

B: Search by IPv6 address

Select to search for printers by IPv6 address.

C: Search by host name

Select to search for printers by host name. A host name is referred to as LLMNR host name or Bonjour service name.

3. Enter IP address or host name and click Next.

Printer search starts.

If an error screen appears:

Resolve the error according to the instruction on the screen.

If the IP address you entered is already used for another device, follow the procedure below to specify printer's IP address.

- 1. Select LAN settings on the HOME screen.
 - **▶** LCD and Operation Panel
- 2. Select Advanced.
- 3. Select Yes.

4. Select TCP/IP settings.

- If you specify IPv4 address:
 - 1. Select IPv4.
 - 2. Select IP address.
 - 3. Select Manual setup.

Selecting Auto setup specifies the IP address automatically.

- **4.** Select **Yes** on the displayed screen.
- **5.** Enter IP address.
- 6. Select OK.
- 7. Enter subnet mask.
- 8. Select OK.
- 9. Enter default gateway.
- 10. Select OK.

The IPv4 address has been specified.

- If you specify IPv6 address:
 - 1. Select IPv6.
 - 2. Select Enable/disable IPv6.
 - 3. Select Enable.

The IPv6 address has been specified.

>>> Important

If firewall is enabled on the computer, printers on a different subnet may not be detected.
 Disable firewall.

If firewall interferes with printer search:

The operating system installed on your computer and the firewall function of the security software may unintentionally prevent communication for setup. Check if a firewall message appears.

• If a firewall message appears:

If a firewall message appears warning that Canon software is attempting to access the network, set the security software to allow access.

After allowing the software to access, return to setup and follow the instructions on the screen.

• If no firewall message appears:

Temporarily disable the firewall and return to setup and follow the instructions on the screen.

After the setup is complete, re-enable the firewall.

>>> Note

• For more on firewall settings of your operating system or security software, see instruction manual or contact its manufacturer.

Cannot Print over Network

- ➤ Cannot Print from Smartphone/Tablet
- ➤ Cannot Print Using AirPrint



Cannot Print Using AirPrint



Check 1 Make sure printer is turned on.

➡ Turning the Printer On and Off

If the printer is turned on, cycle the power switch, and then check whether the issue is resolved.

Check 2 Make sure printer is registered to your computer.

Check 3 Make sure printer is connected by LAN to same group of networks (same subnet) as AirPrint compliant device when printing over LAN.

Check 4 Make sure printer has enough paper and ink.

Check 5 Make sure no error message is displayed on printer's LCD.

Cannot Print from Smartphone/Tablet

If you cannot Print from your smartphone/tablet, it is possible that your smartphone/tablet cannot communicate with the printer.

Check the cause of your problem according to the connection method.

- ★ Cannot Communicate with Printer via Wi-Fi
- ➡ Cannot Connect to Printer through Wireless Direct

Note

- For problems on printing with other connection methods or more on performing settings of each connection method:
 - Using Cloud Service
 - Printing from iOS Device (AirPrint)



Cannot Communicate with Printer via Wi-Fi



If your smartphone/tablet cannot communicate with the printer, check the following.

Check 1 Check power status of printer, network devices (e.g. wireless router), and your smartphone/tablet.

- · Turn on the printer or devices.
- If the power is already turned on, cycle the power switch.
- It may be necessary to resolve wireless router problems (e.g. update interval of a key, problems of DHCP update interval, energy saving mode) or to update the wireless router firmware.

For details, contact the manufacturer of your wireless router.


Check 2 Check settings of your smartphone/tablet.

Make sure Wi-Fi is enabled on your device.

For details, refer to your device's instruction manual.

Check 3 Is printer connected to wireless router?

• Use the icon on the LCD to check the connection status between the printer and wireless router.

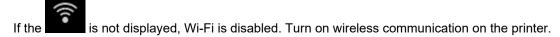

• Make sure the network settings of the printer (e.g. network name (SSID) or network key (password), etc.) are identical with those of the wireless router.

To check the settings of the wireless router, refer to the instruction manual provided with it or contact its manufacturer.

To check the current network settings of the printer, print out the network settings information or use the operation panel to display it.

- · Display on the operation panel of the printer.
 - LAN settings
- · Print the network settings.
 - Printing Network Settings

Note

• If you have a computer, Wi-Fi Connection Assistant allows you to diagnose and repair the network status.

Select the link below to download Wi-Fi Connection Assistant and install it.

➡ Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

- For Windows:
 - Starting Up Wi-Fi Connection Assistant
- For macOS:
 - Starting Up Wi-Fi Connection Assistant

Check 4 Are network settings of your smartphone/tablet identical with those of wireless router?

Make sure the network settings of the printer (e.g. network name (SSID) or network key (password), etc.) are identical with those of the wireless router.

To check the settings of your smartphone/tablet, refer to the instruction manual provided with it.

If the network settings of your smartphone/tablet are not identical with those of the wireless router, change the network settings of it to match with those of the wireless router.

Check 5 Make sure the printer is not placed too far away from the wireless router.

If the distance between the printer and wireless router is too far, wireless communication becomes poor. Place the printer and wireless router close to each other.

Check 6 There may be a problem with the signal. Monitor signal status and move printer and wireless router as necessary.

Place the printer and wireless router where there are no obstacles between them. Wireless communication between different rooms or floors is generally poor. Wireless communication can be impeded by building materials containing metal or concrete. If the printer cannot communicate with the computer over a Wi-Fi due to a wall, place the printer and the computer in the same room.

In addition, if a device like a microwave oven that emits radio waves of the same frequency bandwidth as a wireless router is nearby, it may cause interference. Place the wireless router as far away from interference sources as possible.

Check the signal strength on the LCD.

➡ LCD and Operation Panel

Note

- If the web page cannot be printed using an Android device, it may be possible to print it by changing Wireless Direct connection.
 - Wireless Direct Connection



Cannot Connect to Printer through Wireless Direct



If your smartphone/tablet cannot communicate with the printer in the Wireless Direct, check the following.

Check 1 Check power status of printer and device (e.g. smartphone/tablet).

Turn on the printer or devices.

If the power is already turned on, cycle the power switch.

Check 2 Check if the is displayed on the LCD of the printer.

If it is not displayed, Wireless Direct is disabled. Please turn on the Wireless Direct.

Check 3 Check settings of your smartphone/tablet.

Make sure Wi-Fi is enabled on your device.

For details, refer to your device's instruction manual.

Check 4 Check that printer is selected as connection for devices (e.g. smartphone/tablet).

Select the network name (SSID) for Wireless Direct specified for the printer as the connection destination for devices.

Check the destination on your device.

For details, refer to your device's instruction manual or visit the manufacturer's website.

To check the network name (SSID) for Wireless Direct specified for the printer, print out the network settings information or use the operation panel to display it.

- · Display on the operation panel of the printer.
 - **► LAN settings**
- · Print the network settings.
 - ➡ Printing Network Settings

Check 5 Check that Wireless Direct password set for printer is entered correctly.

To check the password specified for the printer, print out the network settings information or use the operation panel to display it.

• Display on the operation panel of the printer.

- **► LAN settings**
- Print the network settings.
 - ➡ Printing Network Settings

Check 6 Check that printer is not placed too far away from device.

If the distance between the printer and the device is too far, wireless communication becomes poor. Place the printer and the device close to each other.

Check 7 Check that 5 devices are already connected.

Wireless Direct does not allow more than 5 devices to be connected.

Network Connection Problems

- Network Settings and Common Problems
- > Solve Network Troubles with The Printer's Diagnostic Functions
- Switching Printer's Connection to Network or Devices
- Network Key (Password) Unknown
- Checking Wireless Router SSID/Key
- Cannot Remember Printer's Password
- Checking Network Information
- Restoring Printer's LAN Settings to Defaults
- Cannot Connect Smartphone/Tablet to Wireless Router
- Checking Wireless Router Network Name (SSID) for Smartphone/Tablet

Network Settings and Common Problems

Here are frequently asked questions on network.

Cannot Find Printer

- → Cannot Find Printer on Network
- → Cannot Proceed Beyond Printer Connection Screen (Cannot Find Printer Connected via USB)
- ➡ Searching Printer by IP Address or Host Name During Setup

Cannot Print or Connect

- → Cannot Print from Smartphone/Tablet
- → Cannot Print Using AirPrint
- ➡ Solve Network Troubles with The Printer's Diagnostic Functions

LAN Setting Tips/Changing LAN Settings

- ➡ Printer Connection Methods
- **► LAN settings**
- ➡ Another Printer Found with Same Name
- ➡ Printing Network Settings
- Network Status and Troubleshooting

Solve Network Troubles with The Printer's Diagnostic Functions

- If the printer and wireless router are connected or the printer and computer are connected by USB cable but you cannot print:
 - ➡ Change to Offline (Windows)/Cannot Communicate (Windows)
- In other cases than above:
 - Cannot Find Printer on Network/Cannot Print
 - → Cannot Connect to Printer through Wireless Direct



Cannot Find Printer on Network/Cannot Print



Printing Out Network Settings Information:

Follow the procedure below to print out the network settings information.

Step 1 Check that printer and wireless router are turned on.

Turn the wireless router back on.

Wait about five minutes and then turn the printer back on.

Step 2 Check your devices (e.g. computer/smartphone/tablet) are connected to Internet.

Make sure that devices and the wireless router are connected to via Wi-Fi, and that the Internet can be used without problems.

Step 3 Make sure the printer's Wi-Fi setting is enabled and the



is displayed

Step 4 Move the printer and device (computer/smartphone/tablet) closer to the wireless router.

Wireless communication quality deteriorates if the printer or devices are too far from the wireless router. Move the printer and device closer to the wireless router.

Step 5 Print the network settings

Print out the network settings information on your printer.

Printing Network Settings

Checking Printed Network Settings Information:

From the printed network settings information, check the entries in item "2-2"

C-0

It is connected correctly. If, nevertheless, the printer is not found on the network or printing is not possible, check the following items.

Note

• If codes other than "C-0" are displayed at the same time in the item "2-2" see also the correspondence of the other codes.

Check 1 Check that security software's firewall is off.

A message may appear warning you that Canon software is attempting to access the network. If this warning message appears, set the security software to always allow access.

Quit the security software and make sure that the printer is recognized and ready to use. If so, the cause is the firewall setting. Change the firewall settings so that the printer is recognized and ready to use. For details, contact the manufacturer of the security software.

If you are using any programs that switch between network environments, check their settings.

Check 2 Does network name (SSID) of printer match network name (SSID) setting of wireless router that communicates?

Check the "3-2-6" item in the printed network settings information and the network name (SSID) of the wireless router you want to connect to. If they are not matched, check the SSID and password of the wireless router you want to connect to, and then setup manually.

Check 3 Is privacy separator, SSID separator, or Network separation function enabled on wireless router?

If it is enabled, disable these functions before performing the setup. To check the settings of the wireless router, refer to the instruction manual provided with it or contact its manufacturer.

Check 4 Are printer driver installed? (Windows)

If you are using Windows and printer driver are not installed, install it.

Set Up

C-1

The printer's Wi-Fi setting is disabled. (You can also check if the Wi-Fi does not appear on the printer's screen.)

Enable the Wi-Fi setting in the printer's settings screen.

C-3

No IP address is assigned. (You can also check that the item "3-2-12" in the printed network settings information is blank.)

Check the following items.

Check 1 Is printer set to obtain an IP address automatically, or is wireless router requesting manual addressing?

Refer to the wireless router's manual to enable DHCP (auto-acquisition) settings on the wireless router or to set a valid IP address on the printer.

Check 2 When you set printer's IP address manually, correct IP address may not be set.

Check the network name (SSID) and the password of the wireless router you want to connect to, the IP address applicable range, and then enter the appropriate IP address on the printer side. If you are unsure, set the printer's IP address to automatic (DHCP).

C-5

Unable to connect to the specified network. Check the following items.

Check 1 Check status of printer and network device (e.g. wireless router), and your computer/smartphone/tablet.

Communication with a wireless router must be tuned to either the 2.4 GHz or 5 GHz frequency band. The network name (SSID) of the 2.4 GHz frequency band and the network name (SSID) of the 5 GHz frequency band cannot be used in combination. Depending on the wireless router, note that different network name (SSID) is assigned for a bandwidth (2.4 GHz or 5 GHz) or its usage (for PC or game machine), using alphanumeric characters at the end of network name (SSID).

Check the network name (SSID) set for the printer, and match it with the network name (SSID) of the correct frequency band of the wireless router.

Check 2 Password on your wireless router may not match password you entered.

Passwords are case sensitive.

Enter the password correctly.

Check 3 Monitor signal status and move printer and wireless router as necessary.

- Place the printer and wireless router where there are no obstacles between them. Wireless communication between different rooms or floors is generally poor.
- Wireless communication can be impeded by building materials containing metal or concrete. If the printer cannot communicate with the computer over a Wi-Fi due to a wall, place the printer and the computer in the same room.
- After changing the installation location, print out the network settings information again and check the status of the signal. Compare with the value in section "3-2-1" in the printed network settings information to determine the installation location.

Check 4 Check wireless channel number of Wi-Fi you are using on computer.

Make sure that the wireless channel number on the wireless router is included in the wireless channel number you checked. If the wireless channel number set for the wireless router is not included, change the wireless channel number of the wireless router.

Check 5 In case of Wi-Fi connection, check if computer that can be accessed by wireless router is restricted.

The wireless router settings may be limiting the number of devices that can be connected at the same time. Remove or relax the restrictions.

To check the settings of the wireless router, refer to the instruction manual provided with it or contact its manufacturer.

>>> Note

To check the MAC address or IP address of your computer, see <u>Checking Computer IP Address or MAC</u>
 Address.

Check 6 If problem occurs only when wireless router is in energy-saving mode, turn off energy-saving mode of wireless router.

If the problem seems to occur suddenly, it may be resolved by updating the wireless router firmware (e.g. update interval of a key, problems of DHCP update interval, etc.). For details, refer to the wireless router's instruction manual.

Check 7 If printer is connected to AirPort Base Station via LAN, make sure you use alphanumeric characters for network name (SSID). (macOS)

If your network name (SSID) contains characters other than single-byte alphanumeric characters, the connection is not established properly. Change the network (SSID) of the printer to use only single-byte alphanumeric characters.

C-4

No default gateway is set.

When you set the IP address of the printer manually, enter a valid default gateway IP address. If you don't know the default gateway, set the IP address to automatic.

C-7

There may be a problem with the signal.

Check the following items.

Check Monitor signal status and move printer and wireless router as necessary.

- Place the printer and wireless router where there are no obstacles between them. Wireless communication between different rooms or floors is generally poor.
- Wireless communication can be impeded by building materials containing metal or concrete. If the printer cannot communicate with the computer over a Wi-Fi due to a wall, place the printer and the computer in the same room.
- After changing the installation location, print out the network settings information again and check the status of the signal. Compare with the value in section "3-2-1" in the printed network settings information and place the printer in the location with a higher value.

>>> Note

• In some cases, "C-7" and "C-9" are displayed at the same time. In that case, refer to both items.

C-8

Too many clients are connected.

Wireless Direct does not allow more than 5 devices to be connected.

If you want to connect additional devices to the printer, unplug any devices that are not in use before adding them.

C-9

The noise level is high and does not differ from the signal level due to various devices other than the printer.

- If devices (microwave oven, external hard disk drive, and other USB 3.0 devices) that emit radio waves of the same frequency bandwidth as a wireless router is nearby, it may cause interference. Place the printer and the wireless router as far away from interference sources as possible.
- After you change the location of the printer, check the signal quality. Compare the value of "3-2-2" in the network settings information and place the printer in the location with a higher value.

Note

• In some cases, "C-7" and "C-9" are displayed at the same time. In that case, refer to both items.

C-10

No IP address is assigned by the wireless router.

Check the following items.

Check 1 Password on your wireless router may not match password you entered.

Passwords are case sensitive.

Enter the password correctly.

Check 2 Set up printer again and reconnect to Wi-Fi.

Check 3 Check DHCP on wireless router. If DHCP is off, set it on.

For details, refer to the wireless router's instruction manual.

C-11

The network name (SSID) remains the default value (The network name (SSID) has not been set). Check the network name (SSID) of the wireless router.

Verify the network name (SSID) and password of the wireless router you want to connect to, and then set it up manually.

Note

• Wi-Fi Connection Assistant allows you to diagnose and repair the network status.

Select the link below to download Wi-Fi Connection Assistant and install it.

Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

- For Windows:
 - Starting Up Wi-Fi Connection Assistant
- For macOS:
 - Starting Up Wi-Fi Connection Assistant



Cannot Connect to Printer through Wireless Direct



Check the following items

Check 1 Check power status of printer and other devices (e.g. computer/smartphone/tablet).

Turn on the printer or devices.

If the power is already turned on, cycle the power switch.

Check 2 Check settings of your device (e.g. computer/smartphone/tablet).

Make sure Wi-Fi is enabled on your device.

For details, refer to the device's instruction manual.

Check 3 Print out network settings information.

See "Step 1" to "Step 5" in Cannot Find Printer on Network/Cannot Print.

In the printed network settings information, check if the item "2-2" is not "C-8". If this is the case, the number of connected printers is too many.

Wireless Direct does not allow more than 5 devices to be connected.

When you want to connect additional devices, disconnect any devices that are not in use before adding them.

Check 4 Check that printer is selected as connection for various devices (e.g. computer/smartphone/tablet).

Select the network name (SSID) for Wireless Direct specified for the printer as the connection destination for devices.

Check the destination on your device.

For details, refer to your device's instruction manual or visit the manufacturer's website.

To check the network name (SSID) for Wireless Direct specified for the printer, display it using the operation panel of the printer or print out the network settings information of the printer.

• Display on the operation panel of the printer.

- **► LAN settings**
- · Print the network settings.
 - Printing Network Settings

Check 5 Check that Wireless Direct password set for printer is entered correctly.

To check the password specified for the printer, display it using the operation panel of the printer or print out the network settings information of the printer.

- Display on the operation panel of the printer.
 - **► LAN settings**
- Print the network settings.
 - Printing Network Settings

Check 6 Check that printer is not placed too far away from device.

If the distance between the printer and the device is too far, wireless communication becomes poor. Place the printer and the device close to each other.

Switching Printer's Connection to Network or Devices

Check the following items when connecting a newly added computer to the LAN environment to the printer, changing the connection method from USB to LAN, or changing the wireless LAN (Wi-Fi) connection method.

- ➡ 1. Connects to Another Computer via LAN/Changes from USB to LAN Connection
- 2. Switching LAN Connection Method
- 3. Reconfiguration Method of Wi-Fi Connection

1. Connects to Another Computer via LAN/Changes from USB to LAN Connection





To connect an additional computer to the printer via LAN, or to change from USB to LAN connection, refer to Setup Guide to setup.

2. Switching LAN Connection Method



If you want to switch to USB connection when the printer is used with a LAN connection, refer to Setup Guide to setup.

3. Reconfiguration Method of Wi-Fi Connection



• If you want to switch to Wireless Direct when using the printer with Wi-Fi connection:

Wireless Direct connection is available. Wireless Direct and Wi-Fi connection can be used together. But if you use IEEE802.1X/EAP (WPA/WPA2/WPA3 Enterprise), they can be not used together.

- ➡ Wireless Direct Connection
- Switching to a Wi-Fi connection when using the printer Wireless Direct:

If you connect the printer to your computer or smartphone via a wireless router for the first time to print, or if you want to change the connection frequency between the printer and the wireless router, perform the setup.

• For Windows:

Refer to Changing the Connection Mode.

For macOS:

Refer to Setup Guide and redo setup.

Network Key (Password) Unknown

Diagnose and repair the network connections using Wi-Fi Connection Assistant.

Download Wi-Fi Connection Assistant from the below page, and install it on your computer.

Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

- For Windows:
 - Starting Up Wi-Fi Connection Assistant
- For macOS:
 - Starting Up Wi-Fi Connection Assistant

If the problem persists after diagnosis and repair with Wi-Fi Connection Assistant, check the following items.

- ➡ WPA/WPA2/WPA3 Key Set for Wireless Router Unknown, Cannot Connect
- ➡ Setting an Encryption Key





Check the wireless router settings. For more on setting up a wireless router, see the instruction manual provided with the wireless router or contact its manufacturer. Make sure your computer can communicate with the wireless router.



Setting an Encryption Key



Select the encryption containing WPA2.

Note

• The factory default of wireless router supporting WPA3 may be set to WPA3.

Make sure your computer can communicate with the wireless router using the settings you have selected. For more on setting up a wireless router, see the instruction manual provided with the wireless router or contact its manufacturer.

Using WPA2/WPA3 (Windows)

The authentication method, Wi-Fi password, and dynamic encryption type must be identical among the wireless router, the printer, and your computer.

Enter the Wi-Fi password configured on the wireless router.

AES (secure encryption) is selected automatically as the dynamic encryption method.

For details, see If WPA/WPA2/WPA3 Details Screen Appears.

>>>> Note

- For the secure encryption supported by this printer, see "Network Specifications".
 - ▶ Network Specifications
- To configure IEEE802.1X/EAP (WPA/WPA2/WPA3 Enterprise), you also need to configure the authentication (Radius) server.

Contact the network administrator for more information.



Checking Wireless Router SSID/Key



The position where the SSID/Key of a wireless router is written differs depending on the manufacturer. For details, refer to your wireless router's instruction manual or visit the manufacturer's website.

Note

- Some wireless routers distinguish network names (SSIDs) by the last alphanumeric character according to their bandwidth (2.4 GHz or 5 GHz), purpose (for computer or game machine) or encryption type.
- To configure IEEE802.1X/EAP (WPA/WPA2/WPA3 Enterprise), you also need to configure the authentication (Radius) server.

Contact the network administrator for more information.



Cannot Remember Printer's Password



• If you forgot the administrator password:

Select Various settings > Printer settings > Reset settings > Reset all, in order to restore administrator password to default.

→ Reset settings

After initializing the printer settings, redo setup.

Refer to Setup Guide and redo setup.

• If you forgot the security administrator password:

It is not possible to change or unset the security policy settings/the security administrator password. Contact your nearest Canon service center.

Checking Network Information

- Checking Printer IP Address or MAC Address
- Checking Computer IP Address or MAC Address
- ➡ Checking Communication Between the Computer, the Printer, and the Wireless Router
- ➡ Checking Network Setting Information



Checking Printer IP Address or MAC Address



To check the printer's IP Address or MAC Address, print out the network settings information or use the operation panel to display it.

- · Display on the operation panel.
 - LAN settings
- · Print the network settings.
 - Printing Network Settings

For Windows, you can check the network setting information on the computer screen.

→ Canon Wi-Fi Connection Assistant Screen



Checking Computer IP Address or MAC Address



To check the IP Address or MAC Address of your computer, follow the instructions below.

- · For Windows:
 - 1. Select Command Prompt from Start.
 - 2. Enter "ipconfig/all" and press Enter.

The IP Address and MAC Address of your computer appear. If your computer is not connected to a network, the IP Address does not appear.

- · For macOS:
 - Select System Settings from Apple menu, and then click Network.
 - Make sure network interface used by computer is selected.

Make sure Wi-Fi is Connected when connecting via Wi-Fi or Ethernet is Connected for Wired LAN connection and click.

3. Click **Details** to check the IP Address.

The IP Address of your computer appears. To check the MAC Address, click Hardware.

Checking Communication Between the Computer, the Printer, and the Wireless Router



Perform a ping test to check if communication is taking place.

• For Windows:

1. Select Command Prompt from Start.

2. Type "ping XXX.XXX.XXX.XXX" and press **Enter**.

"XXX.XXX.XXX" is the IP Address of the target device.

If communication is taking place, a message like the one shown below appears.

Reply from XXX.XXX.XXX.XXX: bytes=32 time=10ms TTL=255

If Request timed out appears, communication is not taking place.

For macOS:

1. Start **Terminal** as shown below.

Select Computer from Go menu of Finder, double-click Macintosh HD > Applications > Utilities > Terminal.

2. Type "ping -c3 XXX.XXX.XXX.XXX" and press **Enter**.

"XXX.XXX.XXX" is the IP Address of the target device.

If communication is taking place, a message like the one shown below appears.

64 bytes from XXX.XXX.XXX.XXX: icmp_seq=0 ttl=64 time=3.394 ms

64 bytes from XXX.XXX.XXX.XXX: icmp_seq=1 ttl=64 time=1.786 ms

64 bytes from XXX.XXX.XXX.icmp_seq=2 ttl=64 time=1.739 ms

--- XXX.XXX.XXX ping statistics ---

3 packets transmitted, 3 packets received, 0% packet loss

If the following message is displayed, communication is not working properly.

PING XXX.XXX.XXX (XXX.XXX.XXX): 56 data bytes

---XXX.XXX.XXX.XXX ping statistics ---

3 packets transmitted, 0 packets received, 100% packet loss



Checking Network Setting Information



To check the printer's network settings information, display it using the operation panel of the printer or print it out.

- Display on the operation panel.
 - **► LAN settings**
- Print the network settings.
 - ➡ Printing Network Settings



Restoring Printer's LAN Settings to Defaults



>>> Important

• Initialization erases all network settings on the printer, making printing/scanning operation from a computer over a network impossible. To use the printer over a network again after restoring it to the factory defaults, refer to "Setup Guide" and redo setup.

Initialize the network setting using the printer's operation panel.

Reset settings



Cannot Connect Smartphone/Tablet to Wireless Router



Check Is the Wi-Fi antenna displayed on your smartphone/tablet?

• Example (iOS device):



• Example (Android device):



If the antenna is not displayed, your device's wireless function is disabled. Enable Wi-Fi on your device and connect it to a wireless router. For more on the procedure, refer to your device's instruction manual or visit the manufacturer's website.

Note

• The setup on your smartphone/tablet will be easier when you complete setting up a wireless printer connection on your computer in advance.




Checking Wireless Router Network Name (SSID) for Smartphone/ Tablet




Check it from the setting screen of your smartphone/tablet.

• Example (iOS device):

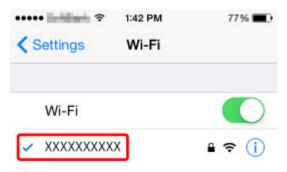

• Example (Android device):

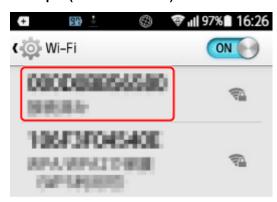

For details on how to display the setting screen, refer to your device's instruction manual or visit the manufacturer's website.

>>>> Important

• Perform setup for your printer and smartphone/tablet so that they can connect to the same wireless router.

Printer Problems

- Printer Does Not Turn On
- ➤ Printer Turns Off Unexpectedly or Repeatedly
- **▶ USB Connection Problems**
- ▶ LCD Is Off
- ➤ Print Head Holder Does Not Move to Replacement Position
- Printer Status Monitor Not Displayed (Windows)
- ▶ Updating Printer Firmware



Printer Does Not Turn On



Check 1 Press **ON** button.

➡ Turning the Printer On and Off

Check 2 Make sure power cord is securely connected to printer, and then turn on again.

Check 3 Unplug printer, leave it for at least 5 minutes, and then plug it back in and turn on again.

If this does not solve the problem, contact your nearest Canon service center to request a repair.



Printer Turns Off Unexpectedly or Repeatedly



Check If printer is set to turn off automatically after a certain time, disable this setting.

If you have set the printer to turn off automatically after a specified time, the power will shut off by itself once that time has elapsed.

- 1. Select Various settings on the HOME screen.
- 2. Select **Printer settings**.
- 3. Select Power control.
- 4. Select Use auto power control.
- 5. Select Auto power off.
- 6. Select Never

The setting to shut off the power automatically is disabled.



USB Connection Problems



If the printer connected to the computer via USB is not recognized, check the following items.

⇒ USB Connection Not Recognized

The following problems may occur even though the USB connection is recognized.

- · Printing is slow.
- · Hi-Speed USB connection does not work.
- A message such as "This device can perform faster" appears (Windows).

If the above is the case, check the following.

■ USB Connection Does Not Work Properly

Note


• If your system environment does not support Hi-Speed USB, the printer operates at the slower speed of Full-Speed or Low-Speed. In this case, the printer works properly but printing speed may slow down due to the communication speed.

USB Connection Not Recognized

Check 1 Make sure printer is turned on.

Check 2 Unplug the USB cable from the printer and the computer, and then connect it again.

As the illustration below, the USB port is at the left side of the printer.

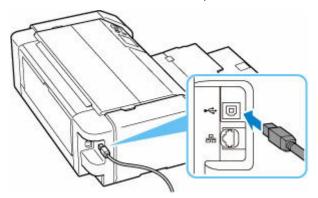

Important

• Check the orientation of the "Type-B" connector and connect to the printer. For details, refer to the instruction manual supplied with the USB cable.

Check 3 Check that **Enable bidirectional support** is selected in **Ports** sheet of **Printer properties** dialog box (Windows).

If not, select it to enable bidirectional support.

Opening Printer Driver's Setup Screen

Check 4 Initialize the printer settings.

Select on HOME screen > Various settings > Printer settings > Reset settings > Reset all.

Reset settings

After initializing the printer settings, redo setup.

Refer to Setup Guide and redo setup.

USB Connection Does Not Work Properly

Check Check following to make sure your system environment supports Hi-Speed USB connection.

- The types of USB cables that can be used differ depending on your printer. Check the shape of the USB cable connection of the printer.
 - ➡ What Is USB cable?
- · Does the USB port on your computer support Hi-Speed USB connection?
- Does the USB cable or the USB hub support Hi-Speed USB connection?

Be sure to use a certified Hi-Speed USB cable. We recommend that the USB cable be no longer than 10 feet / 3 meters or so.

• Is the Hi-Speed USB driver working properly on your computer?

Make sure the latest Hi-Speed USB driver is working properly and install the latest version of the Hi-Speed USB driver for your computer, if necessary.

>>> Important

• For more information, contact the manufacturer of your computer, USB cable, or USB hub.





• If **ON** lamp is off:

The printer is not powered on. Check that the power cord is connected and press the **ON** button.

- → Turning the Printer On and Off
- If **ON** lamp is lit:

The LCD may be in screen-saver mode. Press any button on the operation panel.



Print Head Holder Does Not Move to Replacement Position



Check1 Is **ON** lamp off?

Check if the ON lamp is lit.

The print head holder will not move unless the power is on. If the **ON** lamp is off, close the top cover and turn the printer on.

The **ON** lamp flashes while the printer is initializing. Wait until the **ON** lamp stops flashing and remains lit, open the top cover again, then press the **Stop** button.

Check2 Is an error message displayed on LCD?

Close the top cover, follow the support code (error number) displayed in the error message to resolve the error, and then reopen it. For details on resolving the error, see <u>List of Support Code for Error</u>.

Check3 Has top cover been left open for 10 minutes or longer?

If the top cover is left open for more than 10 minutes, the print head holder moves to the position to protect it to prevent the print head from drying out. Close and reopen the top cover, then press the **Stop** button to return the print head holder to the position for replacing.

Check4 Has printer been printing continuously for a long period?

Close the top cover, reopen it after a while, then press the **Stop** button.

If the printer has been printing continuously for a long time, the print head holder may not move to the position for replacing since the print head may overheat.



Printer Status Monitor Not Displayed (Windows)



Check 1 Is printer status monitor enabled?

Make sure that Enable Status Monitor is selected on the Option menu of the printer status monitor.

- 1. Open the Printer Driver **Printing Preferences** window.
 - → Opening Printer Driver's Setup Screen
- 2. On Maintenance sheet, click View Printer Status.
- 3. Select **Enable Status Monitor** on **Option** menu if it is not selected.

Check 2 Make sure that all **Windows Updates** have been applied.

If all **Windows Update** have not been applied, the printer status monitor screen will not be displayed. Apply all **Windows Update**.



Updating Printer Firmware



Refer to below on how to update the firmware.

➡ Firmware update

Installation and Download Problems

- ➤ Failed to Printer Driver Installation (Windows)
- Updating Printer Drivers in Network Environment (Windows)
- Disable Function to Send Usage Information of Printer
- Setup Application Asks for the Administrator's Username and Password (Windows)
- Enable Printing from PC/Smartphone/Tablet
- ➤ Installing Printer Drivers on PC without Network Connection (Windows)



Failed to Printer Driver Installation (Windows)



If the printer driver were not installed correctly, make sure that all **Windows Update** have been applied. If all **Windows Update** have not been applied, apply all **Windows Update**.

After confirming Windows Update, perform the following operations to install the printer driver.

1. Open screen to uninstall printer Driver.

For Windows 11:

Select **Settings** > **Apps**.

Select Apps & features.

For Windows 10:

Select Settings > Apps.

2. Check if there is "Canon XXX series Driver" or "Canon XXX series Printer Driver" you want to install in list.

"XXX" is the model name.

3. If you find printer driver for printer you want to install, uninstall it.

If not found, proceed to the next step.

4. Restart computer.

After restarting, install the latest printer driver.

>>>> Important

• For Windows:

To restart your computer, choose **Restart** instead of **Shut down**.



Updating Printer Drivers in Network Environment (Windows)



Download the latest printer driver in advance.

Download the latest printer driver for your model on the download page of the Canon website.

After the download is completed, overwrite and install the new version of the printer driver according to the specified installation procedure.

Note

• The network settings on the printer are not affected, so the printer can be used on the network without redoing settings.



Disable Function to Send Usage Information of Printer



The function to send usage information of the printer is configured or controlled by the printer, computer, and smartphone/tablet separately. Disable the function from each device as well as the printer.

Important

- Make sure each device is connected to Internet before disabling the function to send usage information.
- In some case, it may take time for your choice to be reflected in your printer.
- **➡** For Windows:
- ➡ For macOS:



➡ For Smartphone/Tablet App

For Windows:

Perform setup procedure to change the setting for sending information of the printer.

- **1.** Make sure computer to change setting is connected to Internet.
- **2.** Start setup procedure.
 - → Set Up
- 3. Click Setting Up Your New Printer on Start Setup screen.

Proceed the setup procedure according to the instructions on the screen until the **For using services related to Canon product** license agreement screen appears.

4. Click **Do not agree** on **For using services related to Canon product** license agreement screen.

The warning screen appears.

- **5.** Click **OK** on displayed screen.
- 6. Proceed setup procedure to the end according to instructions on screen.
- 7. If For using services related to Canon product license agreement screen appears again after a certain period of time, click Do not agree.

>>> Note

- Depending on your operating environment, it may take time for the license agreement screen to appear.
- Do not turn off the printer until the license agreement screen appears again.

For macOS:

Perform setup procedure to change the setting for sending information of the printer and macOS.

- **1.** Start setup procedure.
 - Set Up
- 2. Click Setting Up Your New Printer on Start Setup screen.

Proceed the setup procedure according to the instructions on the screen until the **For using services** related to Canon product license agreement screen appears.

3. Click **Do not agree** on **For using services related to Canon product** license agreement screen.

The warning screen appears.

- 4. Click **OK** on displayed screen.
- **5.** Proceed setup procedure to the end according to instructions on screen.
- **6.** If **For using services related to Canon product** license agreement screen appears again after a certain period of time, click **Do not agree**.

Note

- Depending on your operating environment, it may take time for the license agreement screen to appear.
- · Do not turn off the printer until the license agreement screen appears again.

For Smartphone/Tablet App



Use the App to change the setting for sending information of the printer and smartphone/tablet.

- 1. Check that printer is turned on.
- 2. Start up the App.
- 3. Tap Menu on lower right.
- 4. Tap About.

5. Tap Settings for Data Sending.

The Settings for Data Sending screen appears.

6. Check displayed message, unselect **Agree** of the items you want to stop sending and tap **OK**.

If you have not selected the first item from the top, warning screen appears and tap **OK**.

The function to send usage information from the App is disabled.

Select Agree to enable the function to send usage information of each item and tap OK.

Next, disable the function to send usage information from the printer.

7. Tap Home on lower left.

Make sure the printer to change the setting is selected.

- 8. Tap printer icon.
- 9. Tap Settings for Data Sending.

The **Settings for Data Sending** screen appears.

10. Check displayed message, unselect **Agree** of the items you want to stop sending and tap **OK**.

If you have not selected the first item from the top, warning screen appears and tap **OK**.

The function to send usage information from the printer is disabled

Select Agree to enable the function to send usage information of each item and tap OK.

>>> Note

- Do not turn off the printer until you finish changing the setting on your smartphone/tablet.
- If multiple devices are connected to the printer, you need to disable the function to send usage
 information on all devices. If the function is enabled on one of the devices, sending usage information
 will continue.




Setup Application Asks for the Administrator's Username and Password (Windows)



Check Enter the username and password of the local administrator account.

When you install or launch the printer setup application on your PC, you may be asked to enter the administrator's username and password. In such cases, enter the username and password of the local administrator account, and not your current username and password.

If you do not have this information, contact the administrator of your PC.

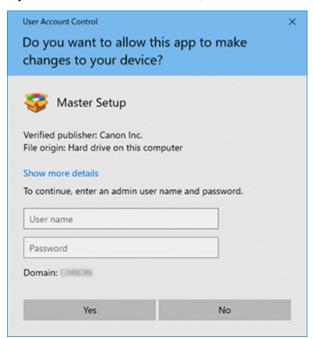



Enable Printing from PC/Smartphone/Tablet



Check Run the setup software on the device on which you want to enable printing.

If the printer and the router are already connected and you need to connect new PC/smartphone/tablet to the printer, run the setup software on the device on which you want to enable printing.



Access the following link on the device on which you want to enable printing.

- For Windows:
 - Connecting to a Computer
- For macOS:
 - ➡ Connecting to a Computer
- For smartphone/tablet:
 - ➡ Connecting to a Smartphone



Installing Printer Drivers on PC without Network Connection (Windows)



Check Install printer driver with a USB flash drive or SD card (removable media).

Using another PC with a network connection, download printer driver for your model to a USB flash drive, SD card, or other removable media.

After downloading it, move the data to the PC without a network connection and install it following the instructions.

Printing Problems

- Printer Does Not Print
- **▶** Printing Stops
- ➤ Cannot Print on the Disc Label
- Default Printer Keeps Changing (Windows)
- ➤ Change to Offline (Windows)/Cannot Communicate (Windows)
- ➤ No Ink Level Appears in Canon IJ Status Monitor (Windows)



Printer Does Not Print



Check 1 Make sure printer is turned on.

If not, make sure the printer is securely plugged in and press **ON** button to turn on.

Check 2 Make sure printer is properly connected to computer.

If you are using a USB cable, make sure it is securely connected to both the printer and the computer. When the USB cable is securely plugged in, check the following:

- If you are using a relay device such as a USB hub, disconnect it, connect the printer directly to the computer, and retry the printing. If printing starts normally, there is a problem with the relay device. Contact the vendor of the relay device.
- There could also be a problem with the USB cable. Replace the USB cable and retry the printing.

If you use the printer with a network connection, make sure the printer is correctly set up for network use.

Cannot Find Printer on Network (Windows/macOS)

Note

Wi-Fi Connection Assistant allows you to diagnose and repair the network status.

Select the link below to download Wi-Fi Connection Assistant and install it.

➡ Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

- For Windows:
 - Starting Up Wi-Fi Connection Assistant
- For macOS:
 - Starting Up Wi-Fi Connection Assistant

Check 3 Make sure paper settings match information set for top feed or manual feed tray.

If the paper settings do not match the information set for the top feed or manual feed tray, an error message appears on the operation panel. Follow the instructions on the operation panel to solve the problem.

Note

- · You can select whether the message which prevents misprinting is displayed.
 - To change the message view setting when printing using the printer's operation panel:
 - Paper-related settings
 - To change the message view setting when printing using the Printer Driver:

- Changing the Printer Operation Mode (Windows)
- ➡ Changing the Printer Operation Mode (macOS)

Check 4 If printing from a computer, delete unnecessary print jobs.

- For Windows:
 - Deleting the Undesired Print Job
- For macOS:
 - ▶ Deleting the Undesired Print Job

Check 5 Make sure that the multi-purpose tray guide is closed.

If the multi-purpose tray guide is opened, close it.

Check 6 Is manual feed tray in paper feed position?

If the manual feed tray is in the paper jam clearing position, return the tray to the paper feed position and press the **OK** button on the printer.

Check 7 Are media type and paper size specified properly in the printer driver?

When the media type is specified to **Photo Paper Pro Premium Matte**, **Premium Fine Art Smooth**, **Premium Fine Art Rough**, or **Matte Photo Paper** in the printer driver, specify a paper size from the following size that has wide margins.

- A4 (Margin 25)
- Letter (Margin 25)/US Letter (Margin 25)
- A3 (Margin 25)
- A3+ (Margin 25)
- 210x594mm (Margin 25)
- 11"x17" (Margin 25)/Tabloid Margin 25

Important

- By canceling the safety margin regulation with the following method, you can print with normal paper size.
 - For Windows:

Click **Print Options** on **Page Setup** sheet of the printer driver. Then select **Cancel the safety margin regulation for paper size** check box in the dialog that appears.

— For macOS:

Select Cancel Margin Regulation check box in Advanced Paper Settings in the Print dialog.

If you print with normal paper size, conditions such as paper abrasion may cause paper stains or deterioration of print quality depending on the environment. We recommend that you print with a paper size that has wide margins.

Check 8 Are your printer's Printer Driver selected when printing?

The printer will not print properly if you are using a printer driver for a different printer.

For Windows:

Make sure "Canon XXX series" (where "XXX" is your printer's name) is selected in the Print dialog box.

Note

- If multiple printers are registered to your computer, set your printer as **Let Windows manage my default printer** so that it is selected by default.
 - ➡ Default Printer Keeps Changing (Windows)

For macOS:

Make sure your printer's name is selected in **Printer** in the Print dialog.

Note

If multiple printers are registered to your computer, select Set as Default Printer from System
 Settings > Printers & Scanners for a printer to make the one selected by default.

Check 9 Are you trying to print a large data file? (Windows)

If you are trying to print a large data file, it takes a long time to start printing.

If the printer does not start printing after a certain period of time, select **On** for **Prevention of Print Data Loss** on the **Print Options** dialog box.

For details, refer to Page Setup Tab Description.

>>>> Important

- Selecting **On** for **Prevention of Print Data Loss** may reduce print quality.
- After printing is completed, select **Off** for **Prevention of Print Data Loss**.

Check 10 If printing from your computer, restart the computer.

Restart the computer and try printing again.

>>> Important

· For Windows:

To restart your computer, choose **Restart** instead of **Shut down**.



Printing Stops



Check 1 Is paper loaded?

Make sure paper is loaded.

If necessary, load paper.

Check 2 Do documents to be printed have many photographs or illustrations?

It takes time for the printer and the computer to process large data such as photos or other graphics, so it may seem that the printer is not working.

Also, if you are printing data that requires a lot of ink on successive sheets of plain paper, the printer may pause temporarily. In either case, wait until the process is complete.

Note

• If you are printing a document with a large printing area or printing several copies, printing may pause to allow the ink to dry.

Check 3 Has printer been printing continuously for a long period?

If the printer has been printing continuously for a long time, the print head or other parts around it may overheat. The printer may stop printing at a line break for a period of time and then resume printing.

In this case, wait a while without doing anything. If the printing does not resume, turn the printer off. After waiting for a while, turn on the printer, and check whether printing is possible.

Caution

• Print head and surrounding area in the printer can become extremely hot. Never touch print head or nearby components.

Cannot Print on the Disc Label

- ➡ Disc Label Printing Does Not Start
- → Multi-Purpose Tray Does Not Feed Properly
- → Multi-Purpose Tray Jammed



Disc Label Printing Does Not Start



Check1 Is multi-purpose tray placed properly?

Place the multi-purpose tray properly again and select **OK** on the LCD.

Use the multi-purpose tray (marked A) supplied with this printer.

For more on placing the multi-purpose tray, see Placing/Removing a Printable Disc.

Check2 Is printable disc placed on multi-purpose tray?

Place the printable disc on the multi-purpose tray properly and select **OK** on the LCD.

Use the multi-purpose tray (marked A) supplied with this printer.

For more on placing the multi-purpose tray, see Placing/Removing a Printable Disc.

Check3 Has time elapsed since you placed the multi-purpose tray?

If a certain period of time has elapsed since you placed the multi-purpose tray, it may be ejected.

Follow the instructions on the LCD and try the operation again.



Multi-Purpose Tray Does Not Feed Properly



Check1 Is multi-purpose tray placed properly?

Place the multi-purpose tray properly again and select **OK** on the LCD.

Use the multi-purpose tray (marked A) supplied with this printer.

For more on placing the multi-purpose tray, see Placing/Removing a Printable Disc.

Check2 Unrecognizable printable disc may be placed.

Canon recommends that you use printable discs specially processed to be printed on by an inkjet printer.

Multi-Purpose Tray Jammed



Pull out the multi-purpose tray gently.

If the multi-purpose tray cannot be pulled out, cycle the power switch. The multi-purpose tray will automatically be ejected.

When the multi-purpose tray is pulled out, place the multi-purpose tray (marked A) again and retry printing. For more on placing the multi-purpose tray, see Placing/Removing a Printable Disc.

If the multi-purpose tray is still jammed, check if there is a problem with the printable disc.

→ Multi-Purpose Tray Does Not Feed Properly



Default Printer Keeps Changing (Windows)



From Windows 10, the management method of the printer that is normally used has changed. Check the following items for your Windows.

- **→** For Windows 11:
- **→** For Windows 10:

For Windows 11:

From Settings in the Start menu, change the setting of the printer you normally use.

- 1. Open Set Printers & scanners.
- 2. Turn off Let Windows manage my default printer.
- **3.** Click the name of printer you normally want to use.
- 4. Click Set as default displayed at top of window.

When the printer is set as default, the **Default** is appeared.

For Windows 10:

From **Settings** in the **Start** menu, change the setting of the printer you normally use.

- 1. Open Set Printers & scanners.
- 2. Remove the check mark from Let Windows manage my default printer.
- 3. Click the name of printer you normally want to use.
- 4. Click Manage.
- 5. Select Set as default.

When the printer is set as default, the **Default** is appeared.



Change to Offline (Windows)/Cannot Communicate (Windows)




If the printer cannot communicate with the computer, an error message "Offline" may be displayed when printing. To bring the printer back online, try the following.

1. Check the connection (USB/Wi-Fi).

For USB connection:

Make sure that the USB-connected printer is recognized by the computer.

For Wi-Fi connections:

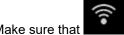

appears on the printer's LCD.

2. Turn off printer and then turn it on again.

Confirm that the offline mode has been disabled. If the printer is still offline, proceed to the next step.

3. Check the name of the printer driver.

Check the names of the printer and printer driver match. Set the using printer as default.

→ Default Printer Keeps Changing (Windows)

Confirm that the offline mode has been disabled. If the printer is still offline, proceed to the next step.

4. Make sure that printer is not set to **Use Printer Offline** mode.

For Windows 11:

- 1. Open Set Printers & scanners.
- 2. Click the name of printer you want to configure.
- 3. Click Printing preferences.

Printing preferences window opens.

- 4. Click Maintenance sheet.
- 5. Click View Printer Status.

The Canon IJ Status Monitor window is displayed.

6. Click **Display Print Queue** of the Canon IJ Status Monitor window.

The Print Queue window is displayed.

7. Click **Printer** menu in the window displayed.

Make sure Use Printer Offline is not selected.

If it is selected, click Use Printer Offline to deselect it.

Confirm that the offline mode has been disabled. If the printer is still offline, proceed to the next step.

For Windows 10:

- 1. Open Set Printers & scanners.
- 2. Click the name of printer you want to configure, and select Open queue.

The Print Queue window is displayed.

3. Click **Printer** menu in the window displayed.

Make sure Use Printer Offline is not selected.

If it is selected, click Use Printer Offline to deselect it.

Confirm that the offline mode has been disabled. If the printer is still offline, proceed to the next step.

5. For Wi-Fi connections, use Wi-Fi Connection Assistant to change settings.

Diagnose and repair the network connections using Wi-Fi Connection Assistant.

Download Wi-Fi Connection Assistant from the below page, and install it on your computer.

→ Checking Printer Connection Status Using Wi-Fi Connection Assistant

Refer to below in regard to starting up Wi-Fi Connection Assistant.

→ Starting Up Wi-Fi Connection Assistant

Confirm that the offline mode has been disabled. If the printer is still offline, proceed to the next step.

6. Uninstall printer driver and reinstall printer driver.

If your printer driver version is old or not installed correctly, you may not be able to print.

Confirm that the offline mode has been disabled. If the printer is still offline, proceed to the next step.

7. Restart computer.

The computer may be unstable for some reason. Restart the computer and try to print.

>>>> Important

• To restart your computer, choose Restart instead of Shut down.



No Ink Level Appears in Canon IJ Status Monitor (Windows)



Use the Printer Driver with bidirectional communication.

Select **Enable bidirectional support** in the **Ports** sheet of the properties dialog box of the printer driver.

→ Opening Printer Driver's Setup Screen

Paper is not Fed or Ejected Properly

- ➤ What to Do When Paper Is Jammed
- ➤ Printer Does Not Pick up or Feed the Paper/"No Paper" Error
- ➤ Paper Does Not Feed from Paper Source Specified in Printer Driver (Windows)
- ➤ What to Do If Paper Is Not Fed/Output Normally

What to Do When Paper Is Jammed


If paper jams, remove it following the appropriate procedure as shown below.

Note

- If the paper is not jammed (no support code displayed) but the paper is not fed or output normally, see
 What to Do If Paper Is Not Fed/Output Normally.
- → If the paper loaded in the top feed is jammed:
- → If the paper loaded in the manual feed tray is jammed:
- **▶** If the paper is jammed inside the printer:
- ➡ If the small size paper is jammed inside the printer:

If the paper loaded in the top feed is jammed:

1. Slowly pull out paper, either from paper output slot or from top feed, whichever is easier. Hold the paper with your hands and pull the paper out slowly not to tear it.

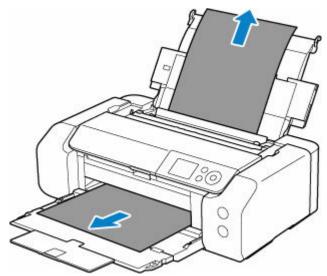

Note

- If you cannot pull out the paper, turn the printer back on. The paper may be ejected automatically.
- If paper becomes jammed during printing and you need to turn off the printer to remove it, press the **Stop** button to stop the printing before you turn off the printer.
- If the paper tears and you cannot remove the jammed paper from the paper output slot or the top feed, remove the paper from inside the printer.
 - ➡ If the paper is jammed inside the printer
- 2. Reload paper and press printer's **OK** button.

The printer resumes printing. Reprint the page you were printing if it was not printed properly due to the paper jam.

If you turned off the printer in step 1, the print data that was sent to the printer is erased. Redo the printing.


Note

- When reloading the paper, make sure you are using suitable paper and loading it correctly.
- We recommend using paper sizes other than A5 to print documents with photos or graphics. A5 paper may curl and jam as it leaves the printer.

If the measures above do not solve the problem, contact your Canon dealer for assistance.


If the paper loaded in the manual feed tray is jammed:

1. Press **Paper Jam Clearing** button and set manual feed tray to paper jam clearing position.

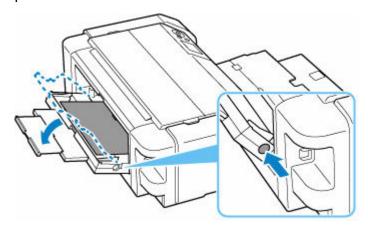

2. Slowly pull out paper, either from paper output slot or from manual feed tray, whichever is easier.


Hold the paper with your hands and pull the paper out slowly not to tear it.

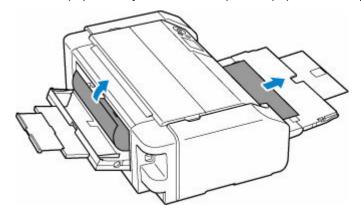

>>> Note

- If you cannot pull out the paper, turn the printer back on. The paper may be ejected automatically.
- If paper becomes jammed during printing and you need to turn off the printer to remove it, press the **Stop** button to stop the printing before you turn off the printer.

- If the paper tears and you cannot remove the jammed paper from the paper output slot or the manual feed tray, remove the paper from inside the printer.
 - ➡ If the paper is jammed inside the printer
- 3. Return manual feed tray to original position.

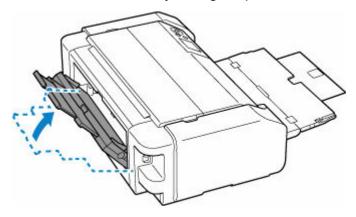

4. Reload paper and press printer's **OK** button.

The printer resumes printing. Reprint the page you were printing if it was not printed properly due to the paper jam.

If you turned off the printer in step 2, the print data that was sent to the printer is erased. Redo the printing.

Note

When reloading the paper, make sure you are using suitable paper and loading it correctly.


If the measures above do not solve the problem, contact your Canon dealer for assistance.

If the paper is jammed inside the printer:

If the jammed paper tears and you cannot remove the paper either from the paper output slot, from the top feed, or from the manual feed tray, or if the jammed paper remains inside the printer, remove the paper following the instructions below.


Note

- If paper becomes jammed during printing and you need to turn off the printer to remove it, press the **Stop** button to stop the printing before you turn off the printer.
- 1. Turn off printer and unplug it.
- 2. Open top cover and multi-purpose tray guide.

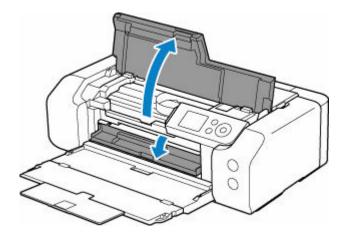

>>> Important

• Do not touch clear film (A) or white belt (B).

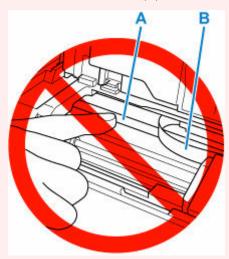


If you soil or scratch these parts by touching them with paper or your hand, it could damage the printer.


3. Check if jammed paper is under print head holder.

If the jammed paper is under the print head holder, move the print head holder to the far right or left, whichever makes it easier to remove the paper.


When moving the print head holder, hold the top of the print head holder and slide it slowly to the far right or left.

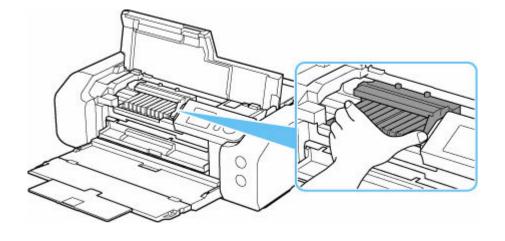

4. Hold jammed paper firmly in both hands.

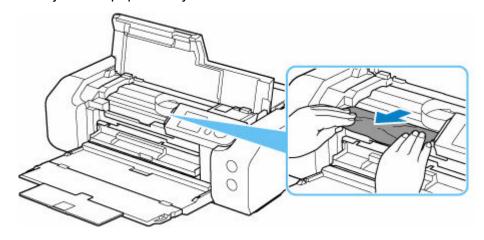


If the paper is rolled up, pull out it.

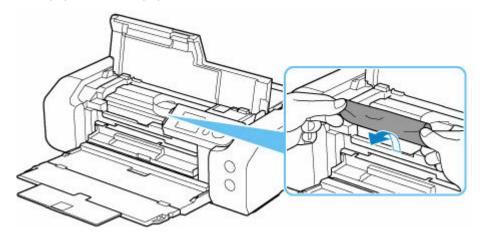

5. Slowly pull out paper, so as not to tear it.


Pull out the paper at an angle of about 45 degrees.

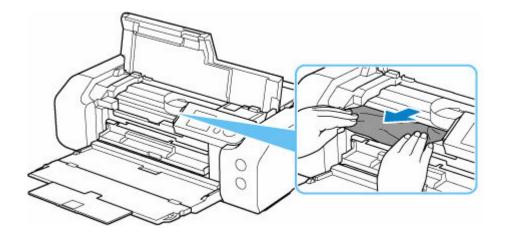

6. Make sure all jammed paper is removed.

If the paper tears when you pull out it, a bit of paper may remain in the printer. Check the following and remove any remaining paper.

- Any paper left under the print head holder?
- · Any small bits of paper left in the printer?
- Any paper left in the left and right empty spaces (C) in the printer?

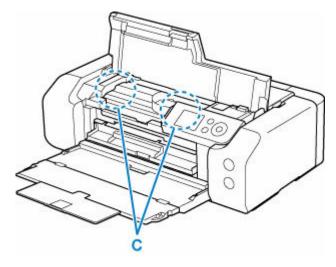

7. Close top cover and multi-purpose tray guide.

All jobs in the print queue are canceled. Redo the printing.

Note


When reloading the paper, make sure you are using suitable paper and loading it correctly. If a
paper jam message appears on the LCD or on your computer screen when you resume printing
after removing all the jammed paper, there may be some paper still inside the printer. Check the
printer again for any remaining bits of paper.

If the measures above do not solve the problem, contact your Canon dealer for assistance.

If the small size paper is jammed inside the printer:

>>>> Important

Do not load the small size paper such as 4"x6" 10x15cm size paper in the landscape orientation. It
may cause a paper jam.

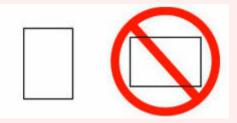


- You cannot print on paper smaller than the minimum size.

If the small size paper is jammed inside the printer, remove the paper following the instructions below.


1. Load one sheet of paper larger than 4"x6" 10x15cm in top feed in portrait orientation.

Align the paper guides of the top feed with both edges of the paper.

Do not load the small size paper in the landscape orientation.

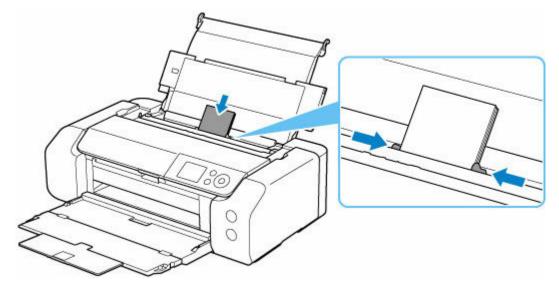

Close the feed slot cover.

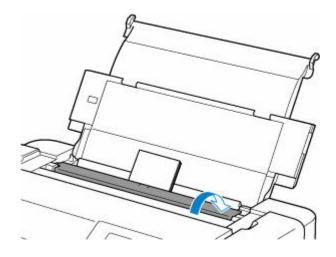

- **2.** Turn off the printer.
- **3.** Turn on the printer.

The loaded paper is fed and ejected while pushing out the jammed paper.

If the jammed paper is not ejected even after taking the above measures, try the following procedure.

- **4.** Perform paper feed roller cleaning of the manual feed tray.

The jammed paper is ejected together with the paper used for paper feed roller cleaning.

All jobs in the print queue are canceled. Redo the printing.

Note

When reloading the paper, make sure you are using suitable paper and loading it correctly.
 If a paper jam message appears on the printer's LCD or on your computer screen when you resume printing after removing all the jammed paper, there may be some paper still inside the printer. Check the printer again for any remaining bits of paper.

If the problem persists even after repeating the above measures, contact your Canon dealer for assistance.



Printer Does Not Pick up or Feed the Paper/"No Paper" Error



Check 1 Make sure paper is loaded.

- ★ Loading Paper in the Top Feed
- ➡ Loading Paper in the Manual Feed Tray

Check 2 When loading paper, consider the following.

• When loading two or more sheets of paper, flip through the paper before loading.



- When loading two or more sheets of paper, align the edges of the sheets before loading the paper.
- When loading two or more sheets of paper, make sure the paper stack does not exceed the paper load limit.

However, paper may not feed correctly at the maximum capacity, depending on the type of paper or environmental conditions (very high or low temperature and humidity). In such cases, reduce the amount of paper you load at a time to less than half of the paper load limit.

• Always load the paper in portrait orientation, regardless of the printing orientation.

In the manual feed tray:

When you load the paper, load one sheet at a time. When you print continuously, set the next paper after the last one is finished printing.

Check 3 Is paper too thick or curled?

Check 4 When loading postcards, consider the following:

 If a postcard is curled, it may not feed properly even though the paper stack does not exceed the paper load limit.


Load Japanese postcards with their postcode column downward.

Check 5 Check paper source setting.

- ➡ Switching the Paper Source to Match the Purpose (Windows)
- ➡ Switching the Paper Source to Match the Purpose (macOS)


Check 6 Make sure paper weight is suitable for use with printer.

Check 7 Make sure there are not any foreign objects in top feed or manual feed tray.

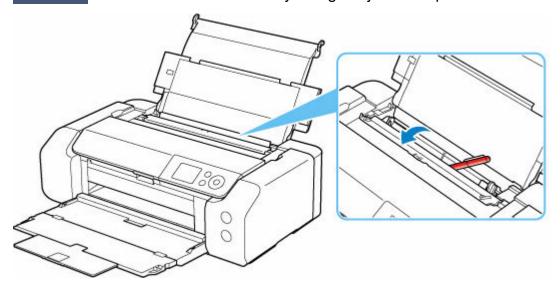

If the paper tears in the top feed or the manual feed tray, see What to Do When Paper Is Jammed to remove it.

If there are any foreign objects in the top feed or manual feed tray, be sure to turn off the printer, unplug it and remove the foreign object.

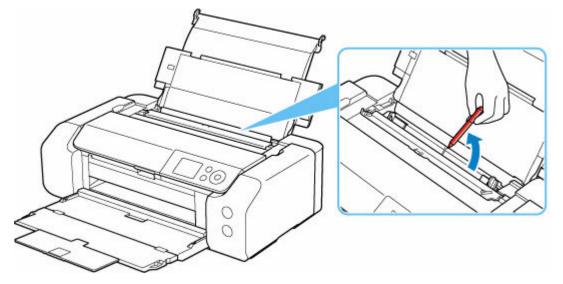

Note

• If the feed slot cover is opened, close it slowly.

Check 8 Clean paper feed roller.

Cleaning Paper Feed Rollers

Note

• Cleaning the paper feed roller abrades it, so do this only when necessary.

If the measures above do not solve the problem, contact your Canon dealer for assistance.	



Paper Does Not Feed from Paper Source Specified in Printer Driver (Windows)



Check Is paper source setting inconsistent between application program and Printer Driver?

Change the application software setting corresponding to the Printer Driver setting, or click **Print Options** on **Page Setup** sheet of the Printer Driver and select **Disable the paper source setting of the application software** on **Print Options** screen.

When the paper source setting is inconsistent between an application program and the Printer Driver, the application software setting takes precedence.

For details, refer to Page Setup Tab Description.




What to Do If Paper Is Not Fed/Output Normally




If the paper is not jammed and the paper is not fed normally, follow the procedure below.

Check 1 Is anything blocking paper output slot?

Check 2 Are there any foreign objects in top feed or manual feed tray?

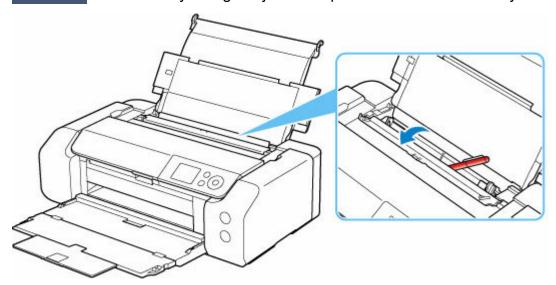

If there are any foreign objects in the top feed or the manual feed tray, be sure to turn off the printer, unplug it, and then remove the foreign object.

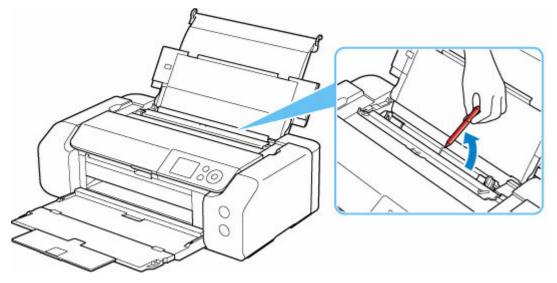

Note


• If the feed slot cover is opened, close it slowly.

Check 3 Is paper curled?

Correct curl before loading paper.

Check 4 Is paper loaded properly?

Always load paper in portrait orientation (A). If you load paper in landscape orientation (B), paper may not be fed or a paper jam may occur.

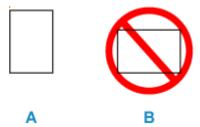

- ▶ Loading Paper in the Top Feed
- ★ Loading Paper in the Manual Feed Tray

Paper Setting Problems

▶ I want to know the paper types that can be used in this printer



I want to know the paper types that can be used in this printer



For information about paper that can be used with this printer, refer to "Media Types You Can Use".

→ Media Types You Can Use

Ink-related Problems

- ► Ink Does Not Come Out
- > Printer consumes a lot of ink



Ink Does Not Come Out



Check 1 Check the remaining ink level.

→ Checking Ink Level

Check 2 Are the print head nozzles clogged?

Print the nozzle check pattern and make sure that the ink is coming out normally.

- ➡ Checking for Nozzle Clogging

Check 3 Is the correct printer driver selected?

Print again using the correct printer driver for your printer.

If none of the above apply, there may be a printer malfunction.

Contact your Canon dealer for assistance.



Printer consumes a lot of ink



Check 1 Are lots of full-color materials being printed?

In print jobs such as photos, images are filled with color. This consumes a lot of ink. This does not indicate a problem with the printer.

Check 2 You have just finished initial installation, when more ink is consumed to fill the system.

If using the printer for the first time, or using it after transport, the ink tank will supply an initial fill of ink to the Print head.

Although the amount of remaining ink may drop as a result, it does not indicate a problem.

Check 3 Is the Print head nozzle blocked?

Check for nozzle clogging.

- ➡ Checking for Nozzle Clogging
- → Maintenance Procedure

List of Support Code for Error

Support code appears on the printer's LCD and your computer screen when errors occur.

A "support code" is an error number, and appears along with an error message.

When an error occurs, check the support code and take the appropriate action in response.

Support Code Appears on Printer's LCD and Computer Screen

• 1000 to 1ZZZ

<u>1000</u>	<u>1001</u>	<u>1002</u>	<u>1006</u>	<u>1013</u>	<u>1062</u>	<u>1200</u>	<u>1250</u>	<u>1261</u>	<u>1300</u>	<u>1308</u>	<u>1351</u>
<u>1401</u>	<u>1403</u>	<u>1405</u>	<u>1408</u>	<u>1409</u>	<u>140A</u>	<u>140C</u>	<u>1410</u>	<u>1411</u>	<u>1412</u>	<u>1413</u>	<u>1414</u>
<u>1415</u>	<u>1416</u>	<u>1417</u>	<u>1418</u>	<u>1419</u>	<u>1500</u>	<u>1551</u>	<u>1552</u>	<u>1570</u>	<u>15A1</u>	<u>15A2</u>	<u>15A3</u>
<u>1600</u>	<u>1660</u>	<u>1684</u>	<u>168C</u>	<u>1698</u>	<u>1699</u>	<u>1700</u>	<u>1701</u>	<u>1716</u>	<u>1730</u>	<u>1750</u>	<u>1830</u>
<u>1850</u>	<u>1851</u>	<u>1855</u>	<u>1856</u>	<u>1857</u>							

• 2000 to 2ZZZ

<u>2103</u> <u>2114</u> <u>2115</u> <u>2500</u> <u>2503</u>

• 3000 to 3ZZZ

3000	<u>3306</u>	<u>3310</u>	<u>3311</u>	<u>3312</u>	<u>3313</u>	<u>3314</u>	<u>3315</u>	<u>3316</u>	<u>3317</u>	<u>3318</u>	<u>3319</u>
<u>3413</u>	3440	<u>3441</u>	3442	3443	3444	<u>3445</u>	<u>3446</u>	3447	<u>3454</u>	<u>3455</u>	

• 4000 to 4ZZZ

<u>4103</u> <u>4104</u> <u>4109</u> <u>410E</u> <u>4111</u> <u>495A</u>

• 5000 to 5ZZZ

<u>5100</u> <u>5200</u> <u>520C</u> <u>520E</u> <u>5250</u> <u>5400</u> <u>5700</u> <u>5800</u> <u>5801</u> <u>5816</u> <u>5822</u> <u>5C02</u> <u>5C13</u> <u>5C14</u>

• 6000 to 6ZZZ

<u>6000</u>	<u>6001</u>	<u>6004</u>	<u>6500</u>	<u>6502</u>	<u>6503</u>	<u>6700</u>	<u>6701</u>	<u>6800</u>	<u>6801</u>	<u>6830</u>	<u>6831</u>
<u>6832</u>	<u>6833</u>	<u>6900</u>	<u>6901</u>	<u>6902</u>	<u>6910</u>	<u>6920</u>	<u>6921</u>	<u>6930</u>	<u>6931</u>	<u>6932</u>	<u>6933</u>
<u>6940</u>	<u>6941</u>	<u>6942</u>	<u>6943</u>	<u>6944</u>	<u>6945</u>	<u>6946</u>	6A80	6A81	<u>6D01</u>		

• 7000 to 7ZZZ

<u>7600</u> <u>7700</u> <u>7800</u> <u>7802</u>

• 8000 to 8ZZZ

<u>8200</u> <u>8300</u>

• A000 to ZZZZ


<u>B400</u> <u>C000</u> <u>C100</u> <u>C101</u>

When Error Occurred


If an error occurs in printing, for example, if the paper runs out or jams, a troubleshooting message appears automatically. Take the appropriate action described in the message.

When an error occurs, a message is displayed on the computer or on the printer. For some errors, a support code (error number) is also displayed.

When a Support Code and a Message are displayed on the Computer Screen (Windows):

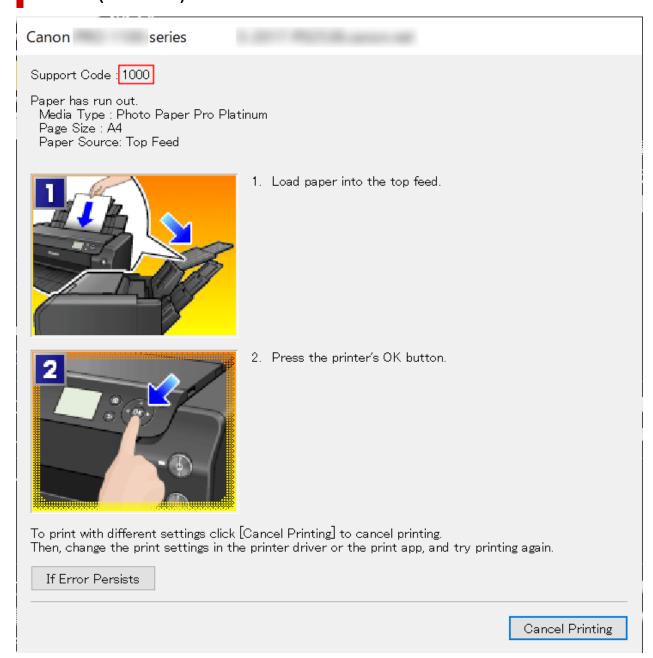

When a Support Code and a Message are displayed on the Printer's LCD:

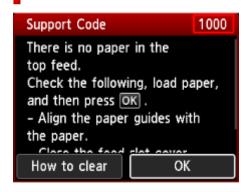

For details on how to resolve errors with Support Codes, see <u>List of Support Code for Error</u>.

Cause

Possible causes include the following.

- There is no paper in the top feed.
- · Paper is not loaded in the top feed properly.


What to Do

Take the corresponding actions below.


- · Load paper in the top feed.
 - ▶ Loading Paper in the Top Feed

Note

- The loadable paper differs depending on the paper source. For details on the paper that can be loaded in the top feed, refer to <u>Paper Sources to Load Paper</u>.
- Load one sheet of A4 / Letter size plain paper in the top feed before aligning the print head during the first printer setup.
- Align the paper guides of the top feed with both edges of the paper.

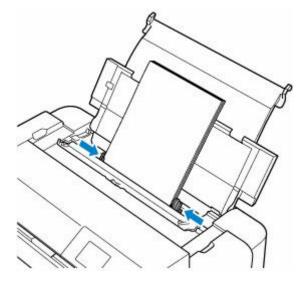

· Close the feed slot cover.

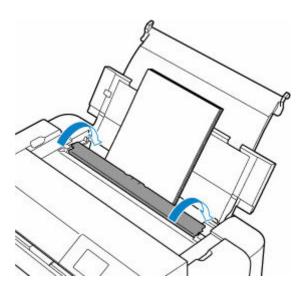

After carrying out the above measures, press the printer's ${\bf OK}$ button.

>>> Note

Cause

There is no multi-purpose tray.

What to Do


Place a multi-purpose tray compatible media on the multi-purpose tray, and then attach the multi-purpose tray to the printer.

➡ Placing Multi-purpose Tray

Then press the printer's **OK** button to cancel the error.

>>> Important

• When you print on multi-purpose tray compatible media, use the supplied multi-purpose tray (the one with the "A" mark).

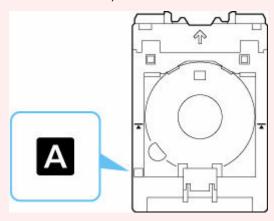

>>> Note

Cause

Printable disc (CD/DVD/BD, etc.) is not set, or the disc position is misaligned.

What to Do


Remove the multi-purpose tray, place the printable disc properly, and then attach the multi-purpose tray to the printer.

➡ Placing/Removing a Printable Disc

Then press the printer's **OK** button to cancel the error.

>>> Important

• When you print on multi-purpose tray compatible media, use the supplied multi-purpose tray (the one with the "A" mark).

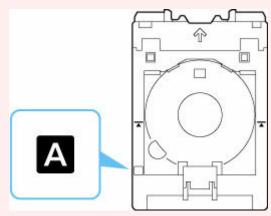

>>> Note

Cause

Possible causes include the following.

- There is no paper in the manual feed tray.
- · Paper is not loaded in the manual feed tray properly.

What to Do

Take the corresponding actions below.

- · Load one sheet of paper in the manual feed tray.
 - ▶ Loading Paper in the Manual Feed Tray

Note

- The loadable paper differs depending on the paper source. For details on the paper that can be loaded in the manual feed tray, refer to <u>Paper Sources to Load Paper</u>.
- Align the paper guides of the manual feed tray with the edges of the paper.

After carrying out the above measures, press the printer's **OK** button.

>>>> Note

- To cancel printing, press the printer's **Stop** button.
- To continue printing from the manual feed tray, wait until printing is completed, and then load the next sheet.

Cause

Multi-purpose tray compatible media is not set on multi-purpose tray, or the media position is misaligned.

What to Do


Remove the multi-purpose tray, place the multi-purpose tray compatible media properly, and then attach the multi-purpose tray to the printer.

➡ Placing Multi-purpose Tray

Then press the printer's **OK** button to cancel the error.

>>> Important

• When you print on multi-purpose tray compatible media, use the supplied multi-purpose tray (the one with the "A" mark).

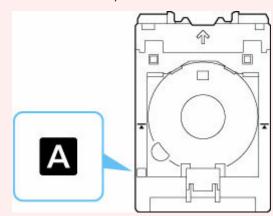

>>> Note

Cause

Paper size setting does not match size of loaded paper.

What to Do

Press the printer's **Stop** button to cancel the error and take the corresponding actions below.

When printing from Windows using a printer driver:

Load paper of the size specified in **Paper Size** on the **Page Setup** sheet of the printer driver, and retry printing.

If this error occurs even you load paper of the size specified in the printer driver, set the printer not to detect the paper width.

To set the printer not to detect the width of the paper, open **Custom Settings** on the **Maintenance** sheet of the printer driver, and set **Disables paper width detection when printing from computer** to **ON**.

Changing the Printer Operation Mode

Note

 Set Disables paper width detection when printing from computer to OFF once printing is complete.

When printing from macOS using a printer driver:

Load paper of the size specified in Paper Size on the Page Setup dialog, and retry printing.

If this error occurs even you load paper of the size specified in the Page Setup dialog, set the printer not to detect the paper width.

To set the printer not to detect the width of the paper, open Canon IJ Printer Utility2, select **Custom Settings** in the pop-up menu, select the **Disable paper width detection when printing from computer** check box.

Opening the Canon IJ Printer Utility2

Note

 Clear the Disable paper width detection when printing from computer check box again once printing is complete.

When printing by other methods:

Register the paper size and paper type of the paper loaded in the printer correctly in the printer, and retry printing.

→ Register Paper Information

If this error occurs even after registering the paper information correctly, set the printer not to detect the paper width.

To set the printer not to detect the width of the paper, select **Various settings** on the printer's HOME screen, select **Printer settings**, **Paper-related settings**, **Advanced paper settings** in this order, select the paper type, and then set **Detect paper width** to **OFF**.

>>> Note

• If you change the setting so that the paper width is not detected, return the setting after printing.

Cause

Top cover is open.

What to Do

Close the top cover and wait for a while.

Do not forget to close it, such as after replacing ink tanks.

Cause

Paper output tray is closed.

What to Do

Open the paper output tray.

Cause

Manual feed tray is in the paper jam clearing position.

What to Do

Return the manual feed tray to the paper feed position and press the printer's **OK** button to cancel the error.

Cause

Paper jammed inside the printer while printing.

What to Do

Follow these steps below to remove jammed paper.

- 1. Remove the jammed paper depending on the paper source.
 - ➡ What to Do When Paper Is Jammed
- 2. Reload paper and press printer's **OK** button.

The printer resumes printing. Reprint the page you were printing if it was not printed properly due to the paper jam.

If you turned off the printer in step 1, all jobs in the print queue are canceled. Redo the printing.

If the error appears again, the printer may be damaged. Contact a Canon customer service center.

Cause

Paper is loaded in the manual feed tray when you start printing on a multi-purpose tray compatible media.

What to Do

Remove the paper from the manual feed tray, then press the printer's **OK** button to cancel the error.

Cause

Top cover is open.

What to Do

When replacing the ink tank, follow the instructions on the printer's LCD.

→ Replacing Ink Tanks

When not replacing the ink tank, close the top cover.

>>> Important

- Prepare a new ink tank before you start replacing one.
- Replace the ink tank quickly so as not to leave the printer without an ink tank.

The printer may be damaged if it is left without an ink tank, causing a problem such as clogging due to dried ink.

Cause

Print head may not be installed properly or may be damaged.

What to Do

Take the corresponding actions below.

· Install the print head.

If the print head is already installed, remove and reinstall it. Then close the top cover.

Turn off the printer and turn it back on.

• Turn off the printer and turn it back on.

Cause

Print head may be damaged.

What to Do

Turn off the printer and turn it back on.

Cause

Print head may be damaged.

What to Do

Turn off the printer and turn it back on.

Cause

Print head may be damaged.

What to Do

Remove the print head and reinstall it.

Cause

Print head may be damaged.

What to Do

Remove the print head and reinstall it.

140A

Cause

There is a problem with the print head.

What to Do

Open the top cover and reinstall the print head.

140C

Cause

There is a problem with the print head.

What to Do

Turn off the power, wait a moment, and then turn it back on.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

If this does not solve the problem, replace the ink tank.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

If this does not solve the problem, replace the ink tank.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

If this does not solve the problem, replace the ink tank.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

Ink tank may not be installed properly.

What to Do

Remove the ink tank whose color is shown on the printer's LCD and reinstall it.

Press the ink tank until it clicks into place.

Cause

The ink is running low.

What to Do

Prepare a new ink tank.

The resulting print quality may not be satisfactory, if printing is continued under this condition.

Cause

A genuine Canon ink tank with a history of past use has been detected.

What to Do

To dismiss the message, press the printer's $\mbox{\bf OK}$ button.

Cause

A genuine Canon ink tank has been inserted.

What to Do

To dismiss the message, press the printer's \mathbf{OK} button.

Cause

The ink in the ink tank has run out.

What to Do

Replace the ink tank.

→ Replacing Ink Tanks

>>> Important

- Prepare a new ink tank before you start replacing one.
- Replace the ink tank quickly so as not to leave the printer without an ink tank.

The printer may be damaged if it is left without an ink tank, causing a problem such as clogging due to dried ink.

15A1

Cause

Printer setup is not completed.

What to Do

Proceed with printer setup according to the message displayed on the printer's LCD.

If this error occurs while operating the printer from a smartphone / tablet, complete the printer setup and then operate again.

15A2

Cause

Ink tank not inserted.

What to Do

Insert the ink tank correctly, and proceed with printer setup.


Cause

Protective material or tape may still be attached to print head holder.

What to Do

Open the top cover and make sure the protective material and tape have been removed from the print head holder.

If the protective material or tape is still there, remove it and close the top cover.

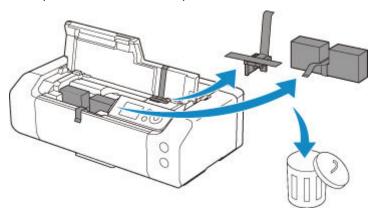

In the case of the first printer setup, select your printer name on the below page, and follow the instructions.

→ Set Up

Cause

Ink may have run out

What to Do

If printing is in progress, you are recommended to stop printing, replace the ink tank, and then print again.

If printing is in progress and you want to continue printing, press the printer's **OK** button with the ink tank installed. Then printing can continue under the ink out condition. Replace the empty ink tank immediately after the printing. The printer may be damaged if printing is continued under the ink out condition.

Cause

The ink tank cannot be recognized.

What to Do

Printing cannot be performed because the ink tank is not installed or is not compatible with this printer.

Check the ink tank.

If you want to cancel printing, press the printer's **Stop** button.

Cause

The ink tank cannot be recognized.

What to Do

Printing cannot be executed because the ink tank may not be installed properly or may not be compatible with this printer.

Install the appropriate ink tank.

If you want to cancel printing, press the printer's **Stop** button.

168C

Cause

Ink tank is not installed in proper position.

What to Do

Check the ink tank displayed on the printer's LCD and install the ink tank in proper position.

Cause

Printer detected ink out condition.

What to Do

If printing is in progress, stop printing, replace the ink tank, and then print again.

To avoid printing troubles such as the mixing of inks, this printer is designed to stop printing when the remaining ink level in an ink tank goes under the amount of ink required to maintain both printer and print quality.

Cause

Printer detected ink out condition.

What to Do

Stop printing, replace the ink tank, and then print again. Be sure to replace the empty ink tank before resuming printing.

An ink tank that was once empty is installed.

Printing under the ink out condition may cause the printing trouble such as the mixing of inks, or a printer malfunction.

If you want to continue printing, you need to disable the function for detecting the remaining ink level. To disable this function, press and hold the printer's **Stop** button for at least 5 seconds, and then release it.

With this operation, disabling the function for detecting the remaining ink level is memorized. Please be advised that Canon shall not be liable for any malfunction or trouble which may be caused by continuation of printing or refilling of ink.

Cause

Ink absorber is almost full.

What to Do

Press the printer's **OK** button to continue printing. Contact your nearest Canon service center to request a repair.

>>>> Note

• In the case of warnings or errors caused by remaining ink levels, the printer cannot print.

Cause

Ink absorber is almost full.

What to Do

Press the printer's **OK** button to continue printing. Contact your nearest Canon service center to request a repair.

>>>> Note

• In the case of warnings or errors caused by remaining ink levels, the printer cannot print.

Cause

Ink absorber is almost full.

What to Do

Press the printer's **OK** button to continue printing. Contact your nearest Canon service center to request a repair.

>>>> Note

• In the case of warnings or errors caused by remaining ink levels, the printer cannot print.

Cause

The ink tank may be an ink tank that ran out of genuine Canon ink or a counterfeit Canon ink tank.

What to Do

To print, you must replace the ink tank or disable the function for detecting the remaining ink level.

Replacing Ink Tanks

To disable the function for detecting the remaining ink level, press and hold the printer's **Stop** button for at least 5 seconds, and then release it.

By this operation, the fact that you have disabled the function for detecting the remaining ink level will be memorized. Please be advised that Canon shall not be liable for any malfunction or trouble caused by using a non-genuine Canon ink tank or by using non-genuine Canon ink.

>>> Note

• If the function for detecting the remaining ink level is disabled, the ink tank is displayed in white on the Estimated ink levels screen on the LCD.

To report the counterfeit ink tank, access Canon website from the following link.

→ Report Counterfeit

Cause

The ink tank cannot be recognized.

What to Do

The ink tank cannot be recognized.

Printing cannot be performed because the ink tank is not compatible with this printer.

Check the ink tank.

If you want to cancel printing, press the printer's **Stop** button.

Cause

A certain period of time has elapsed while multi-purpose tray compatible media printing is in progress.

What to Do

If a certain period of time has elapsed while multi-purpose tray compatible media printing is in progress, the printer stops initializing.

To resume initializing, press the printer's **OK** button.

Try the operation again following the instructions on the printer's LCD.

>>>> Note

Cause

Multi-purpose tray guide is closed.

What to Do

Open the multi-purpose tray guide and set the multi-purpose tray in proper position.

➡ Placing Multi-purpose Tray

Then press the printer's **OK** button to cancel the error.


>>> Note

Cause

Multi-purpose tray guide is open.

What to Do

Close the multi-purpose tray guide except when printing on multi-purpose tray compatible media.

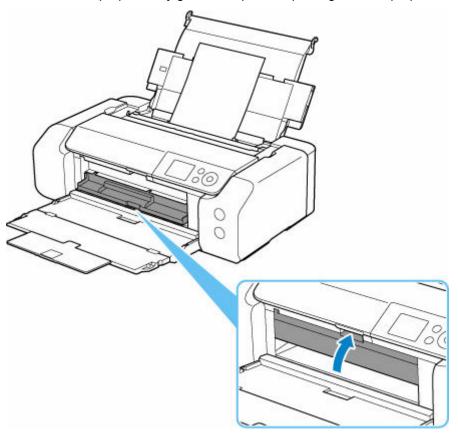

Then press the printer's $\mbox{\bf OK}$ button to cancel the error.

>>>> Note

Cause

Multi-purpose tray guide has been closed.

What to Do

Open the multi-purpose tray guide and set the multi-purpose tray in proper position.

Then press the printer's \mathbf{OK} button to cancel the error.

>>> Important

• Do not open or close the multi-purpose tray guide while printing is in progress. Doing so may damage the printer.

>>> Note

Cause

Multi-purpose tray guide has been opened.

What to Do

Close the multi-purpose tray guide and press the printer's **OK** button to cancel the error.

>>> Important

• Do not open or close the multi-purpose tray guide while printing is in progress. Doing so may damage the printer.

>>> Note

Cause

Multi-purpose tray guide is open, so the printer is not ready to print on multi-purpose tray compatible media.

What to Do

Close the multi-purpose tray guide and press the printer's **OK** button to cancel the error.

>>>> Note

- Close the multi-purpose tray guide once before starting to print on multi-purpose tray compatible media.
- To cancel printing, press the printer's **Stop** button.

Cause

Printer cannot detect paper size.

What to Do

Press the printer's **Stop** button and retry printing.

If this error still occurs even after printing again, set the printer not to detect the paper width using the operation panel, the printer driver, or Remote UI.

>>>> Note

- For more on setting printer not to detect the paper width using the operation panel, see below.
 - → Paper-related settings
- Depending on the type of paper, the printer may not detect the paper width.

If the top cover is opened while printing is in progress, the printer may not detect the paper width.

Cause

Paper settings specified when printing do not match the paper information for the top feed registered on the printer.

Note

- For the appropriate combination of the paper settings specified on the printer driver and the paper information registered on the printer, refer to the following.
 - → Paper Settings on the Printer Driver and the Printer (Media Type) (Windows)
 - → Paper Settings on the Printer Driver and the Printer (Media Type) (macOS)
 - → Paper Settings on the Printer Driver and the Printer (Paper Size) (Windows)
 - → Paper Settings on the Printer Driver and the Printer (Paper Size) (macOS)
- For how to register paper information on the printer, refer to the following.
 - Register Paper Information

If the paper settings specified when printing differ from the paper information for the top feed registered on the printer, the following message appears on the printer's LCD.

• Paper settings specified on the printer driver when printing:


Paper size: A4

Media type: Plain paper

• Paper information for the top feed registered on the printer:


Paper size: A3

Media type: Plain paper

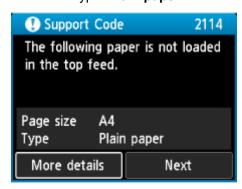

What to Do

Select Next on the printer's LCD to display the screen below.

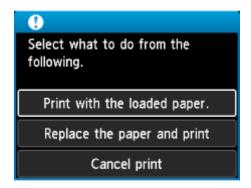

Select the appropriate action.

>>> Note

• Depending on the settings, some of the options below may not be displayed.

Print with the loaded paper.

Select this option to print on the loaded paper with the paper settings specified when printing.

For example, when the paper size specified when printing is A4 and the paper information for the top feed is registered as A3, select this option to print on an A3 paper loaded in the top feed with the A4 setting.

Replace the paper and print

Select this option to print after changing the paper in the top feed.

For example, when the paper size specified when printing is A4 and the paper information for the top feed is registered as A3, select this option to print after changing the paper in the top feed with an A4 paper.

After changing the paper, the paper information registration screen for the top feed appears. Register the paper information on the printer according to the loaded paper.

>>> Note

- If you do not know the paper size and media type to be loaded in the top feed, press the printer's **Back** button. The paper size and media type are displayed.
- For the appropriate combination of the paper settings specified on the printer driver and the paper information registered on the printer, refer to the following.
 - ▶ Paper Settings on the Printer Driver and the Printer (Media Type) (Windows)
 - Paper Settings on the Printer Driver and the Printer (Media Type) (macOS)
 - ▶ Paper Settings on the Printer Driver and the Printer (Paper Size) (Windows)
 - ▶ Paper Settings on the Printer Driver and the Printer (Paper Size) (macOS)

Cancel print

Cancels printing.

Select this option when you want to change the paper settings specified when printing. Change the paper settings and try printing again.

Cause

Paper settings specified when printing do not match the paper information for the manual feed tray registered on the printer.

Note

- For the appropriate combination of the paper settings specified on the printer driver and the paper information registered on the printer, refer to the following.
 - → Paper Settings on the Printer Driver and the Printer (Media Type) (Windows)
 - → Paper Settings on the Printer Driver and the Printer (Media Type) (macOS)
 - → Paper Settings on the Printer Driver and the Printer (Paper Size) (Windows)
 - → Paper Settings on the Printer Driver and the Printer (Paper Size) (macOS)
- For how to register paper information on the printer, refer to the following.
 - Register Paper Information

If the paper settings specified when printing differ from the paper information for the manual feed tray registered on the printer, the following message appears on the printer's LCD.

• Paper settings specified on the printer driver when printing:


Paper size: A4

Media type: Plain paper

• Paper information for the manual feed tray registered on the printer:


Paper size: A3

Media type: Plain paper

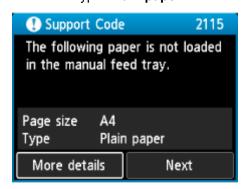

What to Do

Select Next on the printer's LCD to display the screen below.

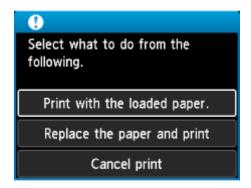

Select the appropriate action.

>>> Note

• Depending on the settings, some of the options below may not be displayed.

Print with the loaded paper.

Select this option to print on the loaded paper with the paper settings specified when printing.

For example, when the paper size specified when printing is A4 and the paper information for the manual feed tray is registered as A3, select this option to print on an A3 paper loaded in the manual feed tray with the A4 setting.

Replace the paper and print

Select this option to print after changing the paper in the manual feed tray.

For example, when the paper size specified when printing is A4 and the paper information for the manual feed tray is registered as A3, select this option to print after changing the paper in the manual feed tray with an A4 paper.

After changing the paper, the paper information registration screen for the manual feed tray appears. Register the paper information on the printer according to the loaded paper.

>>> Note

- If you do not know the paper size and media type to be loaded in the manual feed tray, press the printer's **Back** button. The paper size and media type are displayed.
- For the appropriate combination of the paper settings specified on the printer driver and the paper information registered on the printer, refer to the following.
 - ▶ Paper Settings on the Printer Driver and the Printer (Media Type) (Windows)
 - Paper Settings on the Printer Driver and the Printer (Media Type) (macOS)
 - ▶ Paper Settings on the Printer Driver and the Printer (Paper Size) (Windows)
 - ▶ Paper Settings on the Printer Driver and the Printer (Paper Size) (macOS)

Cancel print

Cancels printing.

Select this option when you want to change the paper settings specified when printing. Change the paper settings and try printing again.

Cause

Cause of following may have occurred failure of automatic adjustment to straighten lines and colors.

- · Print head nozzles are clogged.
- · Size of paper loaded is incorrect.
- · Paper output slot is exposed to strong light.

What to Do

Press the printer's **OK** button to cancel the error and take the corresponding actions below.

- Check the print head condition by printing the nozzle check pattern.
- Load the correct size paper and perform automatic print head alignment again.
- Adjust your operating environment and/or the position of the printer so that the paper output slot is not
 exposed directly to strong light.

After carrying out the above actions, perform automatic adjustment to straighten lines and colors again.

If the error is still not resolved, press the printer's **OK** button to cancel the error and perform manual adjustment to straighten lines and colors.

→ Manual Adjustment to Straighten Lines and Align Colors

Cause

Printing does not start correctly.

What to Do

Press the printer's \mathbf{OK} button, and then restart printing.

Cause

The print head has not been calibrated.

What to Do

Print Head Alignment - Auto is recommended.

➡ Automatic Adjustment to Straighten Lines and Align Colors

>>> Note

• This message will appear until Print Head Alignment - Auto is carried out.

Cause

Media information cannot be recognized because the printer media information is corrupt.

What to Do

Start the Media Configuration Tool, and then recover the media information.

Media Configuration Tool Guide

To set the Media Configuration Tool to recovery mode, open the Media Configuration Tool, select this device and then click **OK**.

Select and load the media information backup file.

If you do not have a media information backup file, contact your nearest Canon service center to request a repair.

Cause

Incorrect print data.

Illegal number of parameters.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Illegal number of parameters.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Required items have been omitted.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Data out of range.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Resolution value out of range.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Compression method value out of range.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Incorrect data formatting (color sequence, bit count).

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Illegal combination of resolution and image data format.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Illegal number of parameters.

What to Do

Defective print data, please check the print results.

Cause

Incorrect print data.

Illegal number of parameters.

What to Do

Defective print data, please check the print results.

Cause

Prevent paper abrasion has been set.

What to Do

Prevent paper abrasion may reduce print speed.

If you continue printing in the current setting, select **Yes** using the **\rightarrow** buttons and press the printer's **OK** button.

If you disable this setting, select **No** and press the printer's **OK** button. Select **Various settings** on the HOME screen, select **Printer settings**, **Print settings**, and then set **Prevent paper abrasion** to **OFF**.

Cause

Easy wireless connect has failed.

What to Do

Press the printer's \mathbf{OK} button to cancel the error and retry Easy wireless connect.

If the error is not resolved, use another method to set up Wi-Fi.

Cause

Easy wireless connect has failed.

What to Do

Press the printer's \mathbf{OK} button to cancel the error and retry Easy wireless connect.

If the error is not resolved, use another method to set up Wi-Fi.

Cause

Printing of the first side is complete when doing manual duplex printing.

What to Do

Prepare to print the other side.

Load the paper with the printed side facing down in the top feed without changing its orientation.

To check how to load paper on the printer's LCD, select **How to set** using the **\rightarrow** buttons and press the printer's **OK** button.

When you are ready to print the other side, select **Start print** and press the printer's **OK** button.

>>> Note

Cause

Printing of the first side is complete when doing manual duplex printing.

What to Do

Prepare to print the other side.

Rotate the printed paper 180 degrees and load it with the printed side facing down in the top feed.

To check how to load paper on the printer's LCD, select **How to set** using the **\rightarrow** buttons and press the printer's **OK** button.

When you are ready to print the other side, select **Start print** and press the printer's **OK** button.

>>> Note

Cause

Printing of the first side is complete when doing manual duplex printing.

What to Do

Prepare to print the other side.

Rotate the printed paper 180 degrees and load it with the printed side facing down in the top feed.

To check how to load paper on the printer's LCD, select **How to set** using the **\rightarrow** buttons and press the printer's **OK** button.

When you are ready to print the other side, select **Start print** and press the printer's **OK** button.

>>> Note

Cause

Printing of the first side is complete when doing manual duplex printing.

What to Do

Prepare to print the other side.

Load the paper with the printed side facing down in the top feed without changing its orientation.

To check how to load paper on the printer's LCD, select **How to set** using the **\rightarrow** buttons and press the printer's **OK** button.

When you are ready to print the other side, select **Start print** and press the printer's **OK** button.

>>> Note

Cause

IP address and subnet mask are conflicting.

What to Do

Press the printer's **OK** button to cancel the error.

Disable the wireless direct or change the Wi-Fi network configuration. When changing the network configuration, specify a unique subnet range for each of the wireless direct and the Wi-Fi to prevent a conflict.

For details on changing the network configuration, refer to the documentation for your wireless router.

Cause

An error occurred while communicating via wireless direct or while in standby.

What to Do

Press the printer's \mathbf{OK} button to cancel the error.

Turn off the printer and turn it back on.

Cause

Printer error has occurred.

What to Do

Printer needs repair. Please contact customer support.

Cause

Printer error has occurred.

What to Do

A matter has been identified that requires immediate attention. Please contact customer support.

Cause

Cannot perform printing with current print settings.

What to Do

Press the printer's **Stop** button to cancel printing.

Change the print settings specified when printing and retry printing.

Cause

The paper settings (paper size / paper type) specified when printing are incorrect, or paper source specified when printing is incorrect.

What to Do

Press the printer's **Stop** button to cancel printing. Check the paper that can be loaded in the top feed / manual feed tray.

- ▶ Loading Paper in the Top Feed
- ▶ Loading Paper in the Manual Feed Tray

Take one of the actions below and retry printing.

- Change the paper settings (paper size / paper type) specified when printing.
- · Change the paper source setting.

Cause

Paper size that cannot be printed from the manual feed tray is specified.

What to Do

Press the printer's **Stop** button to cancel printing. Check the paper that can be loaded in the manual feed tray.

▶ Loading Paper in the Manual Feed Tray

Change the paper size specified when printing and retry printing.

>>>> Note

• To print on paper that can be printed only from the top feed, reload the paper in the top feed, and then <u>register the paper information</u> in the printer.

410E

Cause

Printing cannot be performed with the current combination of paper size and paper type.

What to Do

Press the printer's **Stop** button to stop printing.

Change to the paper type for long-format, and perform printing again.

- → Perform Long-form Printing (Windows)
- → Perform Long-form Printing (macOS)

Cause

The media type specified is incompatible with this device.

What to Do

Press the printer's **Stop** button to stop printing.

Check the media type settings, and then try again.

495A

Cause

An error occurred while communicating via Wi-Fi or while in standby.

What to Do

Turn off the printer and turn it back on.

Cause

Printer error has occurred.

What to Do

If you are printing, press the printer's **Stop** button to cancel printing, then turn off the printer.


Check the following:

• Make sure print head holder motion is not impeded by protective materials for securing the print head holder, jammed paper, etc.

Remove any impediment.

>>>> Important

• When clearing an impediment to print head holder motion, be careful not to touch clear film (A) or white belt (B).

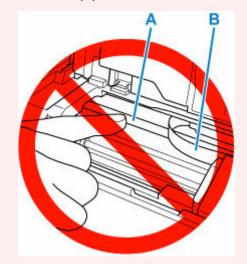

If you soil or scratch this part by touching it with paper or your hand, it could damage the printer.

• Make sure the ink tanks are properly installed.

Press ink tanks until they click into place.

Turn the printer back on.

If the error appears again, the printer may be damaged. Contact a Canon customer service center.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

520C

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

520E

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Contact your nearest Canon service center to request a repair.

>>> Note

• In the case of warnings or errors caused by remaining ink levels, the printer cannot print.

Cause

Printer error has occurred.

What to Do

Contact your nearest Canon service center to request a repair.

>>> Note

• In the case of warnings or errors caused by remaining ink levels, the printer cannot print.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

5C02

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

5C13

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

5C14

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

6A80

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

6A81

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

6D01

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

An error requiring a repair has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

An error requiring a repair has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

An error requiring a repair has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

B400

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

C000

Cause

Printer error has occurred.

What to Do

Turn off the printer and unplug it.

Plug in the printer again and turn it back on.

C100

Cause

Printer error has occurred.

What to Do

Please stop using this printer immediately, then contact customer support.

C101

Cause

Printer error has occurred.

What to Do

Please stop using this printer and unplug power cord immediately, then contact customer support.

Printer Information

- Safety
- ➤ Handling Precautions
- Specifications

Safety

- ➤ Safety Precautions
- ➤ Regulatory Information
- **▶ WEEE**

Safety Precautions

Follow the items below to use the printer safely. Furthermore, do not perform any actions that are not described in the instruction manual of the product. This may cause unexpected accidents such as fire or electrical shock. Safety standard marks and declarations are only valid for the supported voltages and frequencies in the applicable countries or regions.

1 Warning

· For people who are using a cardiac pacemaker

This product generates a low-level magnetic field. If you experience discomfort while working around this product, leave the area and consult a doctor.

• Turn off the power immediately in the following circumstances.

If you continue to use the printer in the following cases, it may cause fires or electrical shock. Immediately press the power button to turn off the printer, disconnect the power plug from the outlet, and make a request for repairs.

- If any foreign matter (metal fragments, liquids, etc.) gets inside the printer
- If the printer emits smoke, abnormal odors, or abnormal noises
- If the power plug or power cord becomes hot, corroded, bent, frayed, or damaged

• Follow the items below (risk of fire, electrical shock, or injury).

- Do not set up the product in any location exposed to alcohol, thinner, or other flammable liquids.
- Do not disassemble or modify the product.
- Use the cables that are included with the printer. Do not use the cables included with the printer with other devices.
- Do not use outside of the designated power supply voltage and frequency.
- Insert the power plug securely and completely into the power outlet.
- Never handle the power plug with wet hands.
- Do not damage the power cord or other cables by twisting, bundling, tying, pulling or excessively bending them.
- Never place a heavy object on the power cord.
- Do not insert multiple power plugs into the same outlet. Do not connect multiple extension cords.
- If there is lightning nearby, disconnect the power plug from the outlet and do not use the product.
- When cleaning, always disconnect the cables and power plug, and do not use highly flammable sprays or liquids such as alcohol or thinner.
- Once per month, disconnect the power plug and power cord from the outlet, and check that dust
 has not accumulated, and that there are no abnormalities such as heat generation, rust, bending,
 chafing, or cracking.

⚠ Caution

- Be careful not to let anything get inside the printer. This would cause malfunction.
- · Do not put your hands inside the printer while printing.
- · Do not touch the print head or other metal parts immediately after printing.

· About the ink

- Always store ink tanks out of the reach of infants and toddlers.
- In case ink is accidentally licked or swallowed, rinse out mouth or give one or two glasses of water to drink. If irritation or discomfort occurs, obtain medical advice immediately.
- In case ink gets in contact with eyes, rinse with water immediately. In case ink gets in contact
 with skin, wash with soap and water immediately. If irritation to eyes or skin persists, obtain
 medical advice immediately.

Choosing a location

- Never install the printer on an unstable or vibrating surface.
- Do not install the printer in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source.

To avoid the risk of fire or electric shocks, use the printer under the operating environment specified in the Specifications.

- Do not place the printer on a thick rug or carpet.
 Foreign objects such as hair and dust may get inside the product.
- Do not place the printer with its back attached to the wall.

Power Supply

- Ensure that the area around the power outlet is kept clear at all times so you can easily unplug the power cord if necessary.
- Never remove the plug by pulling on the cord.
 Pulling the cord may damage the power cord, leading to possible fire or electrical shock.

Working Around the Printer

- · Never put your hands or fingers in the printer while it is printing.
- When using and transferring the printer, do not tilt it, stand it on its side, or turn it upside down. There is a risk of the ink spilling.
- Do not place anything on top of the printer. Be especially careful to avoid metal objects such as paper clips and staples, and containers holding flammable liquids such as alcohol or thinner.
- · Do not attempt to open, disassemble or modify the ink tanks. Ink may leak and damage your printer.
- Do not throw print heads or ink tanks in the fire.

Regulatory Information

Users in the U.S.A.

FCC Notice (U.S.A. Only) For 120V, 60Hz model

Model Number: K10624 (Contains FCC Approved WLAN Module K30387)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of a shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines as this equipment has very low levels of RF energy.

But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Canon U.S.A., Inc.
One Canon Park
Melville, New York 11747
1-800-652-2666

Interference

Do not use the printer around medical equipment or other electronic devices. Signals from the printer may interfere with the correct operation of these devices.

WEEE

Only for the United Kingdom



These symbols indicate that this product is not to be disposed of with your household waste, according to the UK Waste Electrical and Electronic Equipment Regulations and the UK Batteries and Accumulators Regulations. If a chemical symbol is printed beneath the symbol shown above, in accordance with the UK Batteries and Accumulators Regulations, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the UK Batteries and Accumulators Regulations. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canoneurope.com/sustainability/approach/.

Only for European Union and EEA (Norway, Iceland and Liechtenstein)



These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives. If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canoneurope.com/weee, or www.canoneurope.com/battery.

Nur für Europäische Union und EWR (Norwegen, Island und Liechtenstein)



Diese Symbole weisen darauf hin, dass dieses Produkt gemäß WEEE-Richtlinie (2012/19/EU; Richtlinie über Elektro- und Elektronik-Altgeräte), Batterien-Richtlinie (2006/66/EG) und nationalen Gesetzen zur Umsetzung dieser Richtlinien nicht über den Hausmüll entsorgt werden darf. Falls sich unter dem oben abgebildeten Symbol ein chemisches Symbol befindet, bedeutet dies gemäß der Batterien-Richtlinie, dass in dieser Batterie oder diesem Akkumulator ein Schwermetall (Hg = Quecksilber, Cd = Cadmium, Pb = Blei) in einer Konzentration vorhanden ist, die über einem in der Batterien-Richtlinie angegebenen Grenzwert liegt. Dieses Produkt muss bei einer dafür vorgesehenen Sammelstelle abgegeben werden. Dies kann z. B. durch Rückgabe beim Kauf eines neuen ähnlichen Produkts oder durch Abgabe bei einer autorisierten Sammelstelle für die Wiederaufbereitung von Elektro- und Elektronik-Altgeräten sowie Batterien und Akkumulatoren geschehen. Der unsachgemäße Umgang mit Altgeräten kann aufgrund potenziell gefährlicher Stoffe, die generell mit Elektro- und Elektronik-Altgeräten in Verbindung stehen, negative Auswirkungen auf die Umwelt und die menschliche Gesundheit haben. Durch Ihre Mitarbeit bei der umweltgerechten Entsorgung dieses Produkts tragen Sie zu einer effektiven Nutzung natürlicher Ressourcen bei. Um weitere Informationen über die Wiederverwertung dieses Produkts zu erhalten, wenden Sie sich an Ihre Stadtverwaltung, den öffentlich-rechtlichen Entsorgungsträger, eine autorisierte Stelle für die Entsorgung von Elektro- und Elektronik-Altgeräten oder Ihr örtliches Entsorgungsunternehmen oder besuchen Sie www.canon-europe.com/weee, oder www.canon-europe.com/battery.

Zusatzinformationen für Deutschland:

Dieses Produkt kann durch Rückgabe an den Händler unter den in der Verordnung des Elektro- und Elektronikgerätegesetzes beschriebenen Bedingungen abgegeben werden.

Als Endbenutzer und Besitzer von Elektro- oder Elektronikgeräten sind Sie verpflichtet:

- diese einer vom unsortierten Siedlungsabfall getrennten Erfassung zuzuführen,
- Altbatterien und Altakkumulatoren, die nicht von Altgerät umschlossen sind, sowie Lampen, die zerstörungsfrei aus dem Altgerät entnommen werden können, vor der Abgabe an einer Erfassungsstelle vom Altgerät zerstörungsfrei zu trennen,
- personenbezogener Daten auf den Altgeräten vor der Entsorgung zu löschen. Die Bedeutung von dem Symbol der durchgestrichenen Abfalltonne auf Rädern finden Sie oben in dieser Beschreibung. Die Vertreiber von Elektro- oder Elektronikgeräten haben die Pflicht zur unentgeltlichen Rücknahme von Altgeräten. Die Vertreiber haben die Endnutzer über die von ihnen geschaffenen Möglichkeiten der Rückgabe von Altgeräten zu informieren.

Union Européenne, Norvège, Islande et Liechtenstein uniquement.



Ces symboles indiquent que ce produit ne doit pas être mis au rebut avec les ordures ménagères, comme le spécifient la Directive européenne DEEE (2012/19/UE), la Directive européenne relative à l'élimination

des piles et des accumulateurs usagés (2006/66/CE) et les lois en vigueur dans votre pays appliquant ces directives. Si un symbole de toxicité chimique est imprimé sous le symbole illustré ci-dessus conformément à la Directive relative aux piles et aux accumulateurs, il indique la présence d'un métal lourd (Hg = mercure, Cd = cadmium, Pb = plomb) dans la pile ou l'accumulateur à une concentration supérieure au seuil applicable spécifié par la Directive. Ce produit doit être confié au distributeur à chaque fois que vous achetez un produit neuf similaire, ou à un point de collecte mis en place par les collectivités locales pour le recyclage des Déchets des Équipements Électriques et Électroniques (DEEE). Le traitement inapproprié de ce type de déchet risque d'avoir des répercussions sur l'environnement et la santé humaine, du fait de la présence de substances potentiellement dangereuses généralement associées aux équipements électriques et électroniques. Votre entière coopération dans le cadre de la mise au rebut correcte de ce produit favorisera une meilleure utilisation des ressources naturelles. Pour plus d'informations sur le recyclage de ce produit, contactez vos services municipaux, votre écoorganisme ou les autorités locales compétentes, ou consultez le site www.canon-europe.com/weee, ou www.canon-europe.com/battery.

Uitsluitend bestemd voor de Europese Unie en EER (Noorwegen, IJsland en Liechtenstein)



Met deze symbolen wordt aangegeven dat dit product in overeenstemming met de AEEA-richtlijn (2012/19/EU), de richtlijn 2006/66/EG betreffende batterijen en accu's en/of de plaatselijk geldende wetgeving waarin deze richtlijnen zijn geïmplementeerd, niet bij het normale huisvuil mag worden weggegooid. Indien onder het hierboven getoonde symbool een chemisch symbool gedrukt staat, geeft dit in overeenstemming met de richtlijn betreffende batterijen en accu's aan dat deze batterij of accu een zwaar metaal bevat (Hg = kwik, Cd = cadmium, Pb = lood) waarvan de concentratie de toepasselijke drempelwaarde in overeenstemming met de genoemde richtlijn overschrijdt. Dit product dient te worden ingeleverd bij een hiervoor aangewezen inzamelpunt, bijv, door dit in te leveren bij een hiertoe erkend verkooppunt bij aankoop van een gelijksoortig product, of bij een officiële inzameldienst voor de recycling van elektrische en elektronische apparatuur (EEA) en batterijen en accu's. Door de potentieel gevaarlijke stoffen die gewoonlijk gepaard gaan met EEA, kan onjuiste verwerking van dit type afval mogelijk nadelige gevolgen hebben voor het milieu en de menselijke gezondheid. Uw medewerking bij het op juiste wijze weggooien van dit product draagt bij tot effectief gebruik van natuurlijke hulpbronnen. Voor verdere informatie over recycling van dit product kunt u contact opnemen met uw plaatselijke gemeente, afvaldienst, officiële dienst voor klein chemisch afval of afvalstortplaats, of kunt u terecht op www.canoneurope.com/weee, of www.canon-europe.com/battery.

Sólo para la Unión Europea y el Área Económica Europea (Noruega, Islandia y Liechtenstein)



Estos iconos indican que este producto no debe desecharse con los residuos domésticos de acuerdo con la Directiva sobre RAEE (2012/19/UE) y la Directiva sobre Pilas y Acumuladores (2006/66/CE) y/o la legislación nacional. Si aparece un símbolo químico bajo este icono, de acuerdo con la Directiva sobre Pilas y Acumuladores, significa que la pila o el acumulador contiene metales pesados (Hg = Mercurio, Cd = Cadmio, Pb = Plomo) en una concentración superior al límite especificado en dicha directiva. Este producto deberá entregarse en un punto de recogida designado, por ejemplo, entregándolo en el lugar de venta al adquirir un producto nuevo similar o en un centro autorizado para la recogida de residuos de aparatos eléctricos y electrónicos (RAEE), baterías y acumuladores. La gestión incorrecta de este tipo de residuos puede afectar al medio ambiente y a la salud humana debido a las sustancias potencialmente nocivas que suelen contener estos aparatos. Su cooperación en la correcta eliminación de este producto contribuirá al correcto aprovechamiento de los recursos naturales. Los usuarios tienen derecho a devolver pilas, acumuladores o baterías usados sin coste alguno. El precio de venta de pilas, acumuladores y baterías incluye el coste de la gestión medioambiental de su desecho, y no es necesario mostrar la cuantía de dicho coste en la información y la factura suministradas a los usuarios finales. Si desea más información sobre el reciclado de este producto, póngase en contacto con su municipio, el servicio o el organismo encargado de la gestión de residuos domésticos o visite www.canon-europe.com/ weee, o www.canon-europe.com/battery.

Només per a la Unió Europea i a l'Espai Econòmic Europeu (Noruega, Islàndia i Liechtenstein)



Aquests símbols indican que aquest producte no s'ha de llençar amb les escombraries de la llar, d'acord amb la RAEE (2012/19/UE), la Directiva relativa a piles i acumuladors (2006/66/CE) i la legislació nacional que implementi aquestes directives. Si al costat d'aquest símbol hi apareix imprès un símbol químic, segons especifica la Directiva relativa a piles i acumuladors, significa que la bateria o l'acumulador conté un metall pesant (Hg = mercuri, Cd = cadmi, Pb = plom) en una concentració superior al límit aplicable especificat en la Directiva. Aquest producte s'hauria de lliurar en un dels punts de recollida designats, com per exemple, intercanviant un per un en comprar un producte similar o lliurant-lo en un lloc de recollida autoritzat per al reciclatge de residus d'aparells elèctrics i electrònics (RAEE) i piles i acumuladors. La manipulació inadequada d'aquest tipus de residus podria tenir un impacte negatiu en l'entorn i en la salut humana, a causa de les substàncies potencialment perilloses que normalment estan associades a l'RAEE. La vostra cooperació a l'hora de rebutjar correctament aguest producte contribuirà a la utilització efectiva dels recursos naturals. Els usuaris tenen dret a retornar les bateries o els acumuladors usats sense cap càrrec. El preu de venda de les bateries i els acumuladors inclou el cost de la gestió ambiental dels residus i no es necessari mostrar l'import d'aquest cost en aquest fullet o en la factura que es lliuri a l'usuari final. Per a més informació sobre el reciclatge d'aquest producte, contacteu amb l'oficina municipal, les autoritats encarregades dels residus, el pla de residus homologat o el servei de recollida d'escombraries domèstiques de la vostra localitat o visiteu www.canon-europe.com/weee, o www.canon-europe.com/battery.

Solo per Unione Europea e SEE (Norvegia, Islanda e Liechtenstein)




Questi simboli indicano che il prodotto non può essere smaltito con i rifiuti domestici, ai sensi della Direttiva RAEE (2012/19/UE), della Direttiva sulle Batterie (2006/66/CE) e/o delle leggi nazionali che attuano tali Direttive. Se sotto il simbolo indicato sopra è riportato un simbolo chimico, in osservanza della Direttiva sulle batterie, tale simbolo indica la presenza di un metallo pesante (Hg = Mercurio, Cd = Cadmio, Pb = Piombo) nella batteria o nell'accumulatore con un livello di concentrazione superiore a una soglia applicabile specificata nella Direttiva sulle batterie. Il prodotto deve essere conferito a un punto di raccolta designato, ad esempio il rivenditore in caso di acquisto di un nuovo prodotto simile oppure un centro di raccolta autorizzato per il riciclaggio di rifiuti di apparecchiature elettriche ed elettroniche (RAEE) nonché di batterie e accumulatori. Un trattamento improprio di questo tipo di rifiuti può avere conseguenze negative sull'ambiente e sulla salute umana a causa delle sostanze potenzialmente nocive solitamente contenute in tali rifiuti. La collaborazione dell'utente per il corretto smaltimento di questo prodotto contribuirà a un utilizzo efficace delle risorse naturali ed eviterà di incorrere in sanzioni amministrative ai sensi dell'art. 255 e successivi del Decreto Legislativo n. 152/06. Per ulteriori informazioni sul riciclaggio di questo prodotto, contattare le autorità locali, l'ente responsabile della raccolta dei rifiuti, un rivenditore autorizzato o il servizio di raccolta dei rifiuti domestici, oppure visitare il sito www.canon-europe.com/weee, o www.canon-europe.com/battery.

Apenas para a União Europeia e AEE (Noruega, Islândia e Liechtenstein)



Estes símbolos indicam que este produto não deve ser eliminado juntamente com o seu lixo doméstico, segundo a Diretiva REEE de 2012/19/UE, a Diretiva de Baterias (2006/66/CE) e/ou a sua legislação nacional que transponha estas Diretivas. Se houver um símbolo químico impresso como mostrado abaixo, de acordo com a Diretiva de Baterias, isto indica que um metal pesado (Hg = Mercúrio, Cd = Cádmio, Pb = Chumbo) está presente nesta pilha ou acumulador, numa concentração acima de um limite aplicável especificado na Diretiva. Este produto deve ser entregue num ponto de recolha designado, por exemplo num local autorizado de troca quando compra um equipamento novo idêntico, ou num local de recolha autorizado para reciclar equipamento elétrico e eletrónico (EEE) em fim de vida, bem como pilhas e baterias. O tratamento inadequado deste tipo de resíduos pode ter um impacto negativo no ambiente e na saúde humana, devido a substâncias potencialmente perigosas que estão associadas com equipamentos do tipo EEE. A sua cooperação no tratamento correto deste produto irá contribuir para a utilização mais eficaz dos recursos naturais. Para obter mais informações acerca de como reciclar este produto, por favor contacte as suas autoridades locais responsáveis pela matéria, serviço de recolha aprovado para pilhas e baterias ou serviço de recolha de resíduos sólidos domésticos da sua municipalidade, ou visite www.canon-europe.com/weee, ou www.canon-europe.com/battery.

Gælder kun i Europæiske Union og EØS (Norge, Island og Liechtenstein)

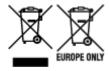

Disse symboler betyder, at produktet ikke må bortskaffes sammen med dagrenovation i henhold til WEEE-direktivet (2012/19/EU), batteridirektivet (2006/66/EF) og/eller den lokale lovgivning, som disse direktiver er gennemført i. Hvis der i overensstemmelse med batteridirektivet er trykt et kemisk symbol under det symbol, der er vist ovenfor, betyder det, at batteriet eller akkumulatoren indeholder tungmetaller (Hg = kviksølv, Cd = cadmium, Pb = bly) i en koncentration, som ligger over de grænseværdier, der er beskrevet i batteridirektivet. Produktet skal afleveres på et godkendt indsamlingssted, f.eks. i overensstemmelse med en godkendt én-til-én-procedure, når du indkøber et nyt tilsvarende produkt, eller på et godkendt indsamlingssted for elektronikaffald samt for batterier og akkumulatorer. Forkert håndtering af denne type affald kan medføre negative konsekvenser for miljøet og menneskers helbred på grund af de potentielt sundhedsskadelige stoffer, der generelt kan forefindes i elektrisk og elektronisk udstyr. Når du foretager korrekt bortskaffelse af produktet, bidrager du til effektiv brug af naturressourcerne. Kontakt din kommune, den lokale affaldsmyndighed, det lokale affaldsanlæg, eller besøg www.canon-europe.com/weee, eller www.canon-europe.com/battery for at få flere oplysninger om genbrug af dette produkt.

Μόνο για την Ευρωπαϊκή Ένωση και τον ΕΟΧ (Νορβηγία, Ισλανδία και Λιχτενστάιν)



Αυτά τα σύμβολα υποδεικνύουν ότι αυτό το προϊόν δεν πρέπει να απορρίπτεται μαζί με τα οικιακά απορρίμματα, σύμφωνα με την Οδηγία για τα Απόβλητα Ηλεκτρικού και Ηλεκτρονικού Εξοπλισμού (ΑΗΗΕ) (2012/19/ΕΕ), την Οδηγία για τις Ηλεκτρικές Στήλες (2006/66/ΕΚ) ή/και την εθνική νομοθεσία που εφαρμόζει τις Οδηγίες εκείνες. Εάν κάποιο χημικό σύμβολο είναι τυπωμένο κάτω από το σύμβολο που φαίνεται παραπάνω, σύμφωνα με την Οδηγία για τις Ηλεκτρικές Στήλες, υποδηλώνει ότι κάποιο βαρύ μέταλλο (Hg = Υδράργυρος, Cd = Κάδμιο, Pb = Μόλυβδος) υπάρχει στην μπαταρία ή τον συσσωρευτή σε συγκέντρωση μεγαλύτερη από το ισχύον επίπεδο που καθορίζεται στην Οδηγία για τις Ηλεκτρικές Στήλες. Αυτό το προϊόν πρέπει να παραδίδεται σε καθορισμένο σημείο συλλογής, π.χ. σε μια εξουσιοδοτημένη βάση ανταλλαγής όταν αγοράζετε ένα νέο παρόμοιο προϊόν ή σε μια εξουσιοδοτημένη θέση συλλογής για την ανακύκλωση των αποβλήτων ηλεκτρικού και ηλεκτρονικού εξοπλισμού (ΗΗΕ) και των ηλεκτρικών στηλών και συσσωρευτών. Ο ακατάλληλος χειρισμός αυτού του τύπου αποβλήτων μπορεί να έχει αρνητικό αντίκτυπο στο περιβάλλον και την υγεία του ανθρώπου, λόγω δυνητικά επικίνδυνων ουσιών που γενικά συνδέονται με τον ΗΗΕ. Η συνεργασία σας για τη σωστή απόρριψη αυτού του προϊόντος θα συμβάλει στην αποτελεσματική χρήση των φυσικών πόρων. Για περισσότερες πληροφορίες σχετικά με ανακύκλωση αυτού του προϊόντος, επικοινωνήστε με το τοπικό γραφείο της πόλης σας, την υπηρεσία απορριμμάτων, το εγκεκριμένο σχήμα ή την υπηρεσία απόρριψης οικιακών αποβλήτων ή επισκεφθείτε τη διεύθυνση www.canon-europe.com/weee ή www.canon-europe.com/battery.

Gjelder kun den europeiske union og EØS (Norge, Island og Liechtenstein)



Disse symbolene indikerer at dette produktet ikke skal kastes sammen med husholdningsavfall, i henhold til WEEE-direktivet (2012/19/EU), batteridirektivet (2006/66/EF) og/eller nasjonal lov som har implementert disse direktivene. Hvis et kjemisk symbol vises under symbolet vist ovenfor, i samsvar med batteridirektivet, indikerer dette at et tungmetall (Hg = kvikksølv, Cd = kadmium, Pb = bly) finnes i batteriet eller akkumulatoren i en konsentrasjon over en gjeldende øvre grense som er spesifisert i batteridirektivet. Produktet må leveres til et dertil egnet innsamlingspunkt, det vil si på en autorisert en-til-en-basis når en kjøper et nytt lignende produkt, eller til et autorisert innsamlingssted for resirkulering av avfall fra elektrisk og elektronisk utstyr (EE-utstyr) og batterier og akkumulatorer. Feil håndtering av denne typen avfall kan være miljø- og helseskadelig på grunn av potensielt skadelige stoffer som ofte brukes i EE-utstyr. Din innsats for korrekt avhending av produktet vil bidra til effektiv bruk av naturressurser. Du kan få mer informasjon om resirkulering av dette produktet ved å kontakte lokale myndigheter, avfallsadministrasjonen, et godkjent program eller husholdningens renovasjonsselskap, eller gå til www.canon-europe.com/weee, eller www.canon-europe.com/battery.

Vain Euroopan unionin sekä ETA:n (Norja, Islanti ja Liechtenstein) alueelle.



Nämä tunnukset osoittavat, että sähkö- ja elektroniikkalaiteromua koskeva direktiivi (SER-direktiivi, 2012/19/EU), paristoista ja akuista annettu direktiivi (2006/66/EY) sekä kansallinen lainsäädäntö kieltävät tuotteen hävittämisen talousjätteen mukana. Jos yllä olevan symbolin alapuolelle on paristodirektiivin mukaisesti painettu kemiallisen aineen tunnus, kyseinen paristo tai akku sisältää raskasmetalleja (Hg = elohopea, Cd = kadmium, Pb = lyijy) enemmän kuin paristodirektiivin salliman määrän. Tuote on vietävä asianmukaiseen keräyspisteeseen, esimerkiksi kodinkoneliikkeeseen uutta vastaavaa tuotetta ostettaessa tai viralliseen sähkö- ja elektroniikkalaiteromun tai paristojen ja akkujen keräyspisteeseen. Sähkö- ja elektroniikkalaiteromun virheellinen käsittely voi vahingoittaa ympäristöä ja ihmisten terveyttä, koska laitteet saattavat sisältää ympäristölle ja terveydelle haitallisia aineita. Tuotteen asianmukainen hävittäminen säästää myös luonnonvaroja. Jos haluat lisätietoja tämän tuotteen kierrätyksestä, ota yhteys kunnan jätehuoltoviranomaisiin tai käyttämääsi jätehuoltoyhtiöön tai käy osoitteessa www.canoneurope.com/weee, tai www.canon-europe.com/battery.

Endast för Europeiska unionen och EES (Norge, Island och Liechtenstein)



De här symbolerna visar att produkten inte får sorteras och slängas som hushållsavfall enligt WEEE-direktivet (2012/19/EU), batteridirektivet (2006/66/EG) och/eller nationell lagstiftning som implementerar dessa direktiv. Om en kemisk symbol förekommer under ovanstående symbol innebär detta enligt Batteridirektivet att en tungmetall (Hg = Kvicksilver, Cd = Kadmium, Pb = Bly) förekommer i batteriet eller ackumulatorn med en koncentration som överstiger tillämplig gräns som anges i Batteridirektivet. Produkten ska lämnas in på en avsedd insamlingsplats, t.ex. på en återvinningsstation auktoriserad att hantera elektrisk och elektronisk utrustning (EE-utrustning) samt batterier och ackumulatorer eller hos handlare som är auktoriserade att byta in varor då nya, motsvarande köps (en mot en). Olämplig hantering av avfall av den här typen kan ha negativ inverkan på miljön och människors hälsa på grund av de potentiellt farliga ämnen som kan återfinnas i elektrisk och elektronisk utrustning. Din medverkan till en korrekt avfallshantering av produkten bidrar till effektiv användning av naturresurserna. Om du vill ha mer information om var du kan lämna in den här produkten, kontakta ditt lokala kommunkontor, berörd myndighet eller företag för avfallshantering eller se www.canon-europe.com/weee, eller www.canon-europe.com/battery.

Pouze Evropská unie a EHP (Norsko, Island a Lichtenštejnsko)



Tento symbol znamená, že podle směrnice OEEZ (2012/19/EU), směrnice o bateriích (2006/66/ES) a/ nebo podle vnitrostátních právních prováděcích předpisů k těmto směrnicím nemá být tento výrobek likvidován s odpadem z domácností. Je-li v souladu s požadavky směrnice o bateriích vytištěna pod výše uvedeným symbolem chemická značka, udává, že tato baterie nebo akumulátor obsahuje těžké kovy (Hg = rtuť, Cd = kadmium, Pb = olovo) v koncentraci vyšší, než je příslušná hodnota předepsaná směrnicí. Tento výrobek má být vrácen do určeného sběrného místa, např. v rámci autorizovaného systému odběru jednoho výrobku za jeden nově prodaný podobný výrobek, nebo do autorizovaného sběrného místa pro recyklaci odpadních elektrických a elektronických zařízení (OEEZ), baterií a akumulátorů. Nevhodné nakládání s tímto druhem odpadu by mohlo mít negativní dopad na životní prostředí a lidské zdraví, protože elektrická a elektronická zařízení zpravidla obsahují potenciálně nebezpečné látky. Vaše spolupráce na správné likvidaci tohoto výrobku napomůže efektivnímu využívání přírodních zdrojů. Chcete-li získat podrobné informace týkající se recyklace tohoto výrobku, obraťte se prosím na místní úřad, orgán pro nakládání s odpady, schválený systém nakládání s odpady či společnost zajišťující likvidaci domovního odpadu, nebo navštivte webové stránky www.canon-europe.com/weee nebo www.canon-europe.com/battery.

Csak az Európai Unió és az EGT (Norvégia, Izland és Liechtenstein) országaiban



Ezek a szimbólumok azt jelzik, hogy a termék hulladékkezelése a háztartási hulladéktól különválasztva, az elektromos és elektronikus berendezések hulladékairól (WEEE) szóló (2012/19/EU) irányelvnek és az elemekről és akkumulátorokról, valamint a hulladék elemekről és akkumulátorokról szóló (2006/66/EK)

irányelvnek megfelelően és/vagy ezen irányelveknek megfelelő helyi előírások szerint történik. Amennyiben a fent feltüntetett szimbólum alatt egy vegyjel is szerepel, az elemekről és akkumulátorokról szóló irányelvben foglaltak értelmében ez azt jelzi, hogy az elem vagy az akkumulátor az irányelvben meghatározott határértéknél nagyobb mennyiségben tartalmaz nehézfémet (Hg = higany, Cd = kadmium, Pb = ólom). E terméket az arra kijelölt gyűjtőhelyre kell juttatni – pl. hasonló termék vásárlásakor a régi becserélésére vonatkozó hivatalos program keretében, vagy az elektromos és elektronikus berendezések (EEE) hulladékainak gyűjtésére, valamint a hulladék elemek és hulladék akkumulátorok gyűjtésére kijelölt hivatalos gyűjtőhelyre. Az ilyen jellegű hulladékok nem előírásszerű kezelése az elektromos és elektronikus berendezésekhez (EEE) általánosan kapcsolható potenciálisan veszélyes anyagok révén hatással lehet a környezetre és az egészségre. E termék megfelelő leselejtezésével Ön is hozzájárul a természeti források hatékony használatához. A termék újrahasznosítását illetően informálódjon a helyi polgármesteri hivatalnál, a helyi közterület-fenntartó vállalatnál, a hivatalos hulladéklerakó telephelyen vagy a háztartási hulladék begyűjtését végző szolgáltatónál, illetve látogasson el a www.canon-europe.com/weee, vagy www.canon-europe.com/battery internetes oldalra.

Tylko dla krajów Unii Europejskiej oraz EOG (Norwegia, Islandia i Liechtenstein)



Te symbole oznaczają, że produktu nie należy wyrzucać razem z odpadami gospodarstwa domowego, zgodnie z dyrektywą WEEE w sprawie zużytego sprzętu elektrycznego i elektronicznego (2012/19/UE) lub dyrektywą w sprawie baterii (2006/66/WE) bądź przepisami krajowymi wdrażającymi te dyrektywy. Jeśli pod powyższym symbolem znajduje się symbol chemiczny, zgodnie z dyrektywą w sprawie baterii oznacza to, że bateria lub akumulator zawiera metal ciężki (Hg = rtęć, Cd = kadm, Pb = ołów) w stężeniu przekraczającym odpowiedni poziom określony w dyrektywie w sprawie baterii. Użytkownicy baterii i akumulatorów mają obowiązek korzystać z dostępnego programu zwrotu, recyklingu i utylizacji baterii oraz akumulatorów. Niewłaściwe postępowanie z tego typu odpadami może mieć wpływ na środowisko i zdrowie ludzi ze względu na substancje potencjalnie niebezpieczne, związane ze zużytym sprzętem elektrycznym i elektronicznym. Państwa współpraca w zakresie właściwej utylizacji tego produktu przyczyni się do efektywnego wykorzystania zasobów naturalnych. W celu uzyskania informacji o sposobie recyklingu tego produktu prosimy o kontakt z właściwym urzędem miejskim lub zakładem gospodarki komunalnej bądź zapraszamy na stronę www.canon-europe.com/weee, lub www.canon-europe.com/battery.

Platí len pre štáty Európskej únie a EHP (Nórsko, Island a Lichtenštajnsko)



Tieto symboly označujú, že podľa Smernice o odpade z elektrických a elektronických zariadení (OEEZ) 2012/19/EÚ, Smernice o batériách (2006/66/ES) a podľa platnej legislatívy Slovenskej republiky sa tento produkt nesmie likvidovať spolu s komunálnym odpadom. Ak je chemická značka vytlačená pod vyššie

uvedeným symbolom, znamená to, že táto batéria alebo akumulátor obsahuje ťažký kov (Hg = ortuť, Cd = kadmium, Pb = olovo) v koncentrácii vyššej, ako je príslušná povolená hodnota stanovená v Smernici o batériách. Produkt je potrebné odovzdať do určenej zberne, napr. prostredníctvom výmeny za kúpu nového podobného produktu, alebo na autorizované zberné miesto, ktoré spracúva odpad z elektrických a elektronických zariadení (EEZ), batérií a akumulátorov. Nesprávna manipulácia s takýmto typom odpadu môže mať negatívny vplyv na životné prostredie a ľudské zdravie, pretože elektrické a elektronické zariadenia obsahujú potenciálne nebezpečné látky. Spoluprácou na správnej likvidácii tohto produktu prispejete k účinnému využívaniu prírodných zdrojov. Ďalšie informácie o recyklácii tohto produktu získate od miestneho úradu, úradu životného prostredia, zo schváleného plánu OEEZ alebo od spoločnosti, ktorá zaisťuje likvidáciu komunálneho odpadu. Viac informácií nájdete aj na webovej stránke: www.canon-europe.com/weee, alebo www.canon-europe.com/battery.

Üksnes Euroopa Liit ja EMP (Norra, Island ja Liechtenstein)



Antud sümbolid viitavad sellele, et vastavalt elektri- ja elektroonikaseadmete jäätmeid käsitlevale direktiivile (2012/19/EL), patareisid ja akusid ning patarei- ja akujäätmeid käsitlevale direktiivile (2006/66/EÜ) ja/või nimetatud direktiive rakendavatele riiklikele õigusaktidele ei või seda toodet koos olmejäätmetega ära visata. Kui keemiline sümbol on trükitud eespool toodud sümboli alla, siis tähendab see, et antud patareis või akus leiduva raskemetalli (Hg = elavhõbe, Cd = kaadmium, Pb = plii) kontsentratsioonitase on kõrgem kui patareisid ja akusid ning patarei- ja akujäätmeid käsitlevas direktiivis sätestatud piirmäär. Antud tootest tekkinud jäätmed tuleb anda vastavasse kogumispunkti, nt müügipunkti, mis on volitatud üks ühe vastu vahetama, kui ostate uue sarnase toote, või vastavasse elektri- ja lektroonikaseadmete jäätmete ning patareide ja akude ümbertöötlemiseks mõeldud kogumispunkti. Antud liiki jäätmete vale käitlemine võib kahjustada keskkonda ja inimeste tervist elektrija elektroonikajäätmetes tavaliselt leiduvate potentsiaalselt ohtlike ainete tõttu. Antud tootest tekkinud jäätmete nõuetekohase kõrvaldamisega aitate kasutada loodusvarasid efektiivselt. Täiendava teabe saamiseks elektri- ja elektroonikaseadmetest tekkinud jäätmete ning patarei- ja akujäätmete tagastamise ja ümbertöötlemise kohta võtke ühendust kohaliku omavalitsusega, asjakohase valitsusasutusega, asjakohase tootjavastutusorganisatsiooniga või olmejäätmete käitlejaga. Lisateavet leitate ka Internetileheküljelt www.canon-europe.com/weee või www.canon-europe.com/battery.

Tikai Eiropas Savienībai un EEZ (Norvēģijai, Islandei un Lihtenšteinai)



Šie simboli norāda, ka atbilstoši ES Direktīvai (2012/19/ES) par elektrisko un elektronisko iekārtu atkritumiem (EEIA), Direktīvai (2006/66/EK) par baterijām un akumulatoriem, un akumulatoru atkritumiem, ar ko atceļ Direktīvu 91/157/EEK, un vietējiem tiesību aktiem šo izstrādājumu nedrīkst izmest kopā ar sadzīves atkritumiem. Ja zem iepriekš norādītā simbola ir uzdrukāts ķīmiskais simbols, saskaņā ar direktīvu par baterijām un akumulatoriem tas nozīmē, ka šīs baterijas vai akumulatori satur smagos metālus (Hg = dzīvsudrabs, Cd = kadmijs, Pb = svins) un to koncentrācijas līmenis pārsniedz direktīvā

par baterijām un akumulatoriem minēto piemērojamo slieksni. Šis izstrādājums ir jānodod piemērotā savākšanas vietā, piemēram, apstiprinātā veikalā, kur iegādājaties līdzīgu jaunu produktu un atstājat veco, vai apstiprinātā vietā izlietotu elektrisko un elektronisko iekārtu un bateriju un akumulatoru pārstrādei. Nepareiza šāda veida atkritumu apsaimniekošana var apdraudēt vidi un cilvēka veselību tādu iespējami bīstamu vielu dēļ, kas parasti ir elektriskajās un elektroniskajās iekārtās. Jūsu atbalsts pareizā šāda veida atkritumu apsaimniekošanā sekmēs efektīvu dabas resursu izmantošanu. Lai saņemtu pilnīgāku informāciju par šāda veida izstrādājumu nodošanu otrreizējai pārstrādei, sazinieties ar vietējo pašvaldību, atkritumu savākšanas atbildīgo dienestu, pilnvaroto organizāciju vai iestādi, kas veic sadzīves atkritumu apsaimniekošanu, vai apmeklējiet tīmekļa vietni www.canon-europe.com/weee, vai www.canon-europe.com/battery.

Tik Europos Sąjungai ir EEE (Norvegijai, Islandijai ir Lichtenšteinui)



Šie simboliai reiškia, kad šio gaminio negalima išmesti į buitines atliekas, kaip reikalaujama WEEE Direktyvoje (2012/19/ES) ir Baterijų direktyvoje (2006/66/EB) ir (ar) jūsų šalies nacionaliniuose įstatymuose, kuriais šios Direktyvos yra įgyvendinamos. Jeigu cheminio ženklo simbolis yra nurodytas žemiau šio ženklo, tai reiškia, kad vadovaujantis Baterijų direktyvą, baterijų ar akumuliatorių sudėtyje yra sunkiųjų metalų (Hg = gyvsidabrio, Cd = kadmio, Pb = švino), kurių koncentracija viršija Baterijų direktyvoje nurodytas leistinas ribas. Šį gaminį reikia pristatyti į specialųjį surinkimo punktą, pavyzdžiui, mainais, kai jūs perkate naują panašų gaminį, arba į specialiąją surinkimo vietą, kurioje perdirbamos elektrinės ir elektroninės įrangos atliekos bei naudotos baterijos ir akumuliatoriai. Dėl netinkamo šio tipo atliekų tvarkymo gali nukentėti aplinka ir iškilti grėsmė žmogaus sveikatai dėl galimai kenksmingų medžiagų, iš esmės susijusių su elektrine ir elektronine įranga. Bendradarbiaudami ir teisingai utilizuodami šiuos gaminius, jūs padėsite efektyviai naudoti gamtinius išteklius. Daugiau informacijos apie gaminio perdirbimą jums gali suteikti vietinis biuras, atliekų tvarkymo bendrovė, sertifikuoti organai ar buitinių atliekų surinkimo įmonės. Taip pat siūloma apsilankyti interneto svetainėje www.canoneurope.com/weee, arba www.canoneurope.com/battery.

Samo za Evropsko unijo in EGP (Norveška, Islandija in Lihtenštajn)



Ti simboli pomenijo, da tega izdelka skladno z Direktivo OEEO (2012/19/EU), Direktivo 2006/66/ES in/ali nacionalno zakonodajo, ki uvaja ti direktivi, ne smete odlagati z nesortiranimi gospodinjskimi odpadki. Če je pod zgoraj prikazanim simbolom natisnjen kemijski simbol, to v skladu z Direktivo pomeni, da je v tej bateriji ali akumulatorju prisotna težka kovina (Hg = živo srebro, Cd = kadmij, Pb = svinec), in sicer v koncentraciji, ki je nad relevantno mejno vrednostjo, določeno v Direktivi. Ta izdelek je potrebno odnesti na izbrano zbirno mesto, t. j. pooblaščeno trgovino, kjer ob nakupu novega (podobnega) izdelka vrnete starega, ali na pooblaščeno zbirno mesto za ponovno uporabo odpadne električne in elektronske opreme (EEO) ter baterij in akumulatorjev. Neustrezno ravnanje s to vrsto odpadkov lahko negativno vpliva na okolje in človeško zdravje zaradi potencialno nevarnih snovi, ki so pogosto povezane z EEO.

Vaše sodelovanje pri pravilnem odlaganju tega izdelka predstavlja pomemben prispevek k smotrni izrabi naravnih virov. Za več informacij o ponovni uporabi tega izdelka se obrnite na lokalen mestni urad, pristojno službo za odpadke, predstavnika pooblaščenega programa za obdelavo odpadkov ali na lokalno komunalo. Lahko pa tudi obiščete našo spletno stran www.canon-europe.com/weee, ali www.canon-europe.com/battery.

Само за Европейския съюз и ЕИП (Норвегия, Исландия и Лихтенщайн)



Тези символи показват, че този продукт не трябва да се изхвърля заедно с битовите отпадъци съгласно Директивата за ИУЕЕО (2012/19/ЕС), Директивата за батерии (2006/66/ЕО) и/или Вашето национално законодателство, прилагащо тези Директиви. Ако под показания горе символ е отпечатан символ за химически елемент, съгласно разпоредбите на Директивата за батерии, този втори символ означава наличието на тежък метал (Hg = живак, Cd = кадмий, Pb = олово) в батерията или акумулатора в концентрация над указаната граница за съответния елемент в Директивата. Този продукт трябва да бъде предаден в предназначен за целта пункт за събиране, например на база размяна, когато купувате нов подобен продукт, или в одобрен събирателен пункт за рециклиране на излязло от употреба електрическо и електронно оборудване (ИУЕЕО), батерии и акумулатори. Неправилното третиране на този тип отпадъци може да доведе до евентуални отрицателни последствия за околната среда и човешкото здраве поради потенциално опасните вещества, които обикновено са свързани с ЕЕО. В същото време Вашето съдействие за правилното изхвърляне на този продукт ще допринесе за ефективното използване на природните ресурси. За повече информация относно това къде можете да предадете за рециклиране на този продукт, моля свържете се с Вашите местни власти, с органа, отговорен за отпадъците, с одобрената система за ИУЕЕО или с Вашата местна служба за битови отпадъци, или посетете www.canon-europe.com/weee, или www.canon-europe.com/battery.

Doar pentru Uniunea Europeană și EEA (Norvegia, Islanda și Liechtenstein)



Aceste simboluri indică faptul că acest produs nu trebuie aruncat împreună cu deşeurile menajere, în conformitate cu Directiva DEEE (2012/19/UE), Directiva referitoare la baterii (2006/66/CE) şi/sau legile dvs. naţionale ce implementează aceste Directive. Dacă un simbol chimic este imprimat sub simbolul de mai sus, în conformitate cu Directiva referitoare la baterii, acest simbol indică prezenţa în baterie sau acumulator a unui metal greu (Hg = Mercur, Cd = Cadmiu, Pb = Plumb) într-o concentraţie mai mare decât pragul admis specificat în Directiva referitoare la baterii. Acest produs trebuie înmânat punctului de colectare adecvat, ex: printr-un schimb autorizat unu la unu atunci când cumpăraţi un produs nou similar sau la un loc de colectare autorizat pentru reciclarea reziduurilor de echipament electric şi electronic (EEE) şi baterii şi acumulatori. Administrarea neadecvată a acestui tip de deşeuri, ar putea avea un

impact asupra mediului şi asupra sănătăţii umane datorită substanţelor cu potenţial de risc care sunt în general asociate cu EEE. Cooperarea dvs. în direcţia reciclării corecte a acestui produs va contribui la o utilizare eficientă a resurselor naturale. Pentru mai multe informaţii despre reciclarea acestui produs, vă rugăm să contactaţi biroul dvs. local, autorităţile responsabile cu deşeurile, schema aprobată sau serviciul dvs. responsabil cu deşeurile menajere sau vizitaţi-ne la www.canon-europe.com/weee, sau www.canon-europe.com/battery.

Samo za Europsku uniju i EEA (Norveška, Island i Lihtenštajn)



Oznaka pokazuje da se ovaj proizvod ne smije odlagati s komunalnim i ostalim vrstama otpada, u skladu s direktivom WEEE (2012/19/EC), Direktivom o baterijama (2006/66/EC) i Pravilnikom o gospodarenju otpadnim baterijama i akumulatorima te Pravilnikom o gospodarenju otpadnim električnim i elektroničkim uređajima i opremom. Ako je ispod prethodno prikazane oznake otisnut kemijski simbol, u skladu s Direktivom o baterijama, to znači da se u ovoj bateriji ili akumulatoru nalazi teški metal (Hg = živa, Cd = kadmij, Pb = olovo) i da je njegova koncentracija iznad razine propisane u Direktivi o baterijama. Ovaj bi proizvod trebalo predati ovlašenom skupljaču EE otpada ili prodavatelju koji je dužan preuzeti otpadni proizvod po sistemu jedan za jedan, ukoliko isti odgovara vrsti te je obavljao primarne funkcije kao i isporučena EE oprema. Otpadne baterije i akumulatori predaju se ovlaštenom skupljaču otpadnih baterija ili akumulatora ili prodavatelju bez naknade i obveze kupnje za krajnjeg korisnika. Neodgovarajuće rukovanje ovom vrstom otpada može utjecati na okoliš i ljudsko zdravlje zbog potencijalno opasnih supstanci koje se najčešće nalaze na takvim mjestima. Vaša suradnja u pravilnom zbrinjavanju ovog proizvoda pridonijet će djelotvornom iskorištavanju prirodnih resursa. Dodatne informacije o recikliranju ovog proizvoda zatražite od svog lokalnog gradskog ureda, službe za zbrinjavanje otpada, odobrenog programa ili komunalne službe za uklanjanje otpada ili pak na stranicama www.canon-europe.com/weee ili www.canon-europe.com/battery.

Korisnici u Srbiji



Ovaj simbol označava da ovaj proizvod ne sme da se odlaže sa ostalim kućnim otpadom, u skladu sa WEEE Direktivom (2012/19/EU), Direktivom o baterijama (2006/66/EC) i nacionalnim zakonima. Ukoliko je ispod gore navedenog simbola odštampan hemijski simbol, u skladu sa Direktivom o baterijama, ovaj simbol označava da su u ovoj bateriji ili akumulatoru prisutni teški metali (Hg – živa, Cd – kadmijum, Pb - olovo) u koncentracijama koje premašuju prihvatljivi prag naveden u Direktivi o baterijama. Ovaj proizvod treba predati određenom centru za prikupljanje, npr. po principu "jedan-za-jedan" kada kupujete sličan novi proizvod, ili ovlašćenom centru za prikupljanje za reciklažu istrošene električne i elektronske opreme (EEE), baterija i akumulatora. Nepravilno rukovanje ovom vrstom otpada može imati negativne posledice po životnu sredinu i ljudsko zdravlje usled potencijalno opasnih materijala koji se uglavnom vezuju za EEE. Vaša saradnja na ispravnom odlaganju ovog proizvoda će doprineti efikasnom korišćenju prirodnih resursa. Više informacija o tome kako možete da reciklirate ovaj proizvod potražite od lokalnih gradskih

vlasti, komunalne službe, odobrenog plana reciklaže ili servisa za odlaganje kućnog otpada, ili posetite stranicu www.canon-europe.com/weee, ili www.canon-europe.com/battery.

Handling Precautions

- ➤ When Repairing, Lending, or Disposing of the Printer
- ➤ Legal Restrictions on Printing
- ➤ Ink Tips

When Repairing, Lending, or Disposing of the Printer

If you have entered personal data, passwords and/or other security settings on the printer, such information may be stored in the printer.

To keep your personal information safe, please be sure to reset all printer settings when sending the printer for repair, lending or transferring the printer to another person, or disposing of the printer.

→ Reset settings

Legal Restrictions on Printing

Printing or modifying printed copies of the following may be punishable under law.

This list is non-exhaustive. When in doubt, check with a local legal representative.

- Paper money
- · Money orders
- · Certificates of deposit
- Postage stamps (canceled or uncanceled)
- · Identification badges or insignia
- · Selective service or draft papers
- · Checks or drafts issued by governmental agencies
- · Motor vehicle licenses and certificates of title
- · Traveler's checks
- Food stamps
- Passports
- · Immigration papers
- Internal revenue stamps (canceled or uncanceled)
- · Bonds or other certificates of indebtedness
- · Stock certificates
- · Copyrighted works or works of art, without the owner's consent

Ink Tips

Ink is used for various purposes other than printing.

Ink may be used for purposes other than printing.

When you use the Canon printer for the first time after you install the bundled ink tanks, the printer consumes a small amount of ink in the amount to enable printing by filling the nozzles of the Print Head with ink. For this reason, the number of sheets that can be printed with the first ink tanks is fewer than the succeeding ink tanks.

The printing costs described in the brochures or websites are based on the consumption data from not the first ink tank /ink cartridge but the succeeding ink tank /ink cartridge.

Ink is sometimes used to maintain the optimal printing quality.

To keep printer's performance, Canon printer performs cleaning automatically according to its condition. When the printer performs cleaning, a small amount of ink is consumed. In this case, all colors of ink may be consumed.

[Cleaning function]

The cleaning function helps the printer to suck air bubbles or ink itself from the nozzle and thus prevents print quality degradation or nozzle clogging.

Note

 Ink is consumed for print preparation operation that is periodically and automatically performed to keep printer's performance and for print head cleaning. Therefore, unused ink for printing may also be consumed.

Black-and-white printing uses color ink.

Black-and-white printing may use ink other than black ink depending on the type of printing paper or the settings of the printer driver. So, color ink is consumed even when printing in black-and-white.

Note

 The printer uses pigment ink. Due to the nature of the pigment ink, the ink on the printed surface may be removed when being rubbed or scratched.

Specifications

Specifications

➤ Print Area

- Printing Area
- Standard Sizes
- Sizes for 0.98 inch (25 mm) Margin Paper
- Printable Discs

Specifications

>>> Important

• The following values may vary depending on the operating environment.

General Specifications

Power supply	100-240 V AC (50/60 Hz)	
	(The supplied power cord is only for the country or region you purchased.)	
Power consumption	When printing (USB connection): Approx. 16 W	
	Standby (USB connection): Approx. 1.0 W *1	
	Standby (all ports connected): Approx. 2.3 W *1	
	When power is off: Approx. 0.05 W *2	
	*1 The wait time for standby cannot be changed.	
	*2 The printer uses a trace amount of power even when turned off. To stop all power consumption, turn off the printer and unplug the power cord.	
Operating environment	Temperature: 41 to 95 °F (5 to 35 °C)	
	Humidity: 10 to 90 % RH (no condensation)	
	* The performance of the printer may be reduced under certain temperature and humidity conditions.	
	Recommended conditions:	
	Temperature: 59 to 86 °F (15 to 30 °C)	
	Humidity: 10 to 80 % RH (no condensation)	
	* For the temperature and humidity conditions of papers such as photo paper, refer to the paper's packaging or the supplied instructions.	
Storage environment	Temperature: 32 to 104 °F (0 to 40 °C)	
	Humidity: 5 to 95 % RH (no condensation)	
Dimensions (W x D x H)	Approx. 25.2 x 15 x 7.9 in. (Approx. 639 x 379 x 200 mm)	
	* With the trays retracted.	
Weight	Approx. 31.7 lb (Approx. 14.4 kg)	
	* With the Print Head and ink tanks installed.	

Interface

USB and the network can be used at the same time.

You cannot use Wi-Fi and wired LAN at the same time.

USB	Hi-Speed USB *
002	1

	* To use Hi-Speed USB, your computer must support Hi-Speed USB. Additionally, the Hi-Speed USB interface is completely backward compatible with USB 1.1, so the printer can be connected even if the computer interface is USB 1.1.
LAN	Wired LAN: IEEE802.3u (100BASE-TX) / IEEE802.3 (10BASE-T)
	Wi-Fi: IEEE802.11n / IEEE802.11g / IEEE802.11b / IEEE802.11a / IEEE802.11ac

Network Specifications

Communication protocol	SNMP, HTTP, TCP/IP (IPv4/IPv6)	
Wired LAN specifications	Supported Standards: IEEE802.3u (100BASE-TX) / IEEE802.3 (10BASE-T)	
	Transmission speed: 10 Mbps / 100 Mbps (automatically selected)	
	Security: IEEE802.1X (EAP-TLS/EAP-TTLS/PEAP)	
Wi-Fi specifications	Supported Standards: IEEE802.11n / IEEE802.11g / IEEE802.11b / IEEE802.11a / IEEE802.11ac	
	Frequency bandwidth: 2.4 GHz / 5 GHz *1	
	Channels:	
	2.4 GHz: 1-11 or 1-13 *1	
	5 GHz: W52, W53, W56, W58 *1	
	*1 Frequency bandwidth and available channels differ depending on country or region.	
	Effective range: Indoors 164 feet/50 m *2	
	*2 Varies according to environmental conditions.	
	Security:	
	WPA-PSK (AES)	
	WPA2-PSK (AES)	
	WPA3-SAE (AES)	
	WPA-EAP (AES) *3	
	WPA2-EAP (AES) *3	
	WPA3-EAP (AES) *3	
	*3 Supports IEEE802.1X (EAP-TLS / EAP-TTLS / PEAP)	
	Setup:	
	WPS (push button method/PIN code method)	
	Easy wireless connect	

Paper

For the paper types, size, and weight/thickness that are supported by the printer, see <u>Media Types You Can Use</u>.

For the area that can be printed, see Print Area.

Operating Conditions

If operating conditions of the operating system are high, follow those.

Windows

Compatible Operating System	Windows 11, Windows 10, Windows 8.1, Windows 7 SP1	
	Note: Operation can only be guaranteed on a PC with pre-installed operating system.	
	.NET Framework is required.	
	Printer driver and IJ Printer Assistant Tool support the following OS:	
	Windows Server 2008 R2 SP1, Windows Server 2012 R2, Windows Server 2016, Windows Server 2019 and Windows Server 2022	
Amount of hard disk space required for installing the driver	1.5 GB or more The necessary amount of hard disk space may be changed without notice.	

macOS

Compatible Operating System	macOS Big Sur 11.7.10 - macOS Sonoma 14	
Amount of hard disk space required for installing the driver	1.5 GB or more The necessary amount of hard disk space may be changed without notice.	
	The hoodsally amount of hard disk space may be shariged without house.	

Other Supported OS

iOS, iPadOS, Android, Chrome OS

Some functions may not be available with the supported OS.

- An Internet connection is required to use the Online Manual.
- To install the software while using Windows, you must have a CD-ROM drive or a network connection.
- To install the software while using macOS, you must have a network connection.

Print Area


- Printing Area
- Standard Sizes
- ➤ Sizes for 0.98 inch (25 mm) Margin Paper
- **▶** Printable Discs

Printing Area

To maintain print quality, the printer leaves a margin around the edges of paper. The printable area is inside this margin.

Recommended printing area ____: Canon recommends that you print within this area.

Printable area : The area where it is possible to print.

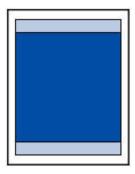

Note


- By selecting Borderless Printing option, you can make prints with no margins.
- When performing Borderless Printing, slight cropping may occur at the edges since the printed image is enlarged to fill the whole page.
- To specify the amount of image that extends off the paper, select **Extension for borderless printing** in **Advanced paper settings**.
 - ➡ Paper-related settings
- For Borderless Printing, use the following paper:
 - Photo Paper Pro Platinum <PT-101>
 - Photo Paper Plus Glossy II <PP-201/PP-208/PP-301>
 - Photo Paper Pro Luster <LU-101>
 - Photo Paper Plus Semi-gloss <SG-201>
 - Matte Photo Paper <MP-101>*1
 - Photo Paper Pro Premium Matte <PM-101>*1
 - Premium Fine Art Smooth <FA-SM1>*1
 - Premium Fine Art Rough <FA-RG1>*1
 - Greeting Card
 - Card Stock
 - *1 Borderless Printing is disabled depending on print settings. To enable Borderless Printing, remove margin restrictions.
 - Print Options dialog box (Windows)
 - Advanced Paper Settings (macOS)

Performing Borderless Printing on any other type of paper may substantially reduce printing quality and/or result in printouts with altered color hues.

- Borderless Printing is not available for 9"x13"(23x33cm) size paper or plain paper.
- Depending on the type of paper, Borderless Printing may reduce the print quality at the top and bottom edges of the paper or cause these parts to become smudged.

Standard Sizes

Size	Printable Area (width x height)
Letter	8.00 x 10.69 in. (203.2 x 271.4 mm)
Legal	8.00 x 13.69 in. (203.2 x 347.6 mm)
11" x 17" (28 x 43 cm)	10.73 x 16.69 in. (272.6 x 423.8 mm)
A5	5.56 x 7.95 in. (141.2 x 202.0 mm)
A4	8.00 x 11.38 in. (203.2 x 289.0 mm)
A3	11.43 x 16.22 in. (290.2 x 412.0 mm)
A3+	12.69 x 18.70 in. (322.2 x 475.0 mm)
B5	6.90 x 9.80 in. (175.2 x 249.0 mm)
B4	9.85 x 14.02 in. (250.2 x 356.0 mm)
KG/4"x6"(10x15)	3.73 x 5.69 in. (94.8 x 144.4 mm)
5" x 7" (13 x 18 cm)	4.73 x 6.69 in. (120.2 x 169.8 mm)
7" x 10" (18 x 25 cm)	6.73 x 9.69 in. (171.0 x 246.0 mm)
9"x13"(23x33cm)	8.73 x 12.69 in. (221.8 x 322.2 mm)
11"x14"	10.73 x 13.69 in. (272.6 x 347.6 mm)
13"x19" (Super B)	12.73 x 18.69 in. (323.4 x 474.6 mm)
8" x 10" (20 x 25 cm)	7.73 x 9.69 in. (196.4 x 246.0 mm)
10" x 12" (25 x 30 cm)	9.73 x 11.69 in. (247.2 x 296.8 mm)
8.27 x 23.39 in. (210 x 594 mm)	8.00 x 23.07 in. (203.2 x 586.0 mm)
Square 5" x 5" 13 x 13 cm	4.53 x 4.53 in. (115.0 x 115.0 mm)
12" x 12" (30 x 30 cm)	11.73 x 11.68 in. (298.0 x 296.8 mm)
Hagaki	3.67 x 5.51 in. (93.2 x 140.0 mm)
Hagaki 2	7.61 x 5.51 in. (193.2 x 140.0 mm)

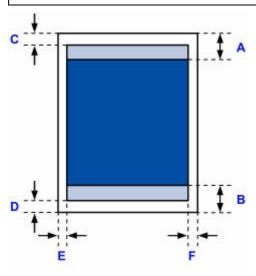

Recommended printing area

A: 1.34 in. (34.0 mm)

B: 1.46 in. (37.0 mm)

Printable area

Letter, Legal

C: 0.12 in. (3.0 mm)

D: 0.20 in. (5.0 mm)

E: 0.25 in. (6.4 mm)

F: 0.25 in. (6.3 mm)

Square 5" x 5" 13 x 13 cm

C: 0.24 in. (6.0 mm)

D: 0.24 in. (6.0 mm)

E: 0.24 in. (6.0 mm)

F: 0.24 in. (6.0 mm)

Other than Letter, Legal or Square 5" x 5" 13 x 13 cm

C: 0.12 in. (3.0 mm)

D: 0.20 in. (5.0 mm)

E: 0.13 in. (3.4 mm)

F: 0.13 in. (3.4 mm)

Sizes for 0.98 inch (25 mm) Margin Paper


When art paper with 0.98 in. (25 mm) margins is selected, the printer is restricted from printing in the top and bottom 0.98 in. (25 mm) of the paper. We therefore recommend checking the printing area in the preview screen before printing.

If the print head is rubbing against the top and bottom edges of the paper, causing smudging, you can avoid this by using 0.98 in. (25 mm) margin paper.

When you are using the following paper, the printer prints to paper sizes with 0.98 in. (25 mm) margins depending on print settings. To print to other page sizes, remove restrictions on margins.

- Matte Photo Paper <MP-101>
- Photo Paper Pro Premium Matte <PM-101>
- Premium Fine Art Smooth <FA-SM1>
- Premium Fine Art Rough <FA-RG1>
- ➡ Print Options dialog box (Windows)
- → Advanced Paper Settings (macOS)

Size	Printable Area (width x height)
Letter (0.98 in. (25 mm) margin)	8.00 x 9.03 in. (203.2 x 229.4 mm)
11" x 17" (28 x 43 cm) (0.98 in. (25 mm) margin)	10.73 x 15.03 in. (272.6 x 381.8 mm)
A4 (0.98 in. (25 mm) margin)	8.00 x 9.72 in. (203.2 x 247.0 mm)
A3 (0.98 in. (25 mm) margin)	11.43 x 14.57 in. (290.2 x 370.0 mm)
A3+ (0.98 in. (25 mm) margin)	12.69 x 17.05 in. (322.2 x 433.0 mm)
8.27 x 23.39 in. (210 x 594 mm) (0.98 in. (25 mm) margin)	8.00 x 21.42 in. (203.2 x 544.0 mm)

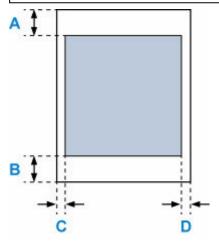

Printable area

Letter

A: 0.98 in. (25.0 mm)

B: 0.98 in. (25.0 mm)

C: 0.25 in. (6.4 mm)

D: 0.25 in. (6.3 mm)

Other than Letter

A: 0.98 in. (25.0 mm)


B: 0.98 in. (25.0 mm)

C: 0.13 in. (3.4 mm)

D: 0.13 in. (3.4 mm)

Printable Discs

The printing area of the printable disc is from 0.67 in. (17 mm) of the internal diameter to 0.04 in. (1 mm) from the external diameter of the printing surface.

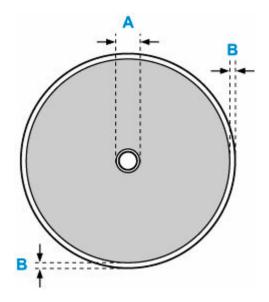

Printable area

A: 0.67 in. (17.0 mm)

B: 0.04 in. (1.0 mm)

Appendix

- ➤ Online Manual
- ➤ Symbols Used in This Document
- ▶ Trademarks
- **▶** Licenses

Online Manual

Models used in illustrations and videos in this manual, may differ from your model.

Screenshots in This Manual

For Windows:

The screenshots used in this manual are taken with Windows 10.

For macOS:

The screenshots used in this manual are taken with macOS Ventura 13.