

Dell Pro 24 All-in-One Plus QB24250

Owner's Manual

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

| | |
|--|-----------|
| Chapter 1: Views of Dell Pro 24 All-in-One Plus QB24250..... | 7 |
| Right..... | 7 |
| Left..... | 8 |
| Front..... | 9 |
| Retractable camera | 10 |
| Bottom..... | 12 |
| Back panel..... | 13 |
| Service Tag..... | 14 |
| Chapter 2: Set up your computer..... | 15 |
| Chapter 3: Specifications of Dell Pro 24 All-in-One Plus QB24250..... | 20 |
| Dimensions and weight..... | 20 |
| Processor..... | 20 |
| Chipset..... | 21 |
| Operating system..... | 22 |
| Memory..... | 22 |
| External ports and slots..... | 23 |
| Internal slots..... | 23 |
| Ethernet..... | 24 |
| Wireless module..... | 24 |
| Audio..... | 24 |
| Storage..... | 25 |
| Media-card reader..... | 25 |
| Camera..... | 26 |
| Power ratings..... | 26 |
| Power supply connector..... | 27 |
| Display..... | 27 |
| GPU—Integrated..... | 28 |
| GPU—Discrete..... | 28 |
| Hardware security..... | 29 |
| Environmental..... | 29 |
| Regulatory compliance..... | 29 |
| Operating and storage environment..... | 30 |
| Chapter 4: Working inside your computer..... | 31 |
| Safety instructions..... | 31 |
| Before working inside your computer..... | 31 |
| Safety precautions..... | 32 |
| Electrostatic discharge—ESD protection..... | 32 |
| ESD Field Service kit | 33 |
| Transporting sensitive components..... | 34 |
| After working inside your computer..... | 34 |
| BitLocker..... | 34 |

| | |
|--|-----------|
| Recommended tools..... | 34 |
| Screw list..... | 35 |
| Major components of your Dell Pro 24 All-in-One Plus QB24250..... | 36 |
| Chapter 5: Removing and installing Customer Replaceable Units (CRUs)..... | 39 |
| Stand..... | 39 |
| Removing the stand..... | 39 |
| Installing the stand..... | 40 |
| Back cover..... | 42 |
| Removing the back cover..... | 42 |
| Installing the back cover..... | 42 |
| Memory..... | 43 |
| Removing the memory..... | 43 |
| Installing the memory..... | 44 |
| Graphics-card assembly..... | 45 |
| Removing the graphics-card assembly..... | 45 |
| Installing the graphics-card assembly..... | 47 |
| System-board shield..... | 48 |
| Removing the system-board shield..... | 48 |
| Installing the system-board shield..... | 49 |
| Wireless card..... | 50 |
| Removing the wireless card..... | 50 |
| Installing the wireless card..... | 51 |
| Solid-state drive in M.2 slot 0..... | 53 |
| Removing the M.2 2230 solid-state drive in M.2 slot 0..... | 53 |
| Installing the M.2 2230 solid-state drive in M.2 slot 0..... | 53 |
| Removing the M.2 2280 solid-state drive in M.2 slot 0..... | 54 |
| Installing the M.2 2280 solid-state drive in M.2 slot 0..... | 55 |
| Location of the screw mount on M.2 slot 0..... | 56 |
| Solid-state drive in M.2 slot 1..... | 57 |
| Removing the M.2 2230 solid-state drive in M.2 slot 1..... | 57 |
| Installing the M.2 2230 solid-state drive in M.2 slot 1..... | 58 |
| Removing the M.2 2280 solid-state drive in M.2 slot 1..... | 59 |
| Installing the M.2 2280 solid-state drive in M.2 slot 1..... | 60 |
| Location of the screw mount on M.2 slot 1..... | 61 |
| Coin-cell battery..... | 62 |
| Removing the coin-cell battery..... | 62 |
| Installing the coin-cell battery..... | 63 |
| I/O cover..... | 64 |
| Removing the I/O cover..... | 64 |
| Installing the I/O cover..... | 65 |
| Bottom cover..... | 66 |
| Removing the bottom cover..... | 66 |
| Installing the bottom cover..... | 67 |
| Retractable-camera assembly..... | 67 |
| Removing the retractable-camera assembly..... | 67 |
| Installing the retractable-camera assembly..... | 68 |
| Fan..... | 69 |
| Removing the fan..... | 69 |
| Installing the fan..... | 70 |

| | |
|---|-----------|
| Power-supply unit..... | 71 |
| Removing the power-supply unit..... | 71 |
| Installing the power-supply unit..... | 72 |
| Chapter 6: Removing and installing Field Replaceable Units (FRUs)..... | 74 |
| Power-supply fan..... | 74 |
| Removing the power-supply fan..... | 74 |
| Installing the power-supply fan..... | 75 |
| I/O bracket..... | 77 |
| Removing the I/O bracket..... | 77 |
| Installing the I/O bracket..... | 77 |
| Speakers..... | 78 |
| Removing the speakers..... | 78 |
| Installing the speakers..... | 79 |
| Heat sink..... | 80 |
| Removing the heat sink..... | 80 |
| Installing the heat sink..... | 81 |
| Processor..... | 82 |
| Removing the processor..... | 82 |
| Installing the processor..... | 83 |
| System board..... | 84 |
| Removing the system board..... | 84 |
| Installing the system board..... | 87 |
| Power-button and I/O board..... | 91 |
| Removing the power-button and I/O board..... | 91 |
| Installing the power-button and I/O board..... | 92 |
| Audio board..... | 93 |
| Removing the audio board..... | 93 |
| Installing the audio board..... | 94 |
| Display-assembly base..... | 95 |
| Removing the display-assembly base..... | 95 |
| Installing the display-assembly base..... | 96 |
| Chapter 7: Software..... | 98 |
| Operating system..... | 98 |
| Drivers and downloads..... | 98 |
| Chapter 8: BIOS Setup..... | 99 |
| Entering BIOS Setup program..... | 99 |
| Navigation keys..... | 99 |
| F12 One Time Boot menu..... | 99 |
| System setup options..... | 100 |
| Updating the BIOS..... | 111 |
| Updating the BIOS in Windows..... | 111 |
| Updating the BIOS in Linux and Ubuntu..... | 111 |
| Updating the BIOS using the USB drive in Windows..... | 111 |
| Updating the BIOS from the One-Time boot menu..... | 112 |
| System and setup password..... | 113 |
| Assigning a System Setup password..... | 113 |

| | |
|---|------------|
| Deleting or changing an existing system password or setup password..... | 113 |
| Clearing CMOS settings..... | 114 |
| Clearing system and setup passwords..... | 114 |
| Chapter 9: Troubleshooting..... | 115 |
| Dell SupportAssist Pre-boot System Performance Check diagnostics..... | 115 |
| Running the SupportAssist Pre-Boot System Performance Check..... | 115 |
| Power-Supply Unit Built-in Self-Test | 115 |
| System-diagnostic lights..... | 115 |
| Recovering the operating system..... | 116 |
| Real-Time Clock—RTC reset..... | 116 |
| Backup media and recovery options..... | 117 |
| Network power cycle..... | 117 |
| Chapter 10: Getting help and contacting Dell..... | 118 |

Views of Dell Pro 24 All-in-One Plus QB24250

Right



Figure 1. Right view

1. USB 3.2 Gen 2 (10 Gbps) port with PowerShare

Connect devices such as external storage devices, printers, and external displays. Provides a data transfer speed of up to 10 Gbps.

Supports Power Delivery that enables two-way power supply between devices. Provides up to 10 W power output that enables faster charging.

NOTE: PowerShare enables you to charge your USB devices even when your computer is turned off.

NOTE: If a USB device is connected to the PowerShare port before the computer is turned off or in hibernate state, you must disconnect and connect it again to enable charging.

Left



Figure 2. Left view

1. Storage drive activity light

The activity light turns on when the computer reads from or writes to storage drives.

2. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

Front



Figure 3. Front view

1. Left microphone

Provides digital sound input for audio recording and voice calls.

2. Right microphone

Provides digital sound input for audio recording and voice calls.

3. Retractable camera

Enables you to video-chat, capture photos, and record videos. To protect your privacy, this camera can be retracted when it is not in use.

4. Right speaker

Provides audio output.

5. Left speaker

Provides audio output.

Retractable camera

Locating the retractable camera

NOTE: To access your retractable camera, press down on the retractable camera located at the top of your computer. To conceal your retractable camera and protect your privacy, press down on the retractable camera until it clicks into place.



Figure 4. Locating the retractable camera

NOTE: Depending on the configuration ordered your computer may have a 5MP RGB + Infrared camera or a FHD RGB camera.

5MP RGB + Infrared camera

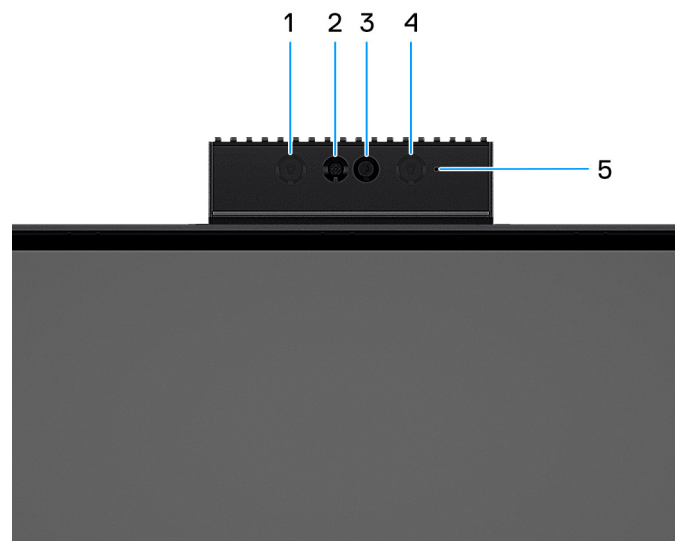


Figure 5. Retractable camera with a 5MP RGB + Infrared camera

1. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

2. Infrared camera

Enhances security when paired with Windows Hello face authentication.

3. Camera

Enables you to video chat, capture photos, and record videos.

4. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

5. Camera-status light

Turns on when the camera is in use.

FHD RGB camera

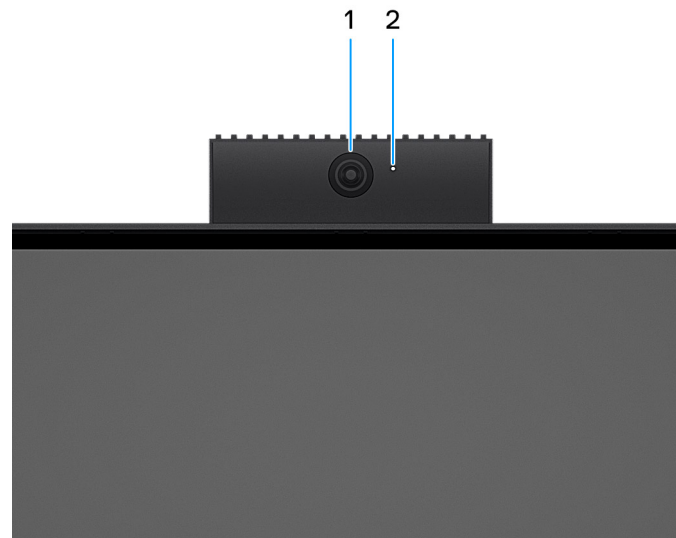


Figure 6. Retractable camera with FHD RGB camera

1. Camera

Enables you to video chat, capture photos, and record videos.

2. Camera-status light

Turns on when the camera is in use.

Bottom

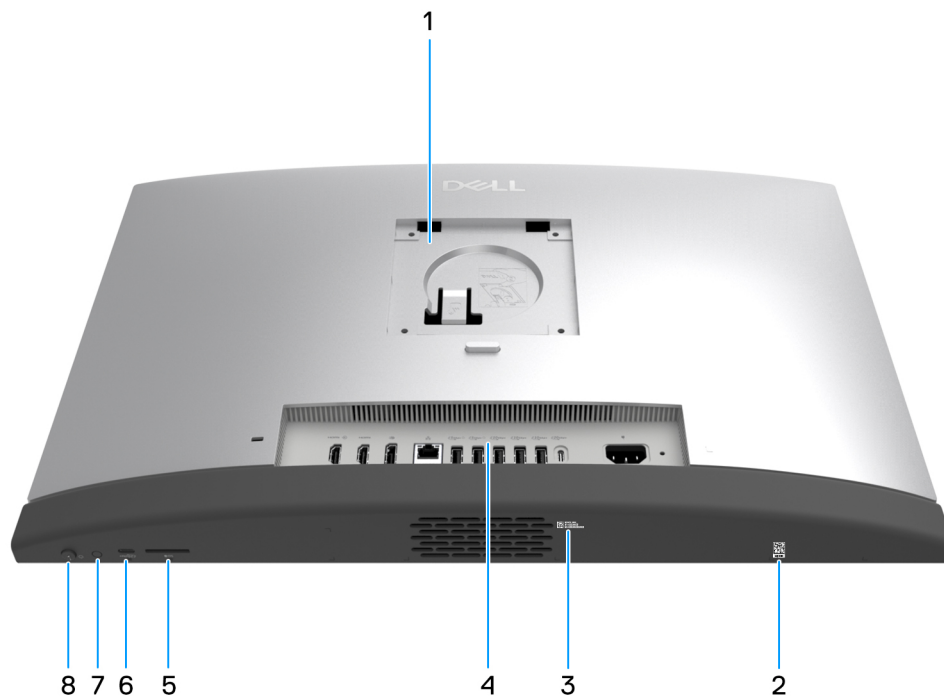


Figure 7. Bottom view

1. Stand/VESA mount location

Enables to install a 100 mm x 100 mm screw-pitch VESA connection for use in standard environmental conditions, or one of the stands offered by Dell for your computer.

2. MyDell QR code

MyDell is your hub for content personalized to your Dell Pro 24 All-in-One Plus QB24250, including videos, articles, manuals, and easy access to support.

3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

4. Back panel

Connect USB, audio, video, and other devices.

5. SD-card slot

Insert an SD card to read from and write to the SD card.

6. USB 3.2 Gen 2x2 (20 Gbps) Type-C port

Connect devices such as external storage devices and printers. Provides a data transfer rate of up to 20 Gbps.

7. Display Built-in Self Test (BIST)/Display input button


Press and hold this button until your computer initiates the Built-in Self Test (BIST).

Press to switch display input to and from the device connected to the HDMI-in port on the back panel.

8. Power button

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

 **NOTE:** You can customize the power-button behavior in Windows.

Back panel

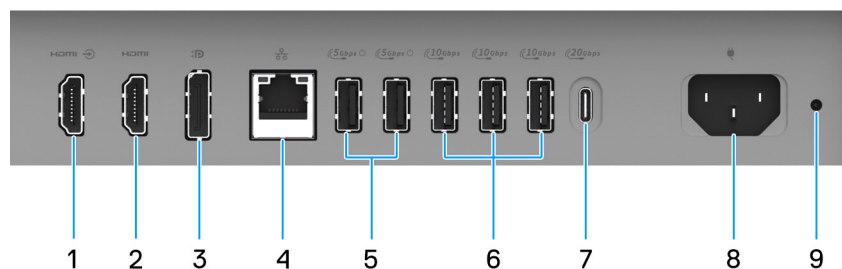


Figure 8. Back panel

1. HDMI-in 1.4 FHD/ HDCP 1.4 port

Connect a gaming console, Blu-ray player, or other HDMI-out enabled device.

2. HDMI-out 2.1 TMDS 4k/ HDCP2.3 port

Connect to a TV, external display, or another HDMI-in enabled device. Provides video and audio output and supports video output of up to 4096 x 2160 at 60 Hz.

3. DisplayPort++ 1.4a HBR3/ HDCP 2.3 port

Connect an external display or a projector. Can support video output of up to 5120 x 3200 at 60 Hz.

4. RJ45 ethernet port (1 Gbps)

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

5. USB 3.2 Gen 1 (5 Gbps) ports with SmartPower On

Connect devices such as external storage devices and printers. Provides a data transfer speed of up to 5 Gbps.

NOTE: When USB wake is enabled in the BIOS, the computer powers on or wakes from hibernation whenever a USB mouse or keyboard that is connected to this port is used.

6. USB 3.2 Gen 2 (10 Gbps) ports

Connect devices such as external storage devices and printers. Provides a data transfer speed of up to 10 Gbps.

7. USB 3.2 Gen 2x2 (20 Gbps) Type-C port

Connect devices such as external storage devices and printers. Provides a data transfer speed of up to 20 Gbps.

8. Power-cable connector

Connect a power cable to provide power to your computer.

9. Power-supply diagnostics light

Indicates the power-supply state.

Service Tag

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

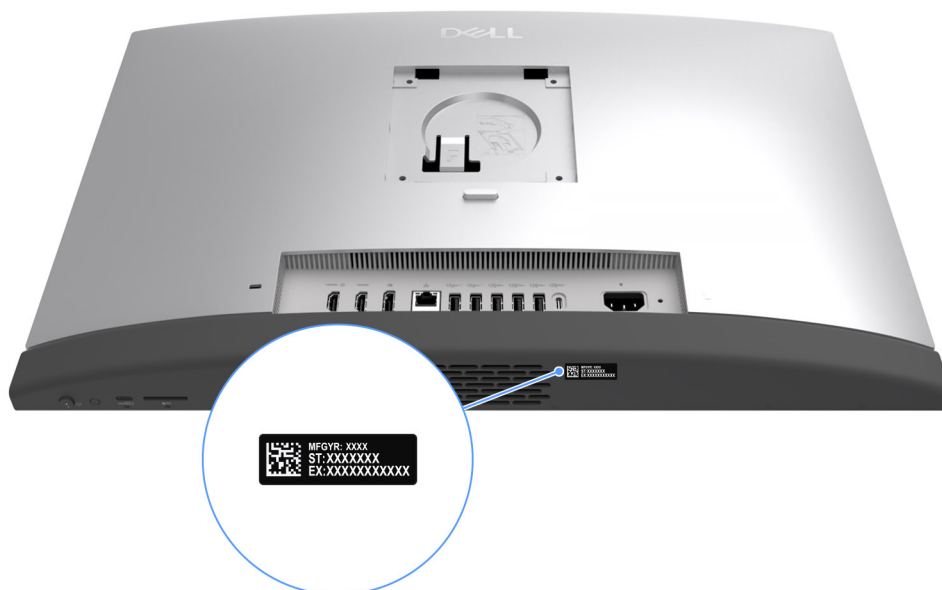


Figure 9. Service tag location of your Dell Pro 24 All-in-One Plus QB24250

Set up your computer

Steps

1. Connect the stand base to the stand.

NOTE: You can use these instructions to install any of the stand configurations offered on your computer.

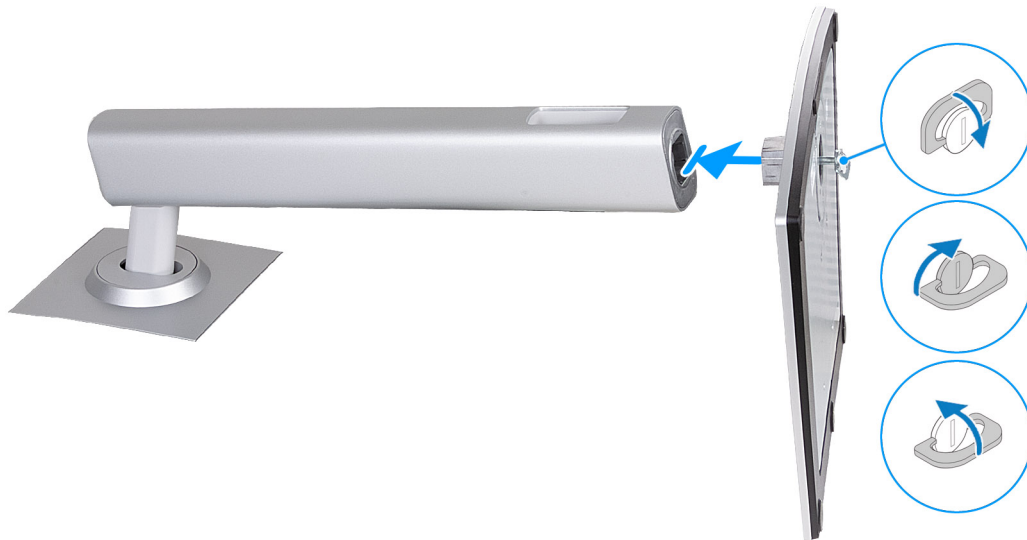


Figure 10. Installing the stand base

2. Insert the stand into the slot on the back cover and press downwards until it snaps into place.

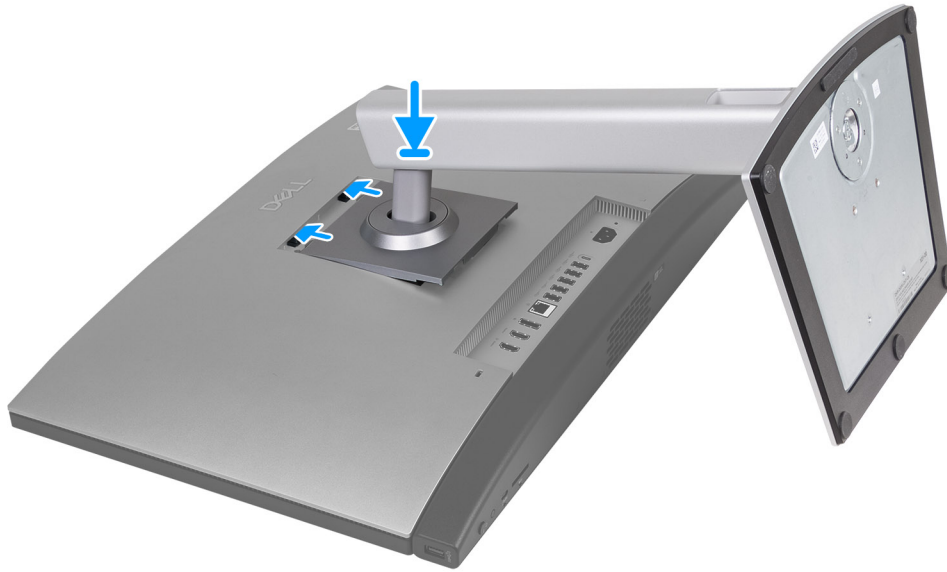


Figure 11. Installing the stand

3. Set up the keyboard and mouse.

i **NOTE:** For setup instructions, see the documentation shipped with the keyboard and mouse.

4. Connect the power cable.



Figure 12. Connecting the power cable

5. Press the power button to turn on your computer.



Figure 13. Pressing the power button

6. Finish the operating system setup.

For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, see the knowledge base articles at [Dell Support Site](#).

For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell Technologies recommends that you:

- Connect to a network for Windows updates.

NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.






- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.

NOTE: Depending on the version of Windows installed, an internet connection may be required to set up your computer in order to sign-in to your Microsoft account or to create a Microsoft account.

- On the **Support and Protection** screen, enter your contact details.

7. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 1. Locate Dell apps


| Resources | Description |
|--|---|
|  | <p>Dell Optimizer is an application designed to enhance computer performance and productivity by optimizing settings for power, battery, display, collaboration touchpad, and presence detection. It also provides access to applications purchased with your new computer.</p> <p>For more information, see Dell Optimizer User's Guide at Dell Support Site.</p> |
|  | <p>Dell Product Registration</p> <p>Register your computer with Dell.</p> |
|  | <p>Dell Help & Support</p> <p>Access help and support for your computer.</p> |
|  | <p>SupportAssist</p> <p>SupportAssist is a proactive and predictive technology that offers automated technical support for Dell computers. It proactively monitors both hardware and software, addressing performance issues, preventing security threats, and automating engagement with Dell Technical Support.</p> <p>For more information, see SupportAssist documentation at Dell Support Site.</p> <p> NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p> |

Specifications of Dell Pro 24 All-in-One Plus QB24250

Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro 24 All-in-One Plus QB24250.



Table 2. Dimensions and weight

| Description | Values |
|--|---|
| Height: | |
| Front height | 354.30 mm (13.95 in.) |
| Rear height | 354.30 mm (13.95 in.) |
| Width | 540 mm (21.26 in.) |
| Depth | 57.90 mm (2.28 in.) |
| Weight  NOTE: The weight of your computer depends on the configuration that is ordered. | <ul style="list-style-type: none">• Minimum (Fixed stand): 7.92 kg (17.45 lb)• Maximum (Fixed stand): 8.76 kg (19.30 lb)• Minimum (HAS stand): 8.89 kg (19.59 lb)• Maximum (HAS stand): 9.73 kg (21.44 lb)• Minimum (without stand): 6.02 kg (13.26 lb)• Maximum (without stand): 6.86 kg (15.11 lb) |

Processor

The following table lists the details of the processors supported by your Dell Pro 24 All-in-One Plus QB24250.

Table 3. Processor

| Description | | Option one | Option two | Option three | Option four |
|---|--------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| Processor type | | Intel Core Ultra 5 235 vPro | Intel Core Ultra 5 245 vPro | Intel Core Ultra 7 265 vPro | Intel Core Ultra 9 285 vPro |
| Processor wattage | | 65 W | 65 W | 65 W | 65 W |
| Processor total core count | | 14 | 14 | 20 | 24 |
| Performance-cores | | 6 | 6 | 8 | 8 |
| Efficient-cores | | 8 | 8 | 12 | 16 |
| Processor total thread count | | 14 | 14 | 20 | 24 |
|  NOTE: Intel Hyper-Threading Technology is only available on Performance-cores. | | | | | |
| Processor speed | | Up to 5.00 GHz | Up to 5.10 GHz | Up to 5.30 GHz | Up to 5.60 GHz |
| Performance-cores frequency | | | | | |
| | Processor base frequency | 3.40 GHz | 3.50 GHz | 2.40 GHz | 2.50 GHz |
| | Maximum turbo frequency | 5.00 GHz | 5.10 GHz | 5.30 GHz | 5.60 GHz |
| Efficient-cores frequency | | | | | |
| | Processor base frequency | 2.90 GHz | 3.00GHz | 1.80 GHz | 1.90 GHz |
| | Maximum turbo frequency | 4.40 GHz | 4.50 GHz | 4.60 GHz | 4.60 GHz |
| Processor cache | | 24 MB | 24 MB | 30 MB | 36 MB |
| Integrated graphics | | Intel Graphics | Intel Graphics | Intel Graphics | Intel Graphics |
| AI technology | | Intel AI Boost | Intel AI Boost | Intel AI Boost | Intel AI Boost |
| Neural Processing Unit (NPU) performance | | Up to 13 TOPS | Up to 13 TOPS | Up to 13 TOPS | Up to 13 TOPS |
|  NOTE: Tera Operations Per Second (TOPS) is an AI performance metric that measures how many trillions of operations per second an AI processor can perform. | | | | | |

Chipset

The following table lists the details of the chipset that is supported by your Dell Pro 24 All-in-One Plus QB24250.

Table 4. Chipset

| Description | Values |
|-------------|------------------------|
| Chipset | Intel Q870 |
| Processor | Intel Core Ultra 5/7/9 |

Table 4. Chipset (continued)

| Description | Values |
|----------------|---------------|
| DRAM bus width | 64-bit |
| Flash EPROM | 32 MB + 32 MB |
| PCIe bus | Up to Gen4 |

Operating system

Your Dell Pro 24 All-in-One Plus QB24250 supports the following operating systems:

- Windows 11 Home
- Windows 11 Professional
- Windows 11 Pro National Academic
- Ubuntu Linux 24.04 LTS

Memory

The following table lists the memory specifications that are supported by your Dell Pro 24 All-in-One Plus QB24250.

Table 5. Memory specifications

| Description | Values |
|---------------------------------|---|
| Memory slots | Two SoDIMM slots |
| Memory type | DDR5 |
| Memory speed | <ul style="list-style-type: none">• up to 6400 MT/s• up to 5600 MT/s |
| Maximum memory configuration | 64 GB |
| Minimum memory configuration | 8 GB |
| Memory size per slot | 8 GB, 16 GB, or 32 GB |
| Memory configurations supported | <ul style="list-style-type: none">• 8 GB: 1 x 8 GB, DDR5, 5600 MT/s, SoDIMM, single-channel• 16 GB: 2 x 8 GB, DDR5, 5600 MT/s, SoDIMM, dual-channel• 16 GB: 1 x 16 GB, DDR5, 5600 MT/s, SoDIMM, single-channel• 32 GB: 2 x 16 GB, DDR5, 5600 MT/s, SoDIMM, dual-channel• 32 GB: 1 x 32 GB, DDR5, 5600 MT/s, SoDIMM, single-channel• 64 GB: 2 x 32 GB, DDR5, 5600 MT/s, SoDIMM, dual-channel• 8 GB: 1 x 8 GB, DDR5, 6400 MT/s, SoDIMM, single-channel• 16 GB: 2 x 8 GB, DDR5, 6400 MT/s, SoDIMM, dual-channel• 16 GB: 1 x 16 GB, DDR5, 6400 MT/s, SoDIMM, single-channel |

Table 5. Memory specifications (continued)

| Description | Values |
|-------------|---|
| | <ul style="list-style-type: none"> 32 GB: 2 x 16 GB, DDR5, 6400 MT/s, SoDIMM, dual-channel |

External ports and slots

The following table lists the external ports and slots of your Dell Pro 24 All-in-One Plus QB24250.


Table 6. External ports and slots

| Description | Values |
|---------------------|--|
| Network port | One RJ45 ethernet port (1 Gbps) |
| USB ports | <ul style="list-style-type: none"> One USB 3.2 Gen 2 (10 Gbps) port with PowerShare One USB 3.2 Gen 2x2 (20 Gbps) Type-C port Three USB 3.2 Gen 2 (10 Gbps) ports Two USB 3.2 Gen 1 (5 Gbps) ports with SmartPower On One USB 3.2 Gen 2x2 (20 Gbps) Type-C port |
| Audio port | One global headset jack |
| Video port(s) | <ul style="list-style-type: none"> One DisplayPort++ 1.4a HBR3/HDCP 2.3 port One HDMI-out 2.1 TMDS 4k/HDCP 2.3 port One HDMI-in 1.4 FHD/HDCP 1.4 port |
| Media-card reader | One SD-card 4.0 slot |
| Power-adaptor port | One power-cable connector |
| Security-cable slot | One security-cable slot (3 mm x 7 mm, T-Bar design) |

Internal slots

The following table lists the internal slots on your Dell Pro 24 All-in-One Plus QB24250.

Table 7. Internal slots

| Description | Values |
|-------------|---|
| M.2 | <ul style="list-style-type: none"> One M.2 2230 slot for Wi-Fi and Bluetooth combo card Two M.2 2230/2280 slots for solid-state drive <p> NOTE: To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at Dell Support Site.</p> |
| SATA | NA |

Ethernet

The following table lists the wired ethernet Local Area Network (LAN) specifications of your Dell Pro 24 All-in-One Plus QB24250.

Table 8. Ethernet specifications

| Description | Values |
|---------------|------------------|
| Model | Intel i219-LM |
| Transfer rate | 10/100/1000 Mbps |

Wireless module

The following table lists the Wireless Local Area Network (WLAN) modules that are supported on your Dell Pro 24 All-in-One Plus QB24250.

Table 9. Wireless module specifications

| Description | Option one | Option two |
|---------------------------|---|--|
| Model number | Intel Wi-Fi 6E AX211 | Intel Wi-Fi 7 BE200 |
| Transfer rate | Up to 2400 Mbps | Up to 5760 Mbps |
| Frequency bands supported | 2.4 GHz/5 GHz/6 GHz | 2.4 GHz/5 GHz/6 GHz |
| Wireless standards | <ul style="list-style-type: none">• Wi-Fi 802.11a/b/g• Wi-Fi 4 (Wi-Fi 802.11n)• Wi-Fi 5 (Wi-Fi 802.11ac)• Wi-Fi 6E (Wi-Fi 802.11ax) | <ul style="list-style-type: none">• Wi-Fi 802.11a/b/g• Wi-Fi 4 (Wi-Fi 802.11n)• Wi-Fi 5 (Wi-Fi 802.11ac)• Wi-Fi 6 (Wi-Fi 802.11ax)• Wi-Fi 7 (Wi-Fi 802.11be) |
| Encryption | <ul style="list-style-type: none">• 64-bit/128-bit WEP• AES-CCMP• TKIP | <ul style="list-style-type: none">• 64-bit/128-bit WEP• AES-CCMP• TKIP |
| Bluetooth wireless card | Bluetooth 5.3 | Bluetooth 5.4 |
| | <div><div></div><div>NOTE: The functionality of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.</div></div> | |

Audio

The following table lists the audio specifications of your Dell Pro 24 All-in-One Plus QB24250.

Table 10. Audio specifications

| Description | Values |
|--------------------------|---------------------------------------|
| Audio controller | Realtek ALC3289 |
| Stereo conversion | Supported |
| Internal audio interface | High Definition Audio (HDA) interface |
| External audio interface | One global headset jack |

Table 10. Audio specifications (continued)

| Description | | Values |
|----------------------------|---------|--|
| Number of speakers | | Two stereo speakers |
| Internal-speaker amplifier | | Supported |
| External volume controls | | Not applicable |
| Speaker output: | | |
| | Average | 5 W x 2 = 10 W |
| Microphone | | Two microphones in the retractable-camera assembly |

Storage

This section lists the storage options on your Dell Pro 24 All-in-One Plus QB24250.

Your Dell Pro 24 All-in-One Plus QB24250 supports a combination of the following storage configurations:

- One M.2 2230/2280 solid-state drive
- Up to two M.2 2230/2280 solid-state drives

The primary drive of your Dell Pro 24 All-in-One Plus QB24250 varies with the storage configuration. For computers, with a M.2 drive, the M.2 drive is the primary drive.


Table 11. Storage specifications

| Storage type | Interface type | Capacity |
|----------------------------|-------------------------------|--------------|
| M.2 2230 Solid State Drive | PCIe Gen4 NVMe, up to 64 Gbps | Up to 512 GB |
| M.2 2280 Solid State Drive | PCIe Gen4 NVMe, up to 64 Gbps | Up to 2 TB |

Media-card reader

The following table provides the specification of media cards that are supported by your Dell Pro 24 All-in-One Plus QB24250.

Table 12. Media-card reader specifications

| Description | Values |
|---|---|
| Media-card slot type | One SD-card 4.0 slot |
| Media-cards supported | <ul style="list-style-type: none">• Secure Digital (SD)• Secure Digital High Capacity (SDHC)• Secure Digital Extended Capacity (SDXC) |
|  NOTE: The maximum capacity that is supported by the media-card reader varies depending on the standard of the media card that is installed on your computer. | |

Camera

The following table lists the camera specifications of your Dell Pro 24 All-in-One Plus QB24250.

Table 13. Camera specifications

| Description | | Values |
|-----------------------------|-----------------|---|
| Number of cameras | | One |
| Camera type | | <ul style="list-style-type: none"> FHD RGB camera 5MP RGB + Infrared camera, ExpressSign-in with Presence Detection and Intelligent Privacy |
| Camera location | | Retractable camera located at the top of the computer |
| Camera sensor type | | CMOS sensor technology |
| Camera resolution: | | |
| | Still image | <ul style="list-style-type: none"> FHD RGB Camera: 2.07 megapixels 5MP RGB Camera: 5.18 megapixels |
| | Video | <ul style="list-style-type: none"> FHD RGB Camera: 1920 x 1080 (FHD) at 30 fps 5MP RGB Camera: 2880 x 1800 (5MP) at 30 fps |
| Infrared camera resolution: | | |
| | Still image | 0.23 megapixel, only on computers with an infrared camera |
| | Video | 640 x 360 (nHD) at 30 fps, only on computers with an infrared camera |
| Diagonal viewing angle: | | |
| | Camera | <ul style="list-style-type: none"> FHD RGB Camera: 82 degrees 5MP RGB Camera: 91.20 degrees |
| | Infrared camera | 77.90 degrees, only on computers with an infrared camera |

Power ratings

The following table lists the power rating specifications of Dell Pro 24 All-in-One Plus QB24250.

Table 14. Power ratings

| Description | Option one | Option two |
|-----------------------------|---|---|
| Type | 160 W internal power supply unit (80PLUS Bronze Certified) | 240 W internal power supply unit (80PLUS Platinum Certified) |
| Input voltage | 90 VAC–264 VAC | 90 VAC–264 VAC |
| Input frequency | 47 Hz–63 Hz | 47 Hz–63 Hz |
| Input current (maximum) | 2.80 A | 3.80 A |
| Output current (continuous) | Operating: <ul style="list-style-type: none"> 19.50 VA: 7 A 19.50 VB: 5 A | Operating: <ul style="list-style-type: none"> 19.50 VA: 8 A 19.50 VB: 9 A |

Table 14. Power ratings (continued)

| Description | | Option one | Option two |
|----------------------|-----------|---|---|
| | | Standby: <ul style="list-style-type: none"> 19.50 VA: 0.50 A 19.50 VB: 1.75 A | Standby: <ul style="list-style-type: none"> 19.50 VA: 0.50 A 19.50 VB: 1.75 A |
| Rated output voltage | | <ul style="list-style-type: none"> 19.50 VA 19.50 VB | <ul style="list-style-type: none"> 19.50 VA 19.50 VB |
| Temperature range: | | | |
| | Operating | 5°C to 42°C (41°F to 107.6°F) | 5°C to 42°C (41°F to 107.6°F) |
| | Storage | -40°C to 70°C (-40°F to 158°F) | -40°C to 70°C (-40°F to 158°F) |

Power supply connector

The following table lists the Power supply connector specifications of your Dell Pro 24 All-in-One Plus QB24250.

Table 15. Power supply connector

| Power supply | Connectors |
|--|--|
| 160 W internal power supply unit (80PLUS Bronze Certified) | <ul style="list-style-type: none"> One 8-pin connector for processor One 6-pin connector for system board One 6-pin connector for control signal One 2-pin connector for LED |
| 240 W internal power supply unit (80PLUS Platinum Certified) | <ul style="list-style-type: none"> One 8-pin connector for processor One 6-pin connector for system board One 6-pin connector for control signal One 2-pin connector for LED |

Display

The following table lists the display specifications of your Dell Pro 24 All-in-One Plus QB24250.

Table 16. Display specifications

| Description | | Option one | Option two |
|---|----------|--|--|
| Display type | | Full High Definition (FHD), ComfortView Plus | Full High Definition (FHD), ComfortView Plus |
| Touch options | | Non-touch | Touch |
| Display-panel technology | | In-Plane Switching (IPS) | In-Plane Switching (IPS) |
| Display-panel dimensions (active area): | | | |
| | Height | 296.46 mm (11.67 in.) | 296.46 mm (11.67 in.) |
| | Width | 527.04 mm (20.75 in.) | 527.04 mm (20.75 in.) |
| | Diagonal | 604.70 mm (23.81 in.) | 604.70 mm (23.81 in.) |
| Display-panel native resolution | | 1920 x 1080 | 1920 x 1080 |

Table 16. Display specifications (continued)

| Description | Option one | Option two |
|-----------------------------|--|--|
| Luminance (typical) | 250 nits | 300 nits |
| Megapixels | 2.07 | 2.07 |
| Color gamut | 99% (sRGB) | 99% (sRGB) |
| Pixels Per Inch (PPI) | 92 | 92 |
| Contrast ratio (minimum) | <ul style="list-style-type: none"> 1050:1, minimum 1500:1, typical | <ul style="list-style-type: none"> 700:1, minimum 1000:1, typical |
| Response time (maximum) | <ul style="list-style-type: none"> 20 ms, minimum 14 ms, typical | <ul style="list-style-type: none"> 20 ms, minimum 14 ms, typical |
| Refresh rate | 100 Hz (maximum) | 75 Hz (maximum) |
| Horizontal view angle | <ul style="list-style-type: none"> +/- 85 degrees, minimum +/- 89 degrees, typical | <ul style="list-style-type: none"> +/- 85 degrees, minimum +/- 89 degrees, typical |
| Vertical view angle | <ul style="list-style-type: none"> +/- 85 degrees, minimum +/- 89 degrees, typical | <ul style="list-style-type: none"> +/- 85 degrees, minimum +/- 89 degrees, typical |
| Pixel pitch | 0.27 mm | 0.27 mm |
| Power consumption (maximum) | 15.18 W | 17.26 W |
| Anti-glare vs glossy finish | Anti-glare | Anti-glare |

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro 24 All-in-One Plus QB24250.

Table 17. GPU—Integrated

| Controller | External display support | Memory size | Processor |
|----------------|--|----------------------|------------------------|
| Intel Graphics | <ul style="list-style-type: none"> One DisplayPort++ 1.4a HBR3/HDCP 2.3 port (5120 x 3200@60 Hz) One HDMI-out 2.1 TMDS 4k/HDCP2.3 port (4096 x 2160@60 Hz) | Shared system memory | Intel Core Ultra 5/7/9 |

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Dell Pro 24 All-in-One Plus QB24250.

Table 18. GPU—Discrete

| Controller | Memory size | Memory type |
|--------------------|-------------|-------------|
| AMD Radeon RX 6500 | 4 GB | GDDR6 |

Hardware security

The following table lists the hardware security of your Dell Pro 24 All-in-One Plus QB24250.

Table 19. Hardware security


| Hardware security |
|---|
| Kensington security-cable slot |
| Chassis intrusion switch |
| Trusted Platform Module TPM 2.0 |
| SPI Flash Tamper Detection Circuit |
| FIPs 140-2 certification |
| Dell SafeBIOS including Dell Off-host BIOS Verification |
| BIOS Resilience |
| BIOS Recovery and additional BIOS Controls |
| SafelD including Trusted Platform Module (TPM) 2.0 |
| Self-Encrypting Drives (SED) |
| D-Pedigree (Secure Supply Chain Functionality) |

Environmental

The following table lists the environmental specifications of your Dell Pro 24 All-in-One Plus QB24250.

Table 20. Environmental

| Feature | Values |
|--|--------|
| Recyclable packaging | Yes |
| BFR/PVC-free chassis | Yes |
| Vertical orientation packaging support | Yes |
| Multi-Pack packaging | No |
| Energy-efficient power supply | Yes |
| ENV0424 compliant | Yes |

 **NOTE:** As per the anticipated required criteria for EPEAT 2018/2025, wood-based fiber packaging contains a minimum of 35% recycled content by total weight of wood-based fiber.

Regulatory compliance

The following table lists the regulatory compliance of your Dell Pro 24 All-in-One Plus QB24250.

Table 21. Regulatory compliance


| Regulatory compliance |
|--|
| Product Safety, EMC and Environmental Datasheets |
| Dell Regulatory Compliance Home page |
| Responsible Business Alliance policy |

Operating and storage environment

This table lists the operating and storage specifications of your Dell Pro 24 All-in-One Plus QB24250.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 22. Computer environment

| Description | Operating | Storage |
|---|---|--|
| Temperature range | 10°C to 35°C (50°F to 95°F) | -40°C to 65°C (-40°F to 149°F) |
| Relative humidity (maximum) | 20% to 80% (non-condensing) | 5% to 95% (non-condensing) |
| Vibration (maximum)* | 0.26 GRMS | 1.37 GRMS |
| Shock (maximum) | 40 G† | 105 G† |
| Altitude range | -15.2 m to 3048 m (-49.87 ft to 10000 ft) | -15.2 m to 10668 m (-49.87 ft to 35000 ft) |
|  CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components. | | |










* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

Working inside your computer


Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.



-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that are shipped with the product or at [Dell Regulatory Compliance Home Page](#).
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.
-  **CAUTION:** Press and eject any installed card from the media-card reader.
-  **CAUTION:** Exercise caution when handling rechargeable Li-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.

Before working inside your computer

About this task

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer and all attached devices from their electrical outlet.

5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.

 **CAUTION: To disconnect a network cable, unplug the cable from your computer.**

6. Remove any media card and optical disc from your computer, if applicable.

Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Wear shoes with nonconductive rubber soles to reduce the chance of getting electrocuted.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

Standby power

Dell products with standby power must be unplugged before you open the back cover. Systems that are equipped with standby power are powered while turned off. The internal power enables the computer to be remotely turned on (Wake-on-LAN) and suspended into a sleep mode and has other advanced power management features.

Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.

Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:


- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-

static wrist strap to discharge the static electricity from your body. For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).

- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

 **CAUTION:** It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

Working Environment

Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.


ESD Packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the anti-static mat is not required, or connect to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap before each service, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. To perform the test, plug the bonding-wire of the wrist-strap into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.


 **NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

Lifting equipment


Adhere to the following guidelines when lifting heavy equipment:

 **CAUTION:** Do not lift greater than 50 pounds. Always obtain additional resources or use a mechanical lifting device.

1. Get a firm balanced footing. Keep your feet apart for a stable base, and point your toes out.
2. Tighten stomach muscles. Abdominal muscles support your spine when you lift, offsetting the force of the load.
3. Lift with your legs, not your back.
4. Keep the load close. The closer it is to your spine, the less force it exerts on your back.
5. Keep your back upright, whether lifting or setting down the load. Do not add the weight of your body to the load. Avoid twisting your body and back.
6. Follow the same technique in reverse to set the load down.

After working inside your computer


About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other components that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

BitLocker

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time that you reboot the computer. You will be prompted to enter the recovery key to progress, and the computer displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell computers with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #2
- Plastic scribe

Screw list

NOTE: When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

NOTE: Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

NOTE: Screw color may vary depending on the configuration ordered.

Table 23. Screw list





















| Component | Screw type | Quantity | Screw image |
|---|------------|----------|---|
| Graphics-card shield | M3x5 | 2 |  |
| System-board shield | M3x5 | 6 |  |
| Wireless card | M2x3.5 | 1 |  |
| M.2 2230/2280 solid-state drive in M.2 slot 0 | M2x3.5 | 1 |  |
| M.2 2230/2280 solid-state drive in M.2 slot 1 | M2x3.5 | 1 |  |
| I/O cover | M3x5 | 2 |  |
| Bottom cover | M3x5 | 3 |  |
| Retractable-camera assembly | M3x5 | 4 |  |
| Fan | M3x5 | 3 |  |
| I/O bracket | M3x5 | 2 |  |
| Heat sink | Captive | 5 |  |
| Power-supply unit | M3x5 | 3 |  |
| Power-supply unit connector | M3x5 | 2 |  |

Table 23. Screw list (continued)

| Component | Screw type | Quantity | Screw image |
|-----------------------------------|------------|----------|---|
| Power-supply fan | M3x5 | 2 |  |
| System board | M3x5 | 7 |  |
| | M3x12 | 1 |  |
| Power-button and I/O board shield | M3x5 | 3 |  |
| Power-button and I/O board | M3x5 | 2 |  |
| Audio board shield | M3x5 | 3 |  |
| Audio board | M3x5 | 2 |  |

Major components of your Dell Pro 24 All-in-One Plus QB24250

The following image shows the major components of your Dell Pro 24 All-in-One Plus QB24250.

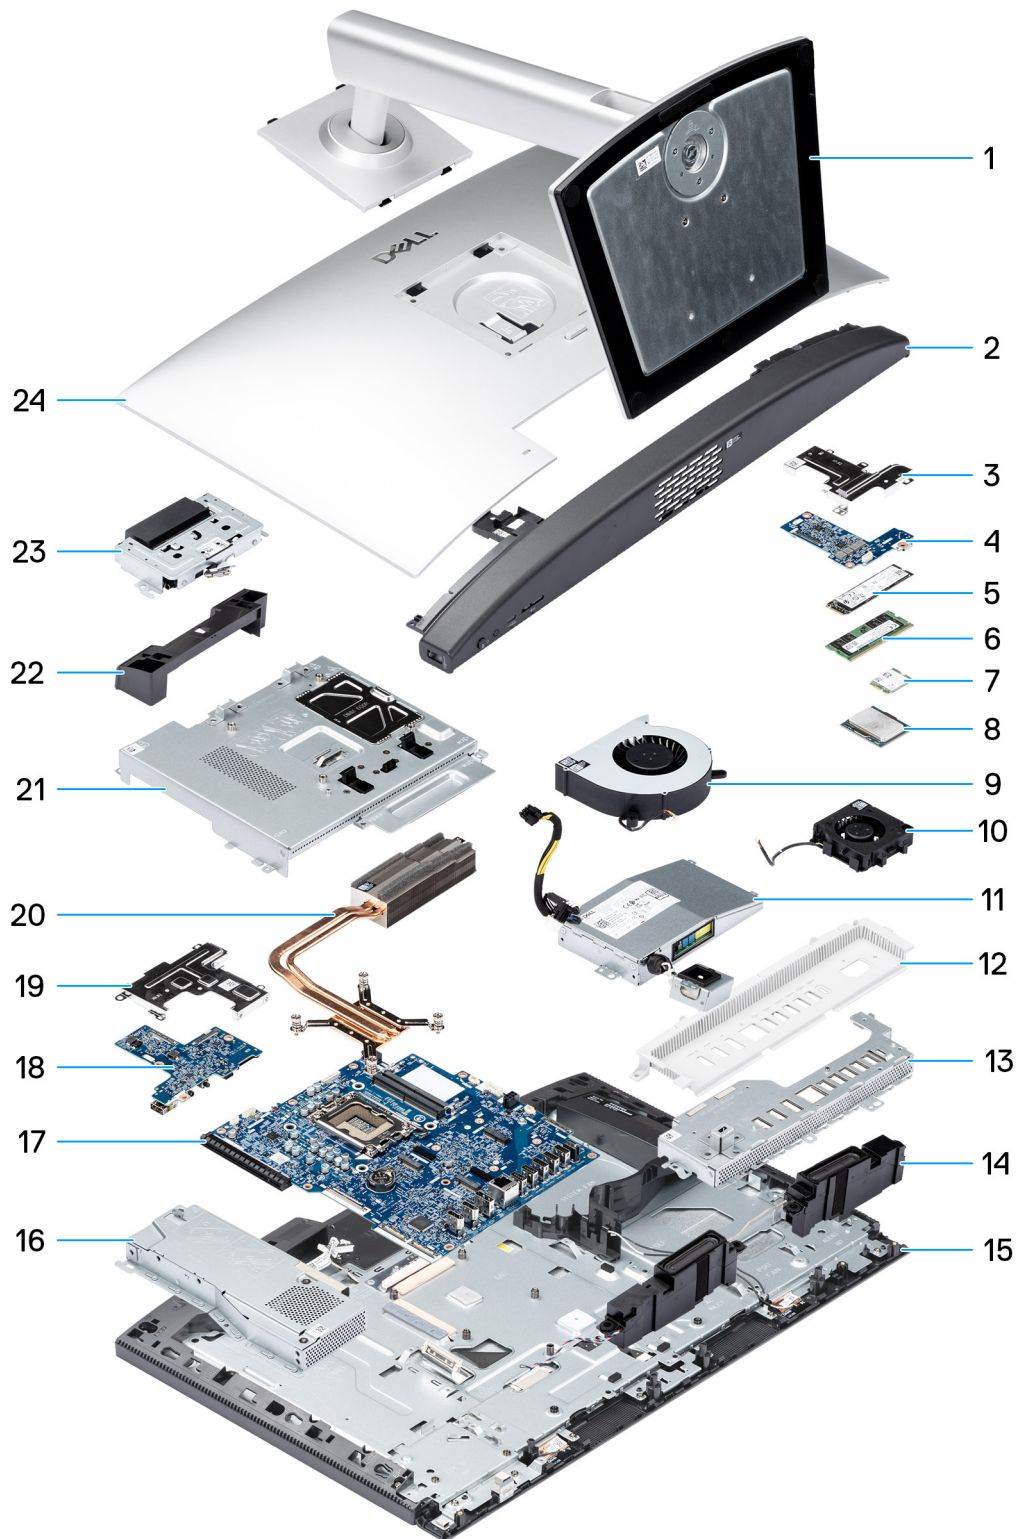



Figure 14. Major components of your Dell Pro 24 All-in-One Plus QB24250

1. Stand
2. Bottom cover
3. Audio board shield
4. Audio board

5. M.2 2280 solid-state drive
6. Memory module
7. Wireless card
8. Processor
9. Fan
10. Power-supply fan
11. Power-supply unit (PSU)
12. I/O cover
13. I/O bracket
14. Speakers
15. Display assembly
16. Graphics-card assembly
17. System board
18. Power-button and I/O board
19. Power-button and I/O board shield
20. Heat sink
21. System board shield
22. Camera-assembly cover
23. Retractable-camera assembly
24. Back cover

 **NOTE:** Dell provides a list of components and their part numbers for the original configuration purchased. These parts are available according to warranty coverage purchased by the customer. Contact your Dell sales representative for purchase options.

Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

CAUTION: Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Stand

Removing the stand

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

About this task

NOTE: Depending on the stand installed on your computer, refer to the corresponding image shown in the procedure.

The following images indicate the location of the stand and provide a visual representation of the removal procedure.



Figure 15. Removing the Height Adjustable Stand (HAS)



Figure 16. Removing the Fixed Stand

Steps

1. Place the display-assembly base on a clean and flat surface.
2. To release the stand, gently press and hold the tab that secures the stand to the display-assembly base.
3. Slide and lift the stand off the display-assembly base.

Installing the stand

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: Depending on the stand you are installing onto your computer, refer to the corresponding image shown in the procedure.

The following images indicate the location of the stand and provide a visual representation of the installation procedure.



Figure 17. Installing the Height Adjustable Stand (HAS)



Figure 18. Installing the Fixed Stand

Steps

1. At an angle, align the tabs on the stand with the slots on the display-assembly base.
2. Slide the tabs on the stand into the slots on the display-assembly base and press downwards until it snaps into place.

Next steps

1. Follow the procedure in [After working inside your computer.](#)

Back cover

Removing the back cover

Prerequisites

1. Follow the procedure in [Before working inside your computer.](#)
2. Remove the [stand](#).

About this task

The following image indicates the location of the back cover and provides a visual representation of the removal procedure.

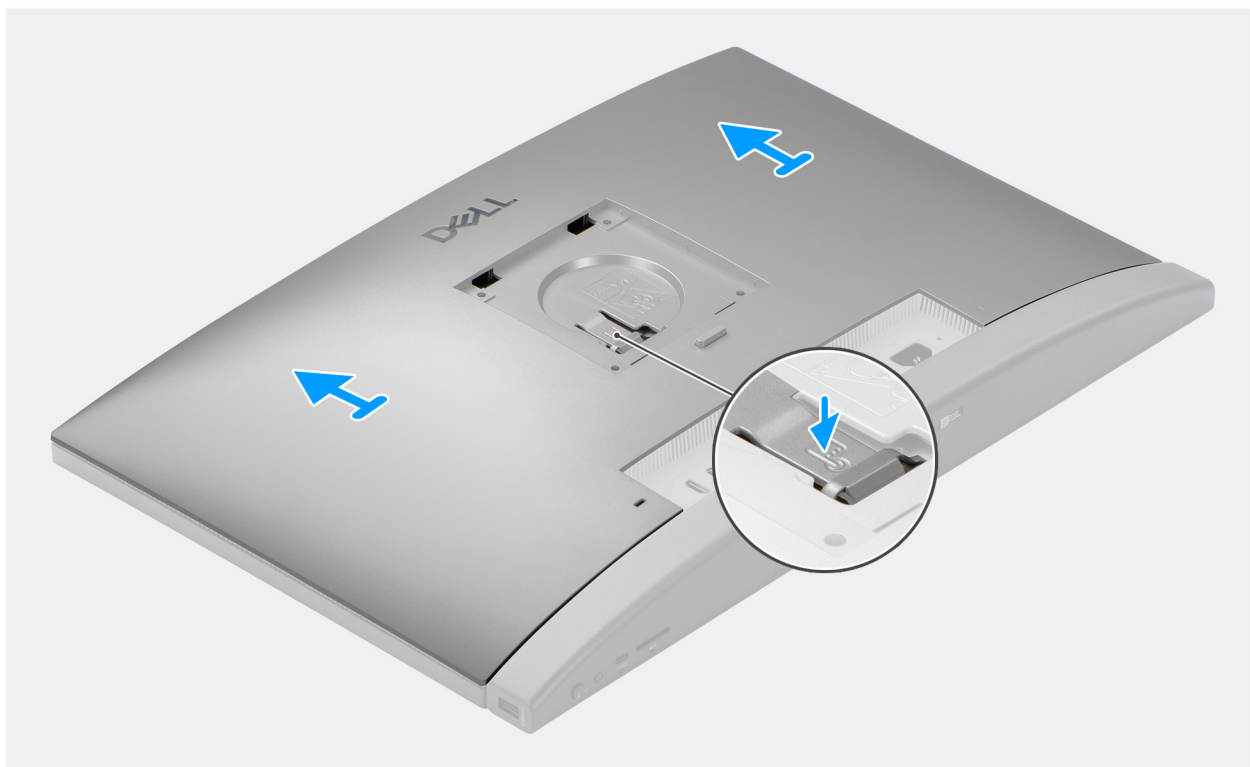


Figure 19. Removing the back cover

Steps

1. Press down on the tab that secures the back cover to the display-assembly base.
2. Slide the back cover upward and lift it off the display-assembly base.

Installing the back cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the back cover and provides a visual representation of the installation procedure.



Figure 20. Installing the back cover

Steps

1. Align the back cover to the display-assembly base.
2. Place and slide the back cover into place on the display assembly base.

Next steps

1. Install the [stand](#).
2. Follow the procedure in [After working inside your computer](#).

Memory

Removing the memory

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).

About this task

The following image indicates the location of the memory and provides a visual representation of the removal procedure.

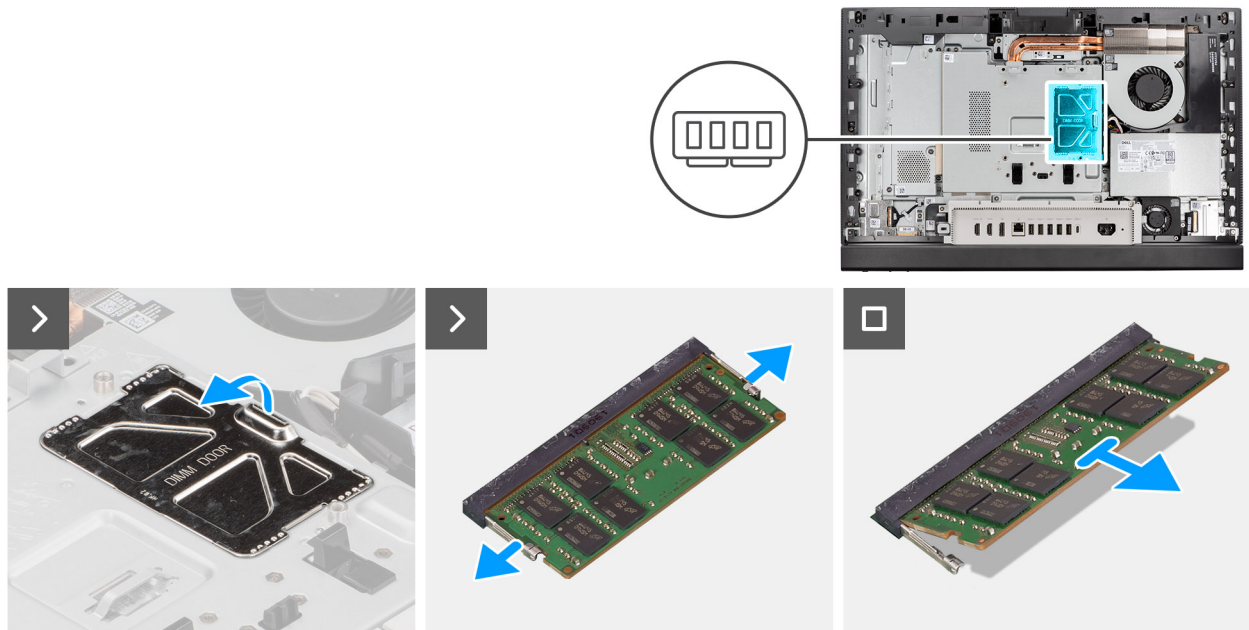


Figure 21. Removing the memory

Steps

1. Using the tab on the DIMM door, pry open and lift the DIMM door on the system-board shield to access the memory slots.
2. Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops out.
3. Remove the memory module from the memory-module slot.

NOTE: Repeat steps 2 to 3 for each memory module installed on your computer.

Installing the memory

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the memory and provides a visual representation of the installation procedure.

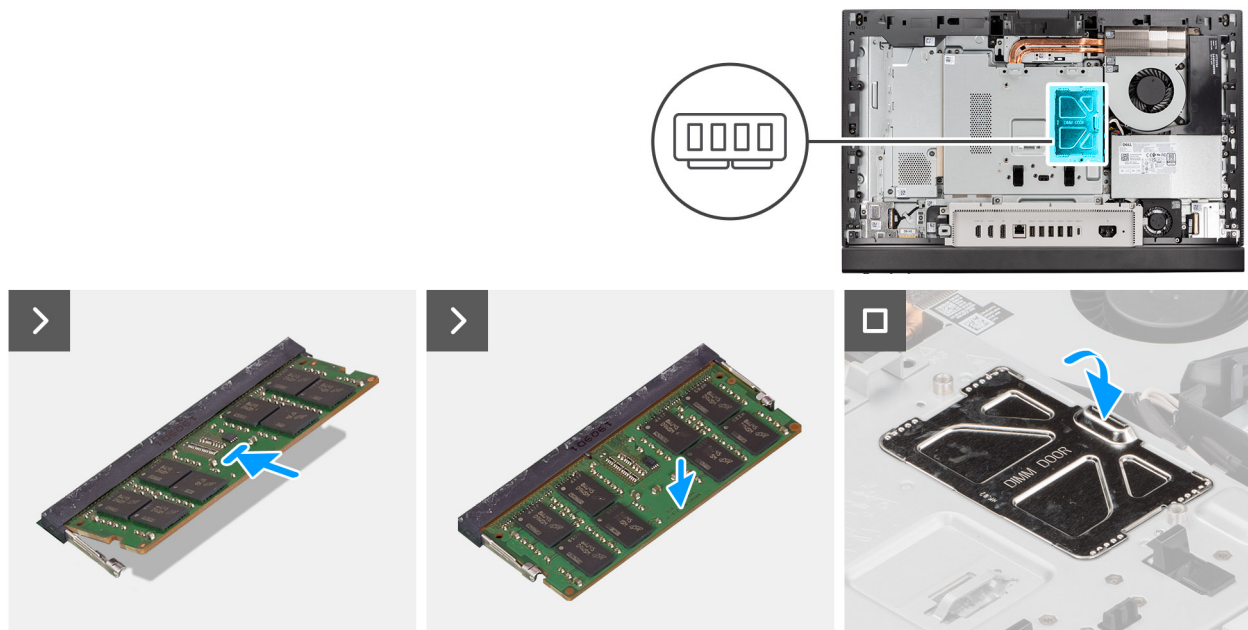


Figure 22. Installing the memory

Steps

1. Align the notch on the memory module with the tab on the memory-module slot.
2. Slide the memory module firmly into the slot at an angle and press down on the memory module down until it clicks into place.

NOTE: If you do not hear the click, remove the memory module and reinstall it.

NOTE: Repeat steps 1 to 2 for each memory module to be installed on your computer.

3. Close the DIMM door and press it into place to secure it.

Next steps

1. Install the [back cover](#).
2. Install the [stand](#).
3. Follow the procedure in [After working inside your computer](#).

Graphics-card assembly

Removing the graphics-card assembly

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).

About this task

The following image indicates the location of the graphics-card assembly and provides a visual representation of the removal procedure.

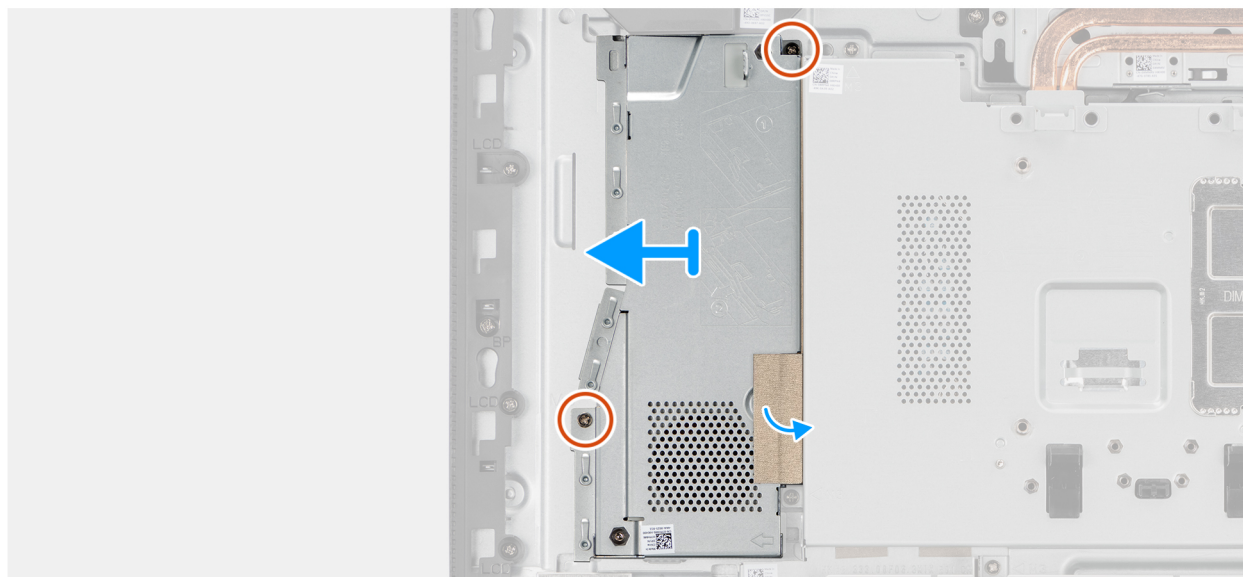
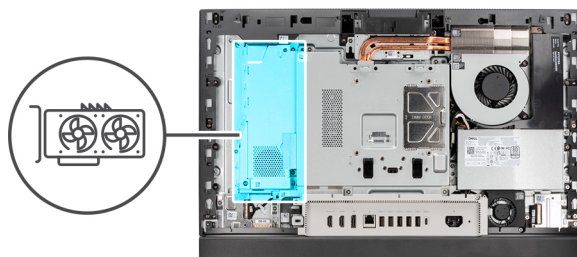


Figure 23. Removing the graphics-card assembly (Touch model)

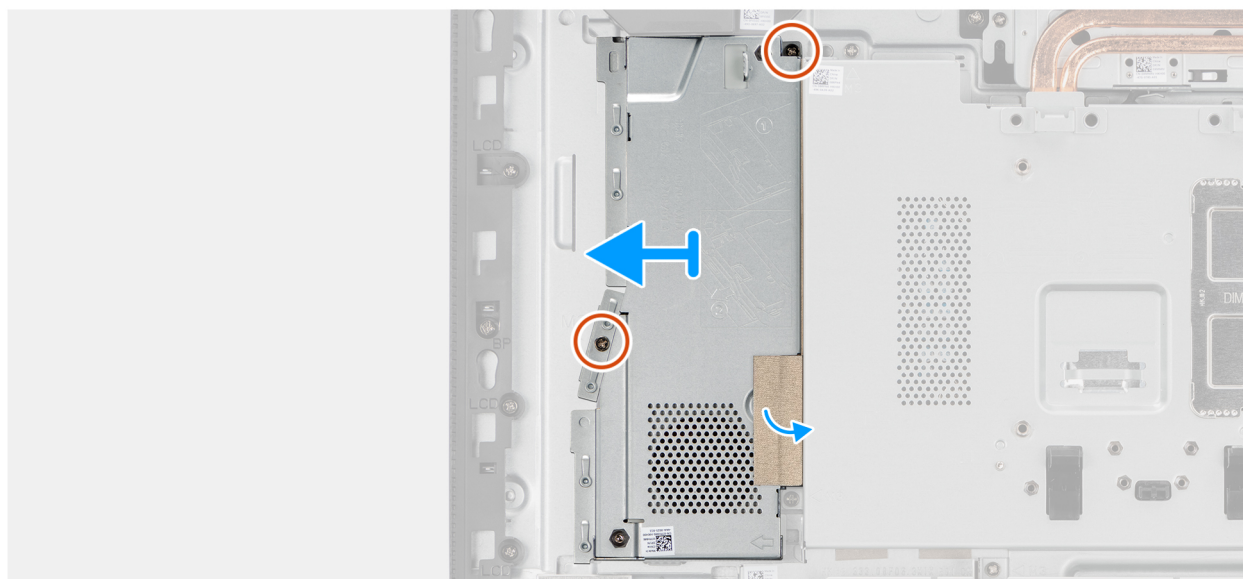
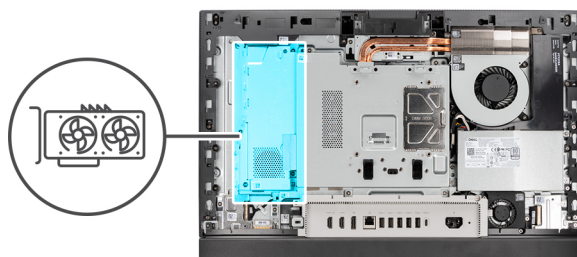


Figure 24. Removing the graphics-card assembly (Non-touch model)

Steps

1. Remove the two screws (M3x5) that secure the graphics-card assembly to the display-assembly base.
2. Slide and lift the graphics-card assembly off the display-assembly base.

Installing the graphics-card assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the graphics-card assembly and provides a visual representation of the installation procedure.

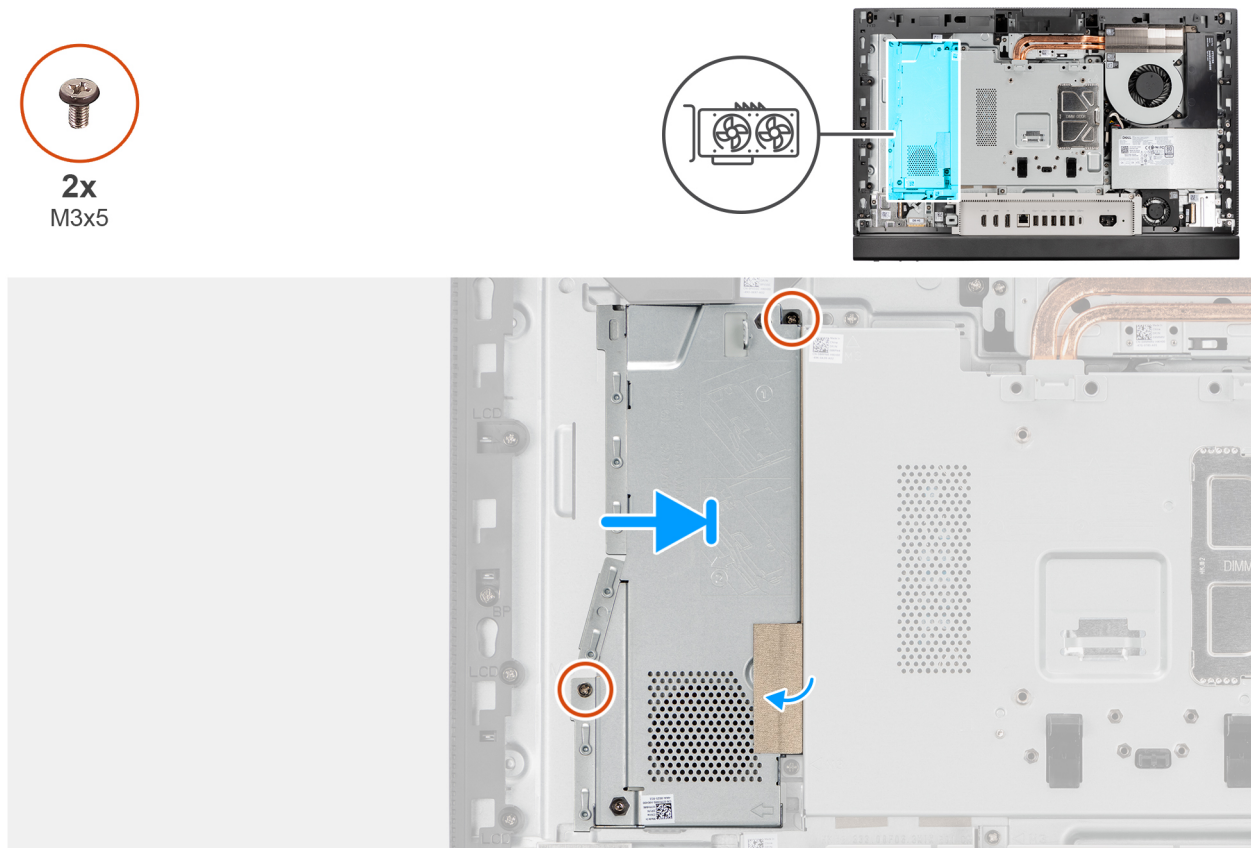


Figure 25. Installing the graphics-card assembly (Touch model)

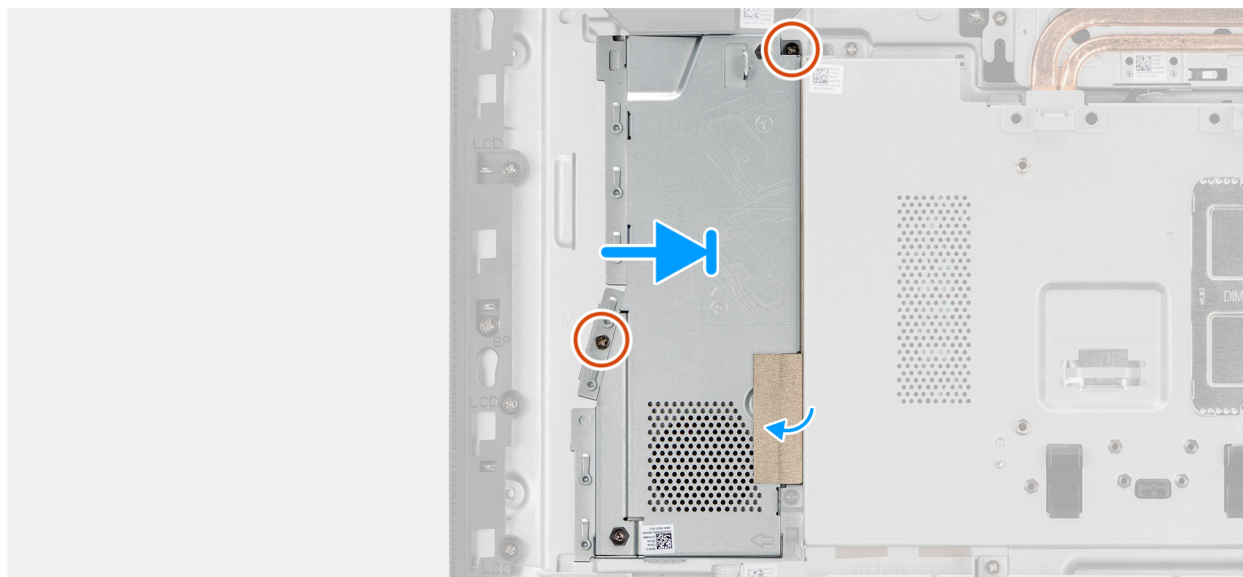
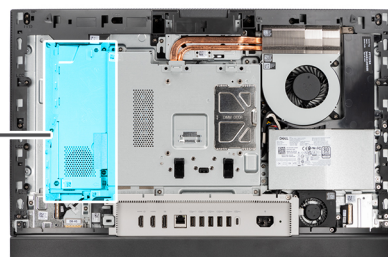


Figure 26. Installing the graphics-card assembly (Non-touch model)

Steps

1. Align the tabs in the graphics-card assembly with the tabs in the display-assembly base.
2. Slide the graphics-card assembly into its slot in the display-assembly base.
NOTE: Ensure to carefully align the graphics-card gasket in the display-assembly base.
3. Replace the two screws (M3x5) to secure the graphics-card assembly to the display-assembly base.

Next steps

1. Install the [back cover](#).
2. Install the [stand](#).
3. Follow the procedure in [After working inside your computer](#).

System-board shield

Removing the system-board shield

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [graphics-card assembly](#).

About this task

The following image indicates the location of the system-board shield and provides a visual representation of the removal procedure.

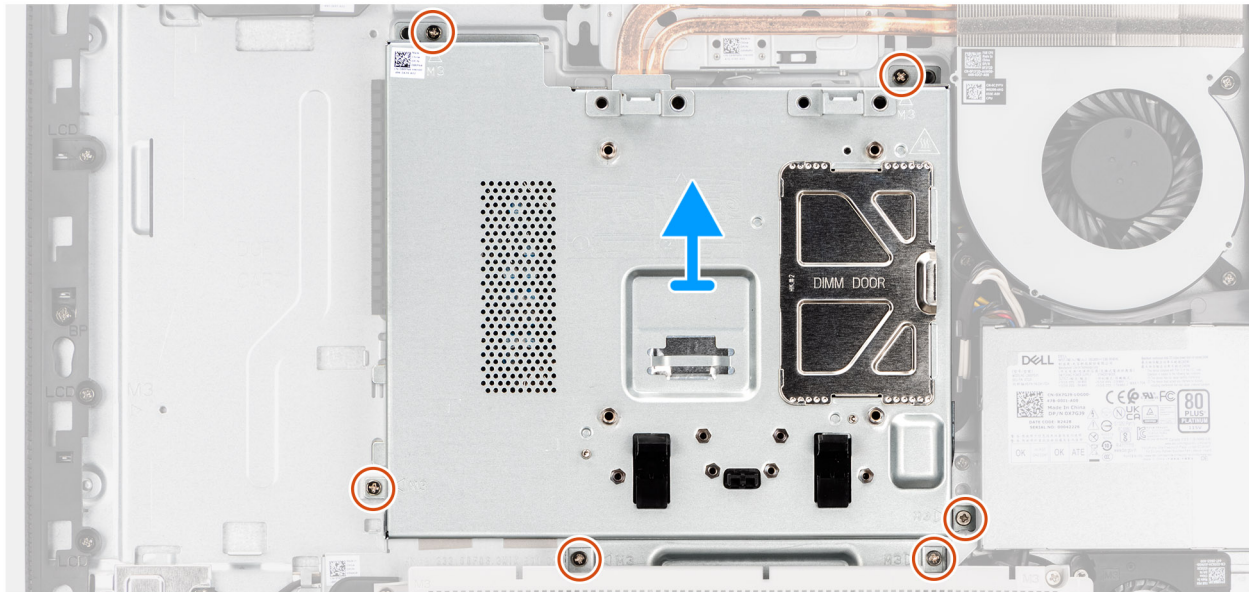
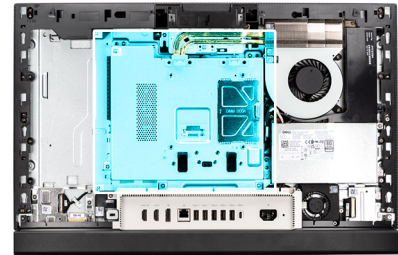


Figure 27. Removing the system-board shield

Steps

1. Remove the six screws (M3x5) that secure the system-board shield to the display-assembly base.
2. Lift the system-board shield off the display-assembly base.

Installing the system-board shield

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the system-board shield and provides a visual representation of the installation procedure.



6x
M3x5

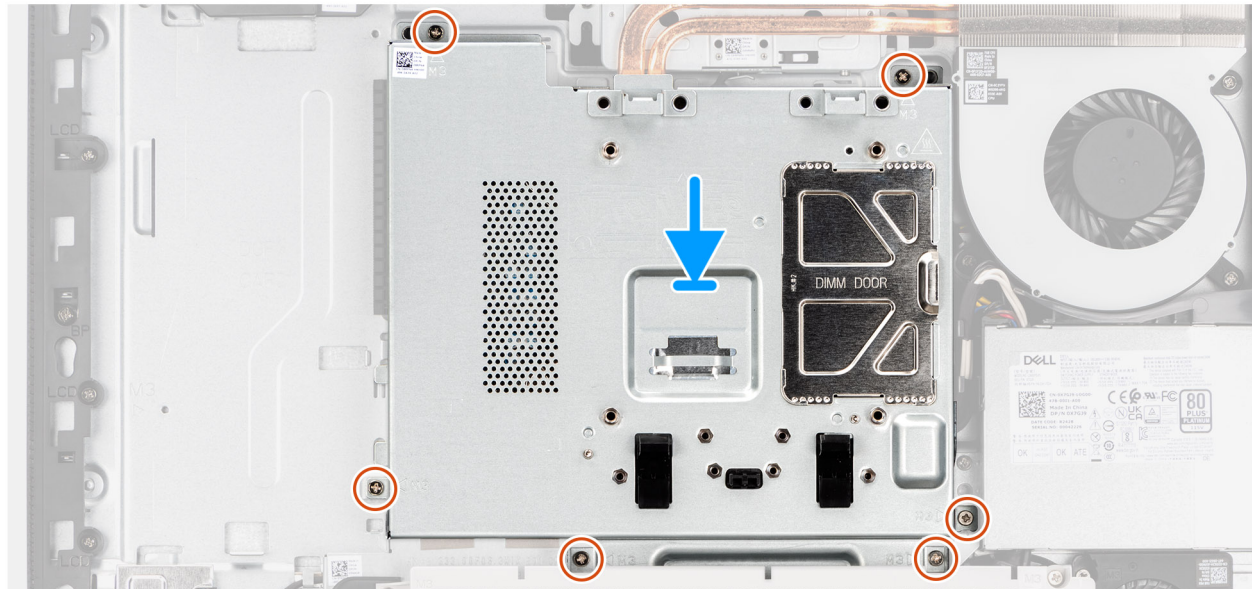
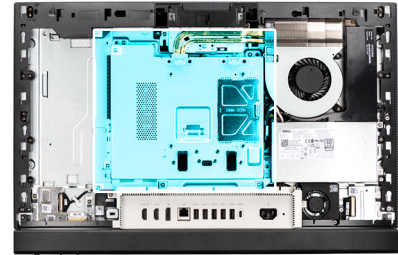


Figure 28. Installing the system-board shield

Steps

1. Place the system-board shield on the display-assembly base.
2. Align the screw holes on the system-board shield with the screw holes on the display-assembly base.
3. Replace the six screws (M3x5) to secure the system-board shield to the display-assembly base.

Next steps

1. Install the [graphic-card assembly](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Wireless card

Removing the wireless card

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

The following image indicates the location of the wireless card and provides a visual representation of the removal procedure.



1x
M2x3.5

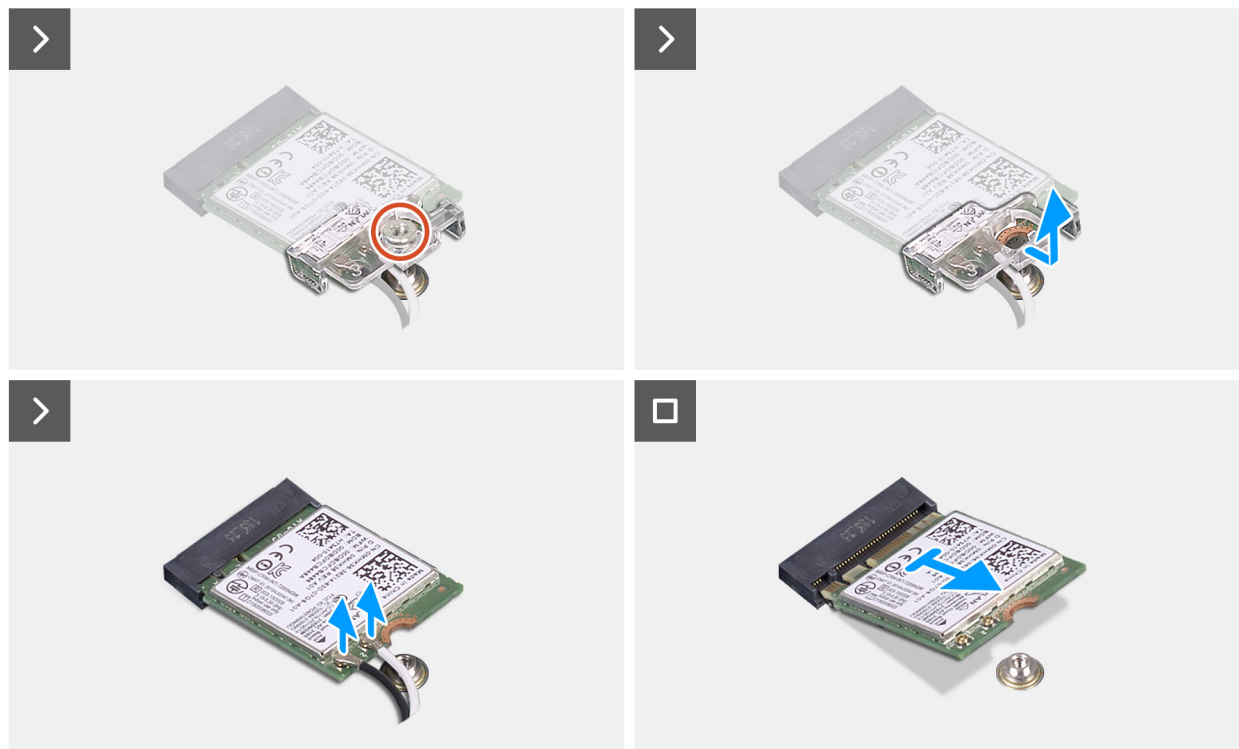
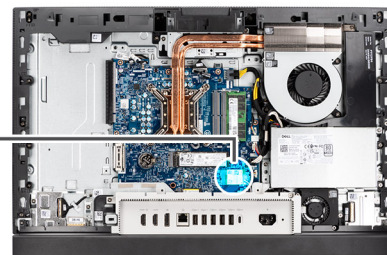


Figure 29. Removing the wireless card

Steps

1. Remove the screw (M2x3.5) that secures the wireless-card bracket to the wireless card.
2. Lift the wireless-card bracket off the wireless card.
3. Disconnect the antenna cables from the wireless card.
4. Slide and lift the wireless card from the wireless-card slot (M.2 WLAN).

Installing the wireless card

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the wireless card and provides a visual representation of the installation procedure.

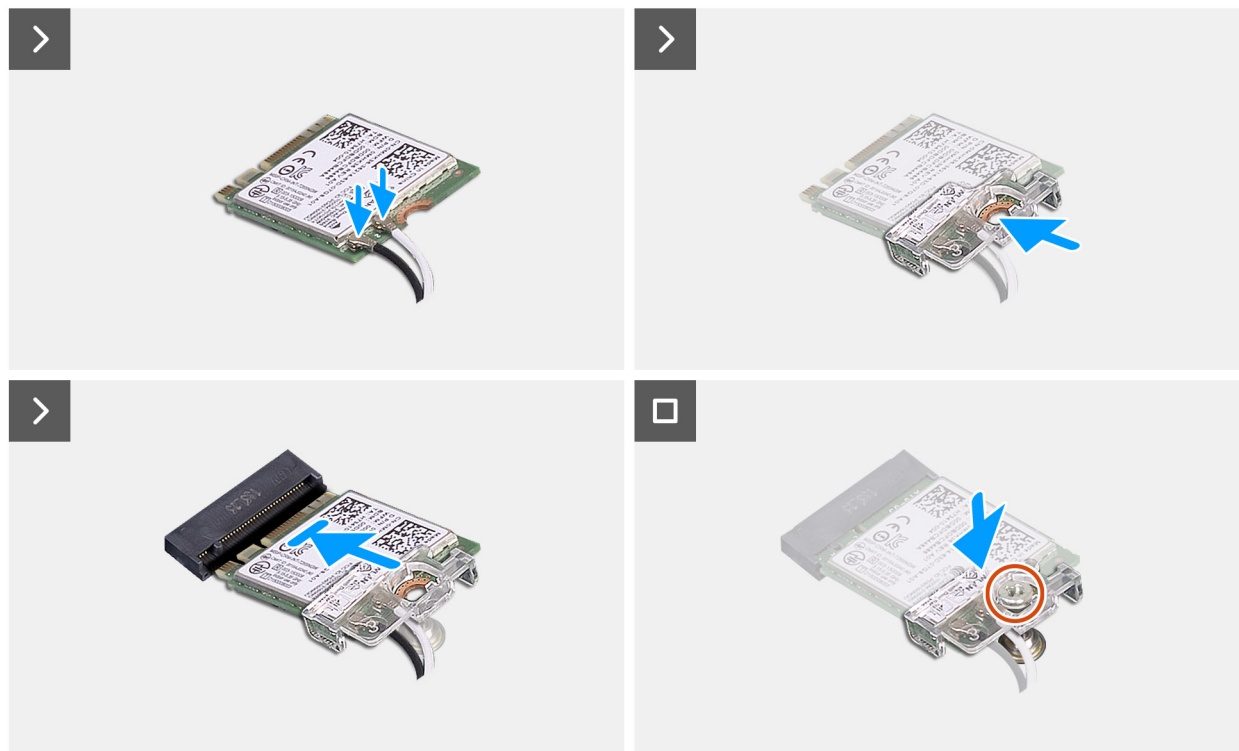
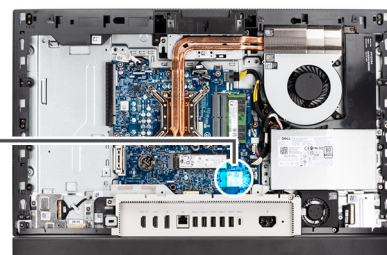


Figure 30. Installing the wireless card

Steps

1. Connect the antenna cables to the wireless card.

Table 24. Antenna-cable color scheme

| Connector on the wireless card | Antenna-cable color | Silkscreen marking | |
|--------------------------------|---------------------|--------------------|--------------------|
| Main | White | MAIN | △ (white triangle) |
| Auxiliary | Black | AUX | ▲ (black triangle) |

2. Place the wireless-card bracket on the wireless card.
3. Align the notch on the wireless card with the tab on the wireless-card slot (M.2 WLAN).
4. Slide the wireless card at an angle into the wireless-card slot (M.2 WLAN).
5. Replace the screw (M2x3.5) that secures the wireless-card bracket to the wireless card.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Solid-state drive in M.2 slot 0

Removing the M.2 2230 solid-state drive in M.2 slot 0

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

NOTE: Depending on the configuration ordered, your computer may have up to two M.2 2230 or 2280 solid-state drives installed in the solid-state drive slots on the system board.

NOTE: This procedure is applicable for computers where an M.2 2230 solid-state drive is installed in the solid-state drive slot (M.2 PCIe SSD 0) on the system board.

The following image indicates the location of the M.2 2230 solid-state drive in M.2 slot 0 and provides a visual representation of the removal procedure.

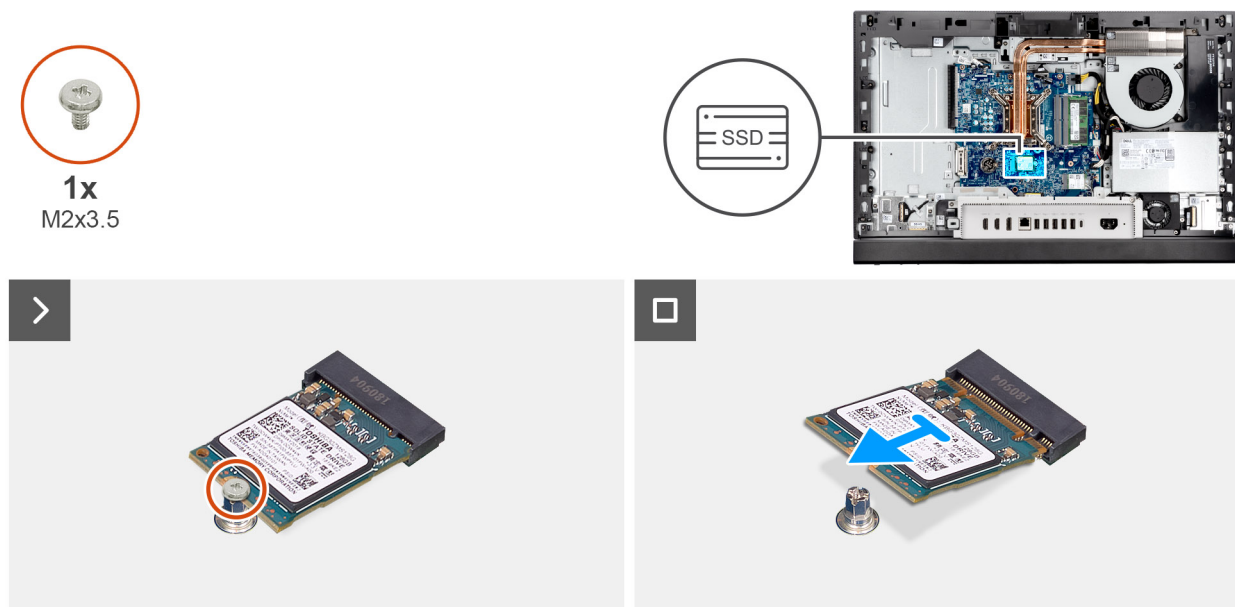


Figure 31. Removing the M.2 2230 solid-state drive in M.2 slot 0

Steps

1. Remove the screw (M2x3.5) that secures the M.2 2230 solid-state drive to the system board.
2. Slide and lift the M.2 2230 solid-state drive from the solid-state drive slot (M.2 PCIe SSD 0) on the system board.

Installing the M.2 2230 solid-state drive in M.2 slot 0

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: This procedure is only applicable if you are installing an M.2 2230 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 0) on the system board.

NOTE: Ensure that the M.2 screw mount is in the proper location to install the M.2 2230 solid-state drive, refer to [Location of the screw mount on M.2 slot 0](#).

The following image indicates the location of the M.2 2230 solid-state drive in M.2 slot 0 and provides a visual representation of the installation procedure.

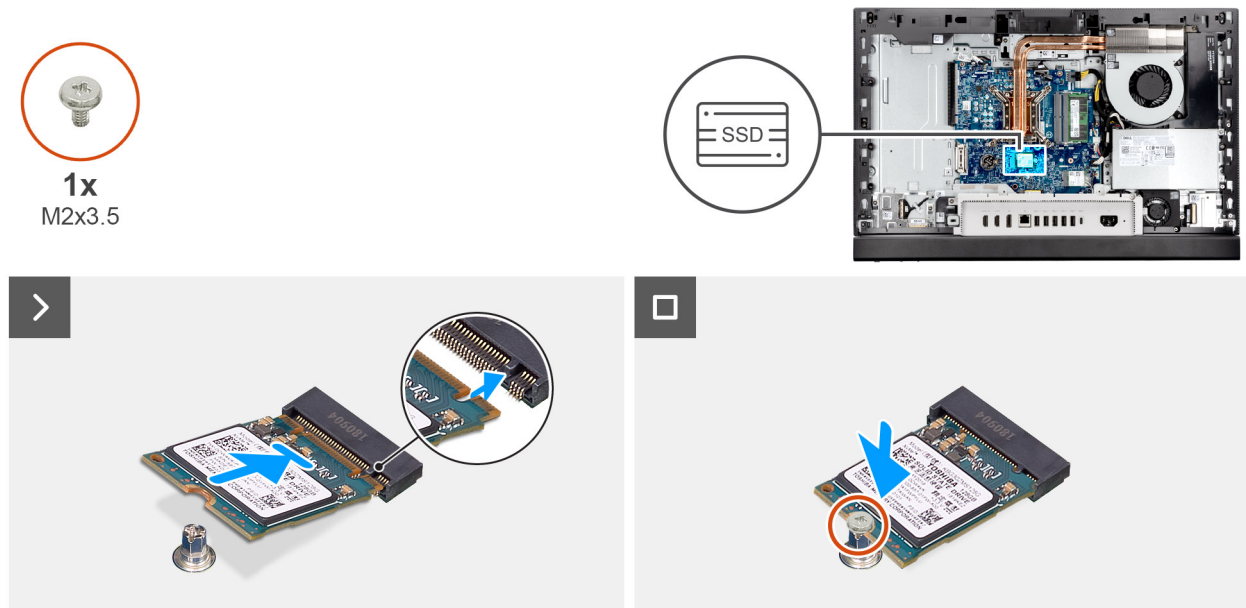


Figure 32. Installing the M.2 2230 solid-state drive in M.2 slot 0

Steps

1. Align the notch on the M.2 2230 solid-state drive with the tab on the solid-state drive slot (M.2 PCIe SSD 0).
2. Slide the M.2 2230 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 0) on the system board.
3. Replace the screw (M2x3.5) that secures the M.2 2230 solid-state drive to the system board.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Removing the M.2 2280 solid-state drive in M.2 slot 0

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

NOTE: Depending on the configuration ordered, your computer may have up to two M.2 2230 or 2280 solid-state drives installed in the solid-state drive slots on the system board.

NOTE: This procedure is applicable for computers where an M.2 2280 solid-state drive is installed in the solid-state drive slot (M.2 PCIe SSD 0) on the system board.

The following image indicates the location of the M.2 2280 solid-state drive in M.2 slot 0 and provides a visual representation of the removal procedure.

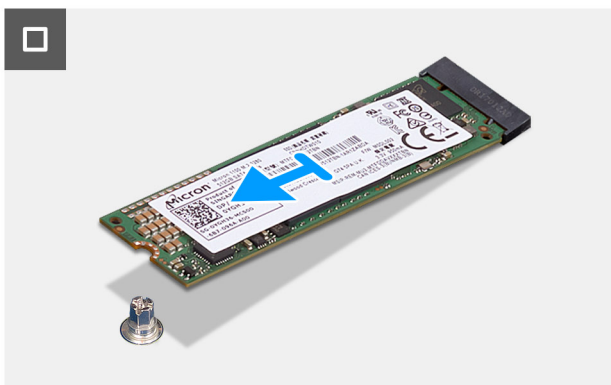
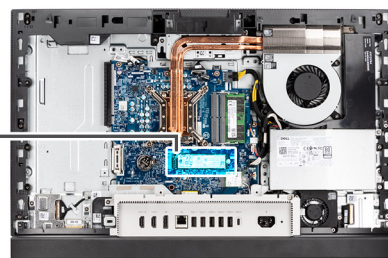


Figure 33. Removing the M.2 2280 solid-state drive in M.2 slot 0

Steps

1. Remove the screw (M2x3.5) that secures the M.2 2280 solid-state drive to the system board.
2. Slide and lift the M.2 2280 solid-state drive from the solid-state drive slot (M.2 PCIe SSD 0) on the system board.

Installing the M.2 2280 solid-state drive in M.2 slot 0

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

- NOTE:** This procedure is only applicable if you are installing an M.2 2280 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 0) on the system board.
- NOTE:** Ensure that the M.2 screw mount is in the proper location to install the M.2 2280 solid-state drive, refer to [Location of the screw mount on M.2 slot 0](#).

The following image indicates the location of the M.2 2280 solid-state drive in M.2 slot 0 and provides a visual representation of the installation procedure.

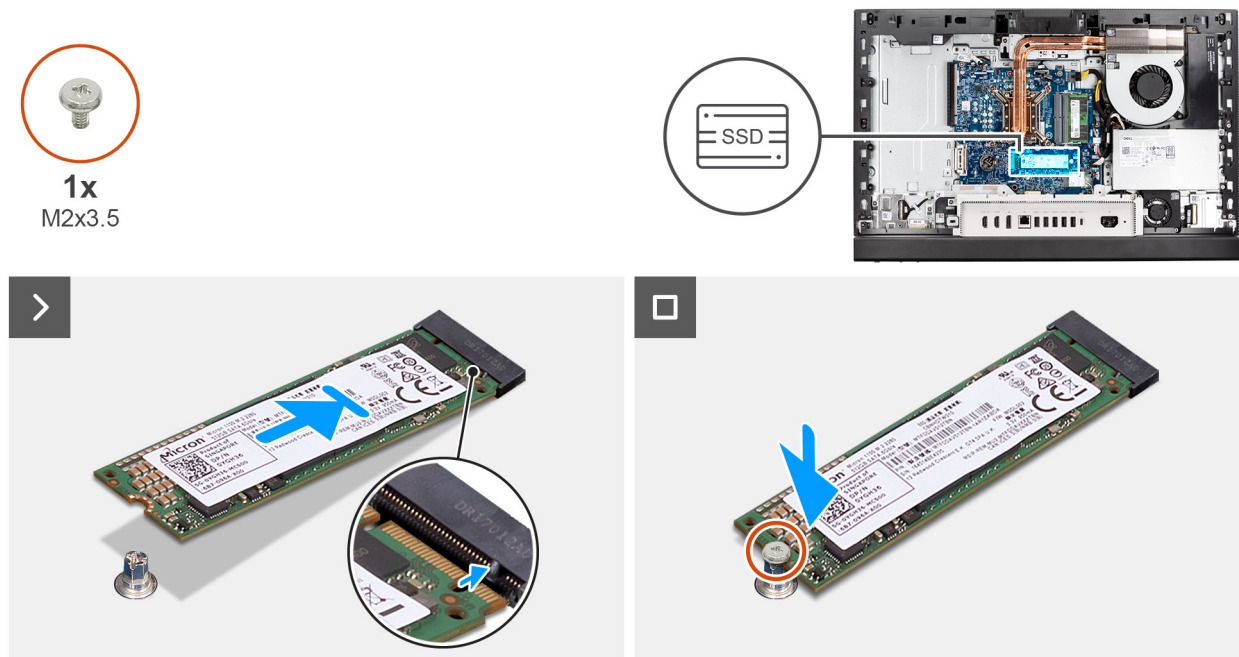


Figure 34. Installing the M.2 2280 solid-state drive in M.2 slot 0

Steps

1. Align the notch on the M.2 2280 solid-state drive with the tab on the solid-state drive slot (M.2 PCIe SSD 0).
2. Slide the M.2 2280 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 0) on the system board.
3. Replace the screw (M2x3.5) that secures the M.2 2280 solid-state drive to the system board.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Location of the screw mount on M.2 slot 0

Prerequisites

To install a M.2 solid-state drive of a different form factor in M.2 slot 0, the location of the screw mount on M.2 slot 0 must be changed.

About this task

NOTE: This procedure only applies to the screw mount located for M.2 slot 0.

The following image indicates the location of the screw mount for M.2 slot 0 and provides a visual representation of the procedure to change the position of the screw mount.

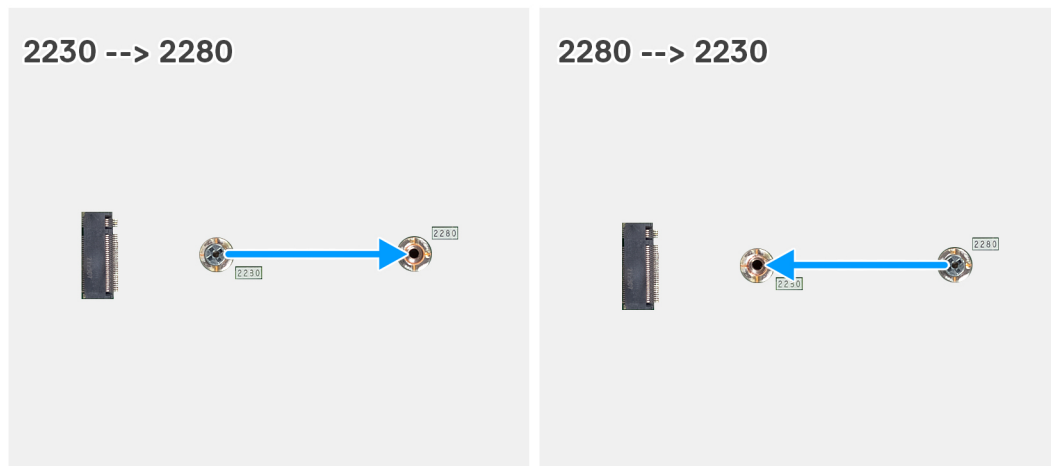


Figure 35. Moving the solid-state screw mount for M.2 slot 0

Steps

1. Remove the screw mount on the system board.
2. Install the screw mount on the system board.

Next steps

1. Install the [M.2 2230 solid-state drive in slot 0](#) or the [M.2 2280 solid-state drive in slot 0](#), whichever is applicable.
2. Install the [system-board shield](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your computer](#).

Solid-state drive in M.2 slot 1

Removing the M.2 2230 solid-state drive in M.2 slot 1

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).

About this task

- NOTE:** Depending on the configuration ordered, your computer may have up to two M.2 2230 or 2280 solid-state drives installed in the solid-state drive slots on the system board.
- NOTE:** This procedure is applicable for computers where an M.2 2230 solid-state drive is installed in the solid-state drive slot (M.2 PCIe SSD 1) on the system board.

The following image indicates the location of the M.2 2230 solid-state drive in M.2 slot 1 and provides a visual representation of the removal procedure.

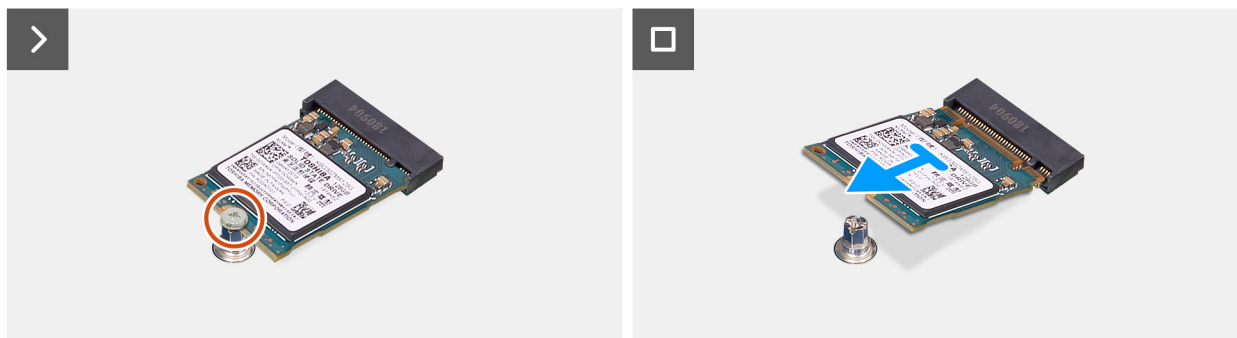
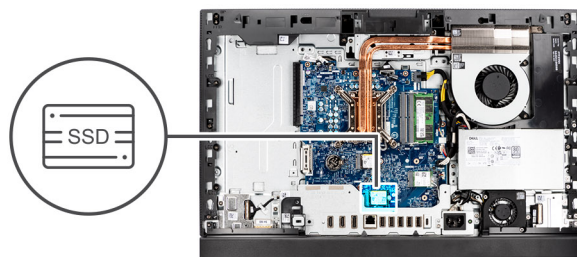


Figure 36. Removing the M.2 2230 solid-state drive in M.2 slot 1

Steps

1. Remove the screw (M2x3.5) that secures the M.2 2230 solid-state drive to the system board.
2. Slide and lift the M.2 2230 solid-state drive from the solid-state drive slot (M.2 PCIe SSD 1) on the system board.

Installing the M.2 2230 solid-state drive in M.2 slot 1

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

- NOTE:** This procedure is only applicable if you are installing an M.2 2230 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 1) on the system board.
- NOTE:** Ensure that the M.2 screw mount is in the proper location to install the M.2 2230 solid-state drive, refer to [Location of the screw mount on M.2 slot 1](#).

The following image indicates the location of the M.2 2230 solid-state drive in M.2 slot 1 and provides a visual representation of the installation procedure.



1x
M2x3.5

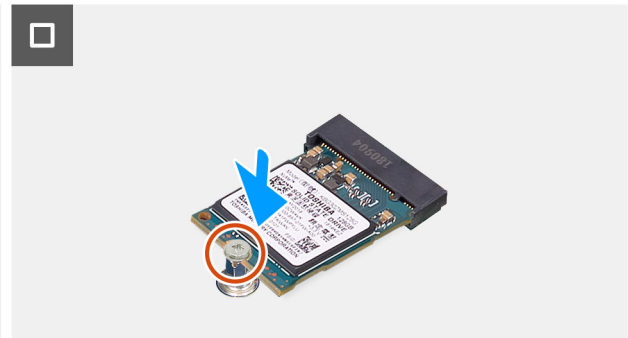
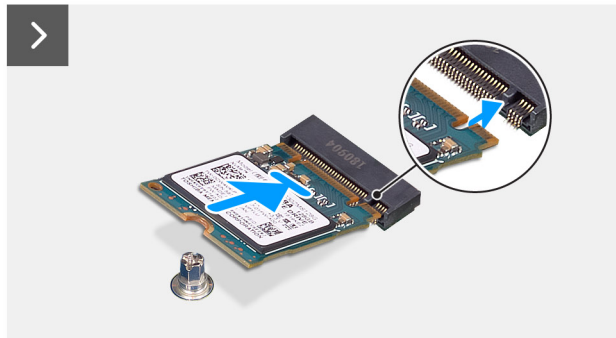
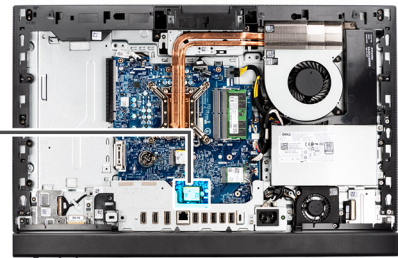


Figure 37. Installing the M.2 2230 solid-state drive in M.2 slot 1

Steps

1. Align the notch on the M.2 2230 solid-state drive with the tab on the solid-state drive slot (M.2 PCIe SSD 1).
2. Slide the M.2 2230 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 1) on the system board.
3. Replace the screw (M2x3.5) that secures the M.2 2230 solid-state drive to the system board.

Next steps

1. Install the [I/O cover](#).
2. Install the [system-board shield](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your computer](#).

Removing the M.2 2280 solid-state drive in M.2 slot 1

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).

About this task

NOTE: Depending on the configuration ordered, your computer may have up to two M.2 2230 or 2280 solid-state drives installed in the solid-state drive slots on the system board.

NOTE: This procedure is applicable for computers where an M.2 2280 solid-state drive is installed in the solid-state drive slot (M.2 PCIe SSD 1) on the system board.

The following image indicates the location of the M.2 2280 solid-state drive in M.2 slot 1 and provides a visual representation of the removal procedure.

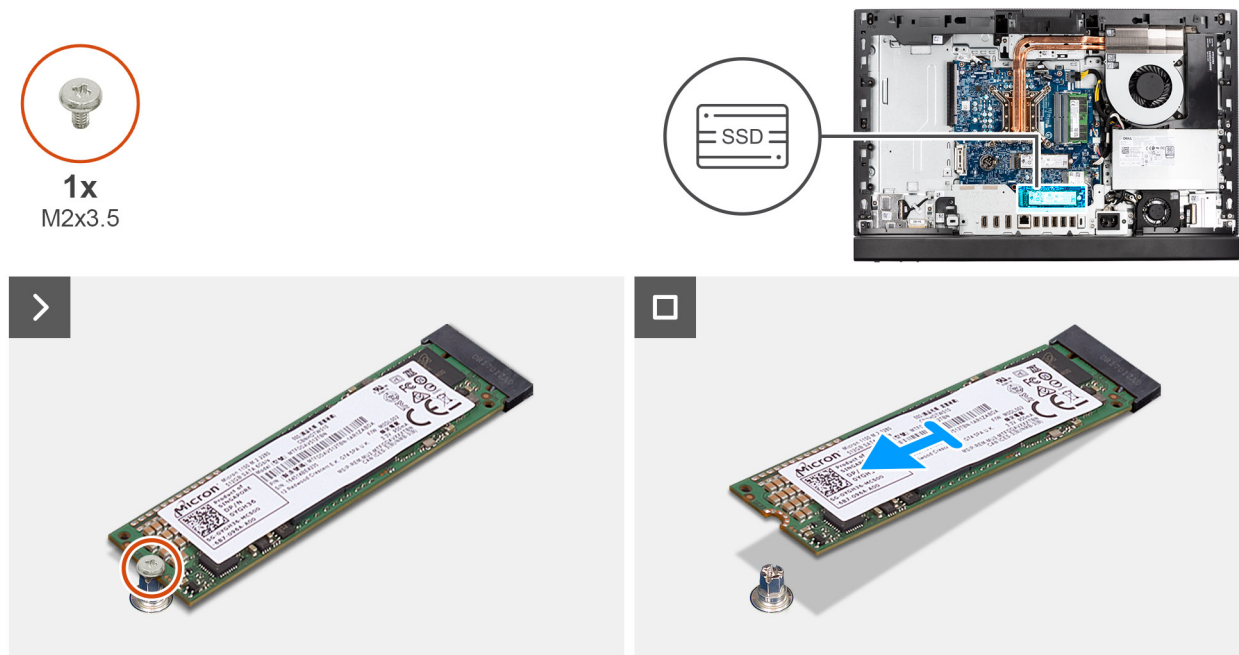


Figure 38. Removing the M.2 2280 solid-state drive in M.2 slot 1

Steps

1. Remove the screw (M2x3.5) that secures the M.2 2280 solid-state drive to the system board.
2. Slide and lift the M.2 2280 solid-state drive from the solid-state drive slot (M.2 PCIe SSD 1) on the system board.

Installing the M.2 2280 solid-state drive in M.2 slot 1

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

- NOTE:** This procedure is only applicable if you are installing an M.2 2280 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 1) on the system board.
- NOTE:** Ensure that the M.2 screw mount is in the proper location to install the M.2 2280 solid-state drive, refer to [Location of the screw mount on M.2 slot 1](#).

The following image indicates the location of the M.2 2280 solid-state drive in M.2 slot 1 and provides a visual representation of the installation procedure.

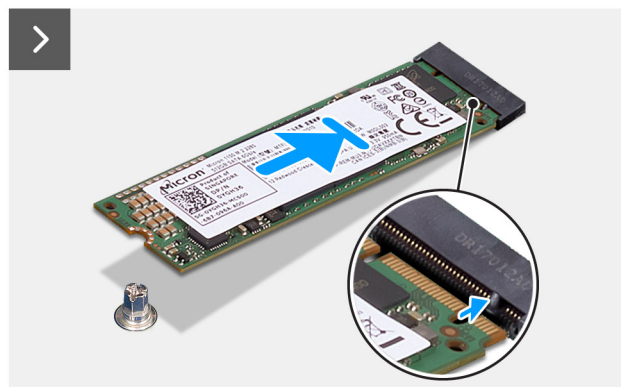
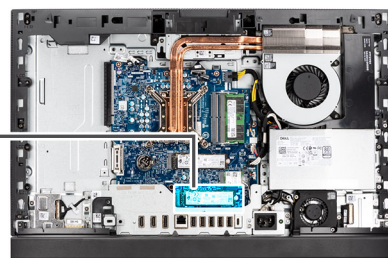


Figure 39. Installing the M.2 2280 solid-state drive in M.2 slot 1

Steps

1. Align the notch on the M.2 2280 solid-state drive with the tab on the solid-state drive slot (M.2 PCIe SSD 1).
2. Slide the M.2 2280 solid-state drive into the solid-state drive slot (M.2 PCIe SSD 1) on the system board.
3. Replace the screw (M2x3.5) that secures the M.2 2280 solid-state drive to the system board.

Next steps

1. Install the [I/O cover](#).
2. Install the [system-board shield](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your computer](#).

Location of the screw mount on M.2 slot 1

Prerequisites

To install an M.2 solid-state drive of a different form factor on M.2 slot 1, the location of the screw mount on M.2 slot 1 has to be changed in order to install the M.2 solid-state drive of a different form factor.

About this task

NOTE: This procedure only applies to the screw mount located on M.2 slot 1.

The following image indicates the location of the screw mount on M.2 slot 1 and provides a visual representation of the procedure to change the position of the screw mount.

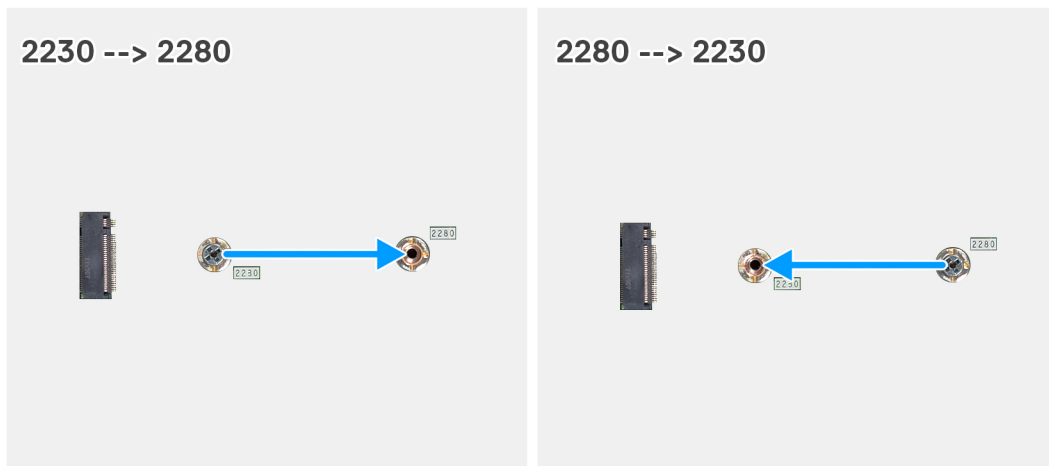


Figure 40. Moving the solid-state screw mount on M.2 slot 1

Steps

1. Remove the screw mount on the system board.
2. Install the screw mount on the system board.

Next steps

1. Install the [M.2 2230 solid-state drive in slot 1](#) or the [M.2 2280 solid-state drive in slot 1](#), whichever is applicable.
2. Install the [I/O cover](#).
3. Install the [system-board shield](#).
4. Install the [back cover](#).
5. Install the [stand](#).
6. Follow the procedure in [After working inside your computer](#).

Coin-cell battery

Removing the coin-cell battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

The following image indicates the location of the coin-cell battery and provides a visual representation of the removal procedure.

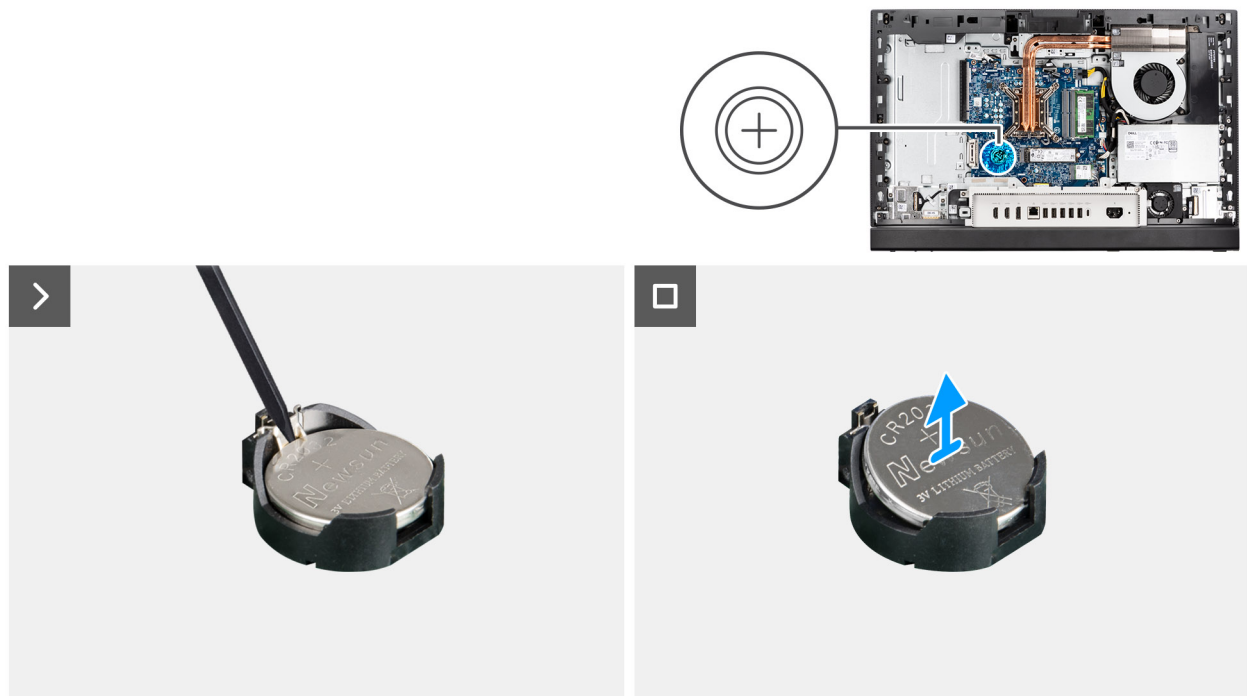


Figure 41. Removing the coin-cell battery

Steps

1. Using a plastic scribe, push the release lever on the coin-cell battery socket (RTC) to release the coin-cell battery out of the socket.
2. Lift the coin-cell battery from the coin-cell battery socket.

Installing the coin-cell battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the coin-cell battery and provides a visual representation of the installation procedure.

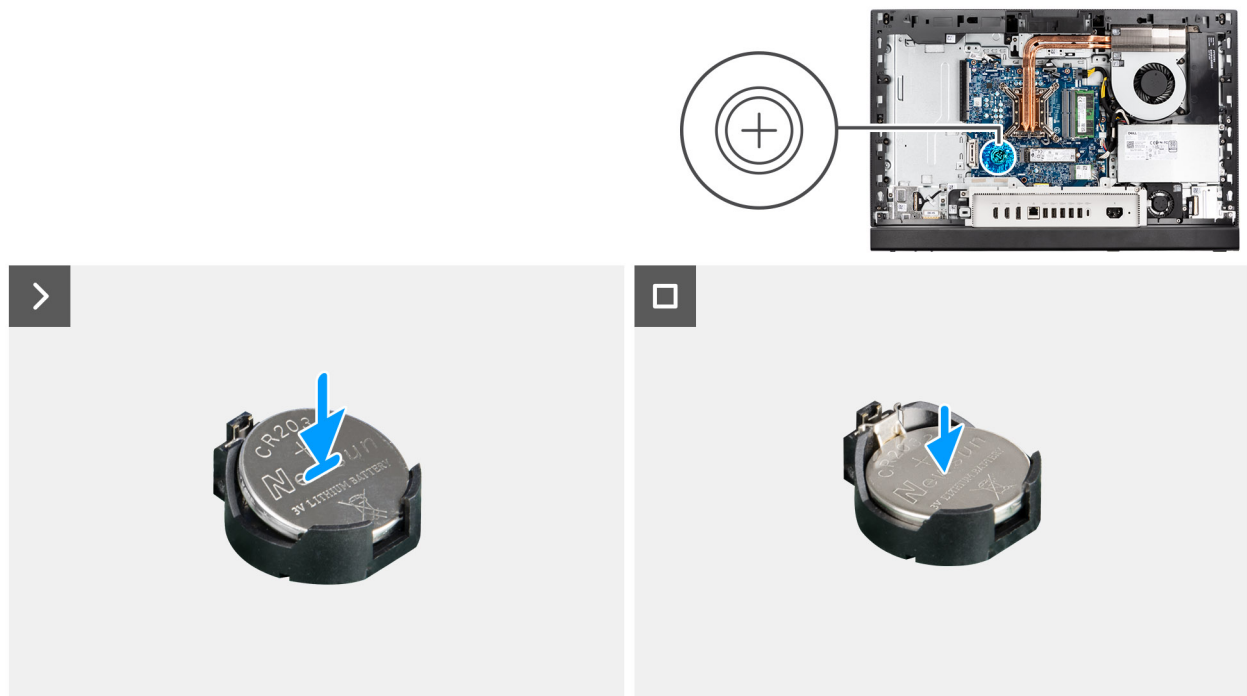


Figure 42. Installing the coin-cell battery

Steps

With the positive side (+) facing up, insert the coin-cell battery into the battery socket (RTC) on the system board and snap the battery into place.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

I/O cover

Removing the I/O cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

The following image indicates the location of the I/O cover and provides a visual representation of the removal procedure.



2x
M3x5

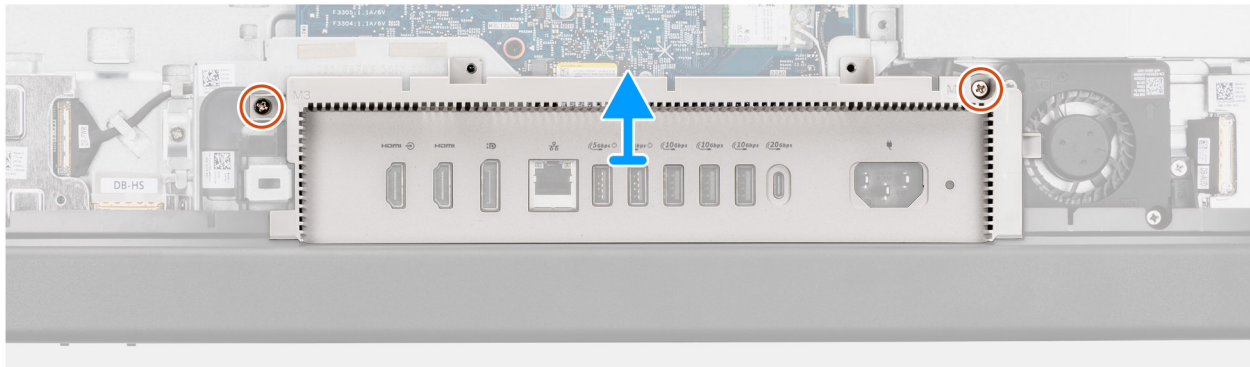
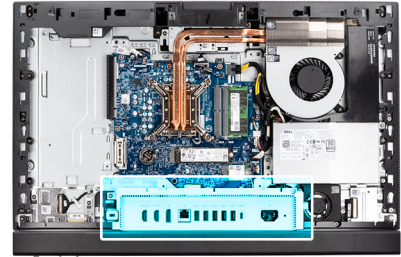


Figure 43. Removing the I/O cover

Steps

1. Remove the two screws (M3x5) that secure the I/O cover to the display-assembly base.
2. Lift the I/O cover off the display-assembly base.

Installing the I/O cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the I/O cover and provides a visual representation of the installation procedure.



2x
M3x5

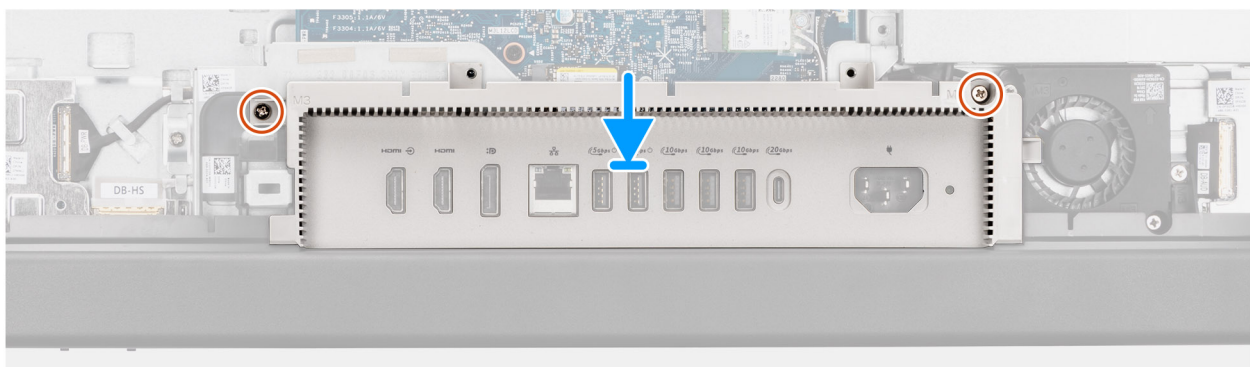


Figure 44. Installing the I/O cover

Steps

1. Place the I/O cover on the display-assembly base.
2. Align the I/O slots with the I/O ports and the screw holes on the I/O cover with the screw holes on the display-assembly base.
3. Replace the two screws (M3x5) that secure the I/O cover to the display-assembly base.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Bottom cover

Removing the bottom cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).

About this task

The following image indicates the location of the bottom cover and provides a visual representation of the removal procedure.

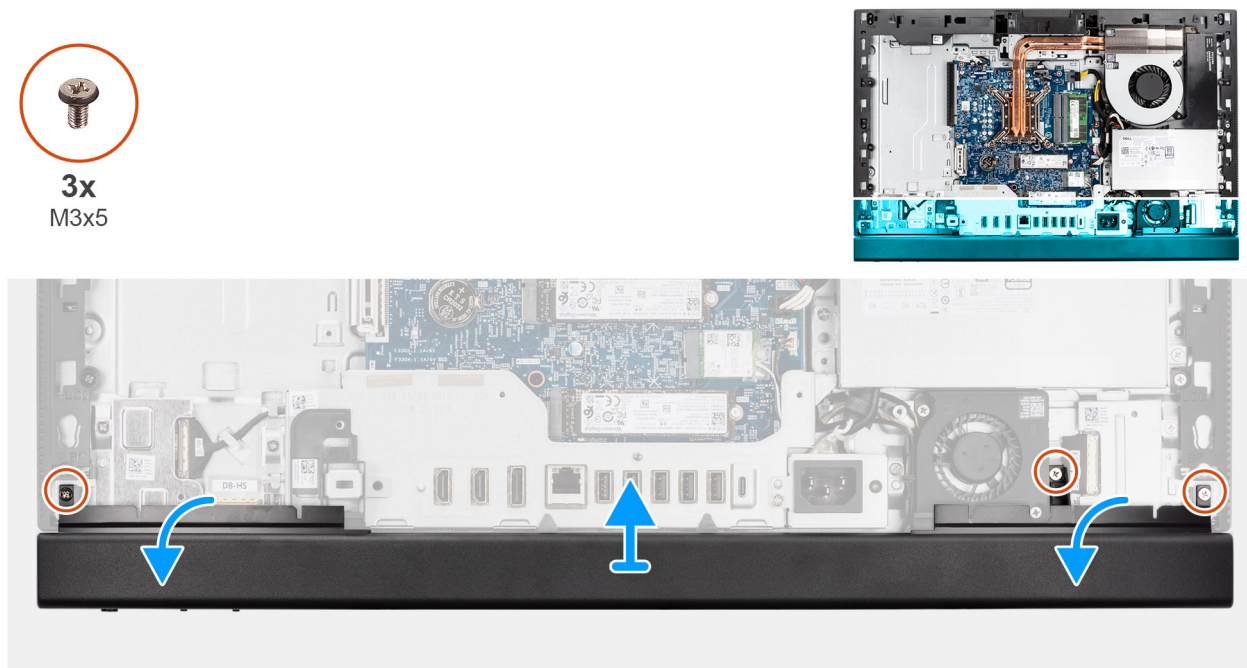


Figure 45. Removing the bottom cover

Steps

1. Remove the three screws (M3x5) that secure the bottom cover to the display-assembly base.
2. Release the tabs in the bottom cover from the slots on the display-assembly base.
3. Lift the bottom cover off the display-assembly base.

Installing the bottom cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the bottom cover and provides a visual representation of the installation procedure.

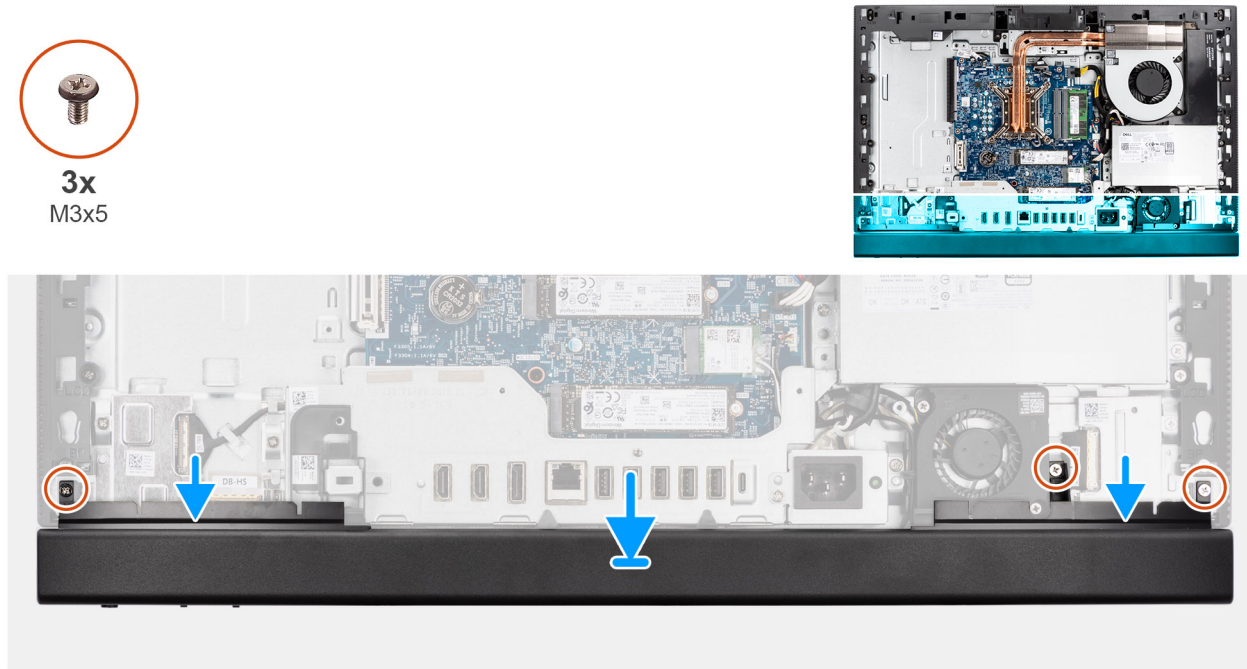


Figure 46. Installing the bottom cover

Steps

1. Align the tabs in the bottom cover with the slots on the display-assembly base.
2. Place the bottom cover in its slot on the display-assembly base.
3. Align and replace the three screws (M3x5) to secure the bottom cover to the display-assembly base.

Next steps

1. Install the [I/O cover](#).
2. Install the [system-board shield](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your computer](#).

Retractable-camera assembly

Removing the retractable-camera assembly

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).

4. Remove the [system-board shield](#).

About this task

NOTE: The retractable-camera assembly consists of the following components:

- Camera
- Microphones

The following image indicates the location of the retractable-camera assembly and provides a visual representation of the removal procedure.

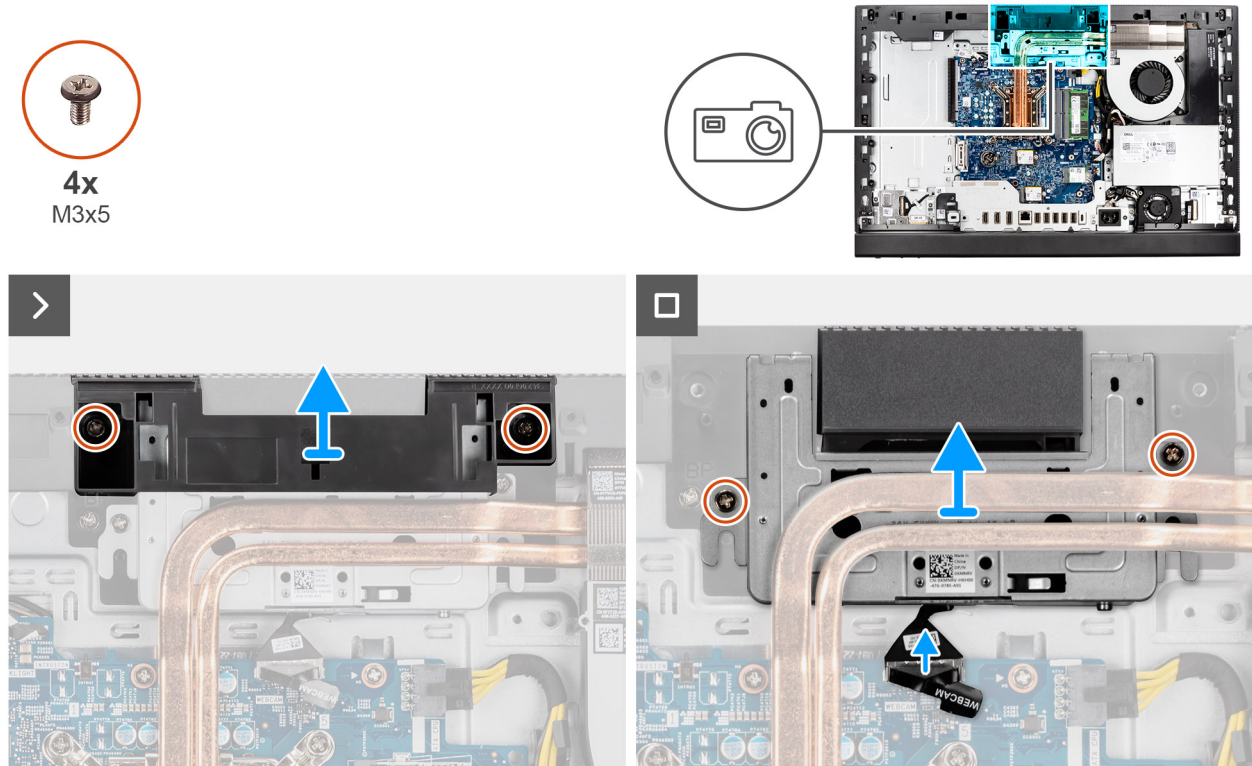


Figure 47. Removing the retractable-camera assembly

Steps

1. Remove the two screws (M3x5) that secure the camera-assembly bracket to the display-assembly base.
2. Lift the camera-assembly bracket off the display-assembly base.
3. Using the pull tab, disconnect the camera cable from its connector (WEBCAM) on the system board.
4. Remove the two screws (M3x5) that secure the retractable-camera assembly to the display-assembly base.
NOTE: The non-touch configuration has a plastic mid-frame on one of the screw mounts of the camera assembly.
5. Slide the retractable-camera assembly from its slot and under the heat sink and remove the retractable-camera assembly from the display-assembly base.

Installing the retractable-camera assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the retractable-camera assembly and provides a visual representation of the installation procedure.

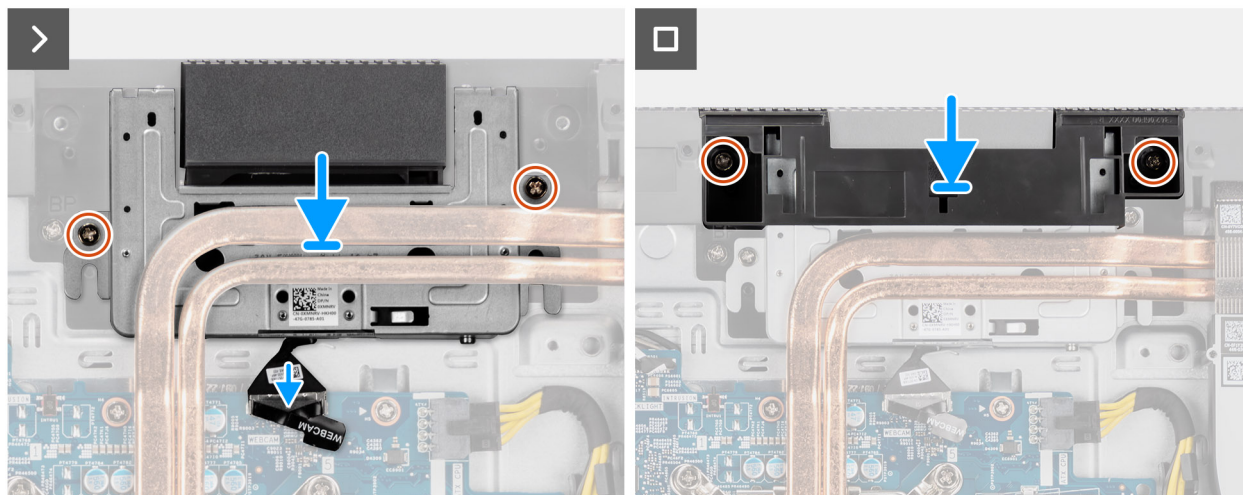
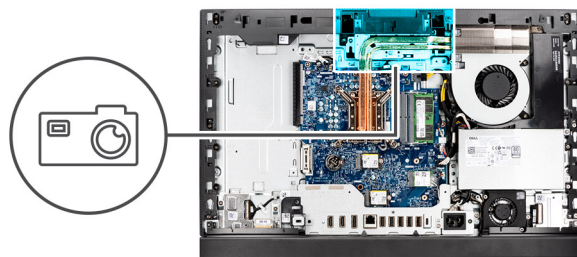


Figure 48. Installing the retractable-camera assembly

Steps

1. Slide the retractable-camera assembly under the heat sink into its slot on the display-assembly base.
2. Align the screw holes on the retractable-camera assembly with the screw holes on the display-assembly base.
3. Replace the two screws (M3x5) that secure the retractable-camera assembly to the display-assembly base.

i NOTE: The non-touch configuration has a plastic mid-frame on one of the screw mounts of the camera assembly.

4. Connect the camera cable to its connector (WEBCAM) on the system board.
5. Place the camera-assembly bracket over retractable-camera assembly.
6. Align the screw holes on the camera-assembly bracket with the screw holes on the display-assembly base.
7. Replace the two screws (M3x5) that secure the camera-assembly bracket to the display-assembly base.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Fan

Removing the fan

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

The following image indicates the location of the fan and provides a visual representation of the removal procedure.

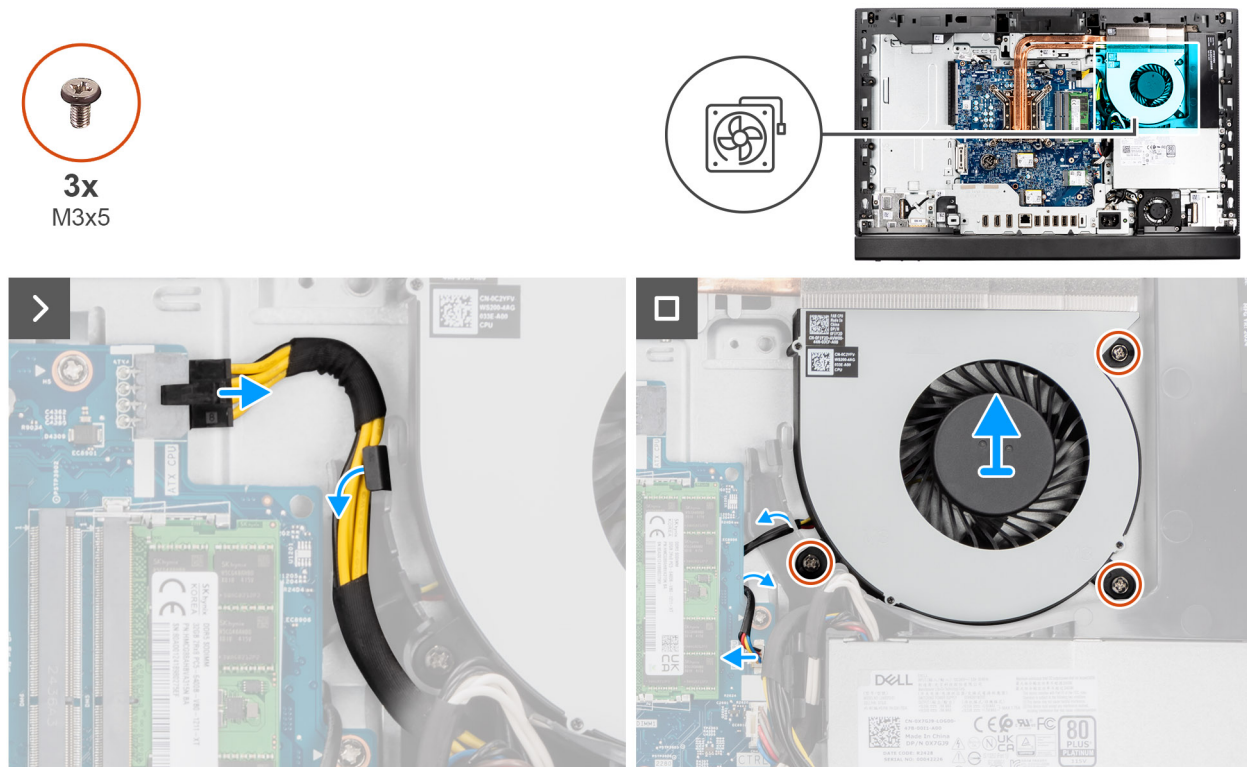


Figure 49. Removing the fan

Steps

1. Press and hold the securing clip and disconnect the processor-power cable from its connector (ATX CPU) on the system board.
2. Unroute the processor-power cable from the routing guide on the display-assembly base.
3. Lift the processor-power cable from the system board to access the fan cable.
4. Disconnect the fan cable from its connector (CPU FAN) on the system board.
5. Remove the three screws (M3x5) that secure the fan to the display-assembly base.
6. Lift the fan off the display-assembly base.

Installing the fan

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the fan and provides a visual representation of the installation procedure.



3x
M3x5

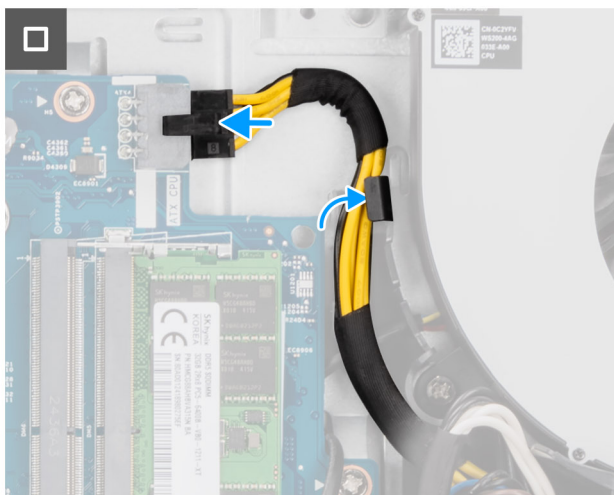
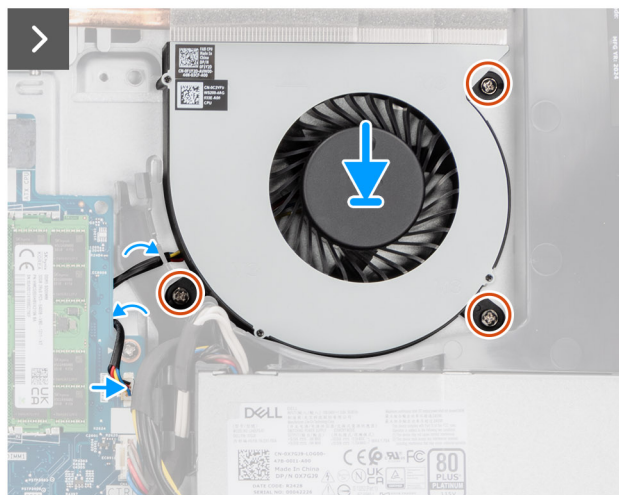
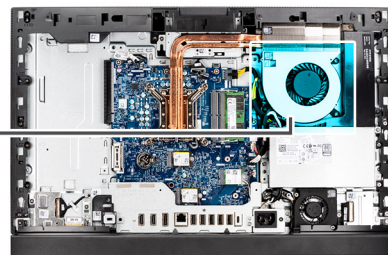
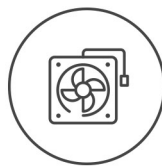


Figure 50. Installing the fan

Steps

1. Place the fan on the display-assembly base.
2. Align the screw holes on the fan with the screw holes on the display-assembly base.
3. Replace the three screws (M3x5) that secure the fan to the display-assembly base.
4. Connect the fan cable to its connector (CPU FAN) on the system board.
5. Route the processor-power cable through the routing guide on the display-assembly base.
6. Connect the processor-power cable to its connector (ATX CPU) on the system board.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Power-supply unit

Removing the power-supply unit

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).

About this task

The following image indicates the location of the power-supply unit and provides a visual representation of the removal procedure.

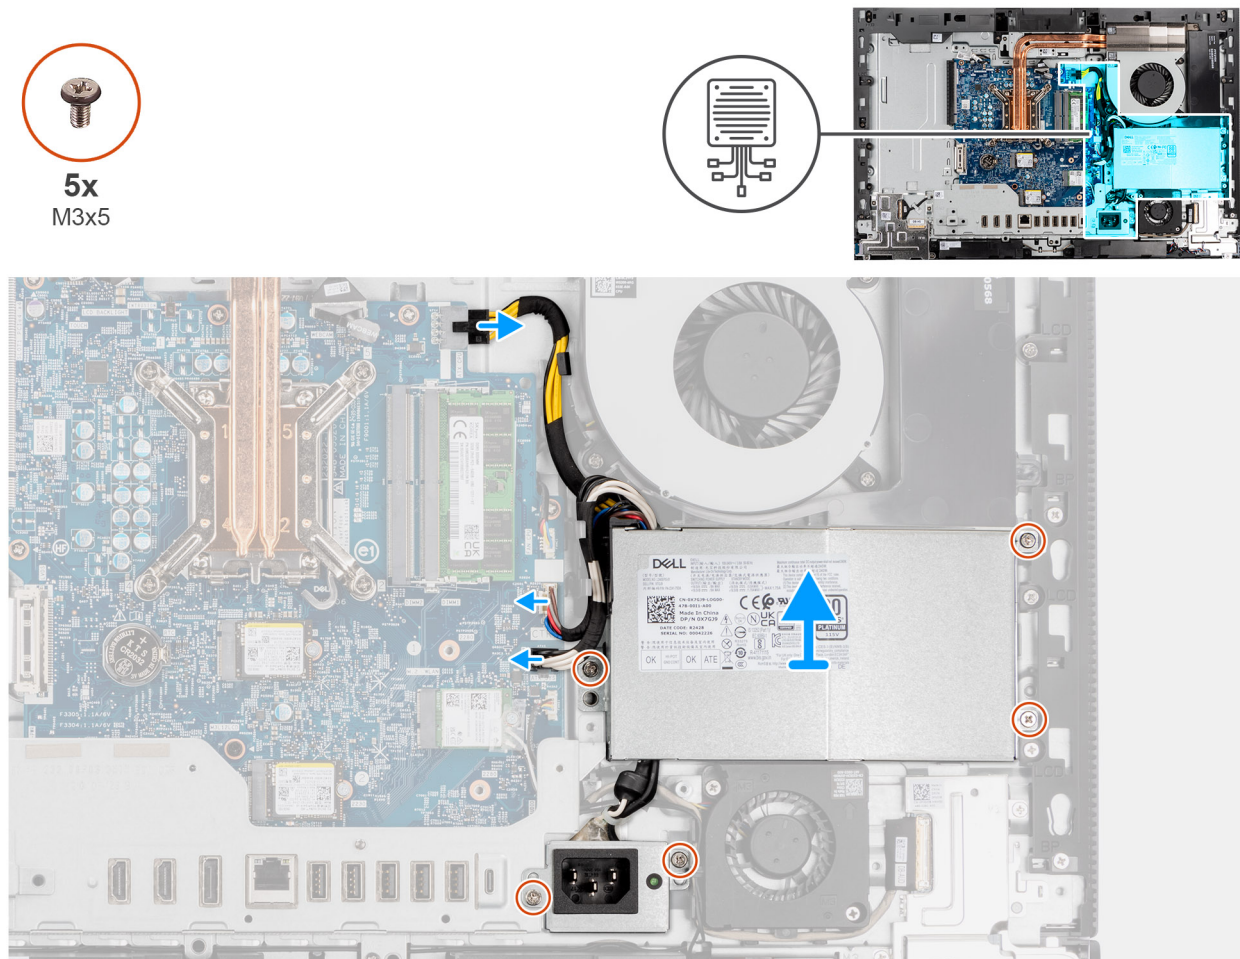


Figure 51. Removing the power-supply unit

Steps

1. Press and hold the securing clip and disconnect the processor-power cable from its connector (ATX CPU) on the system board.
2. Disconnect the control-signal cable from its connector (CTRL) on the system board.
3. Disconnect the system-board power cable from its connector (ATX SYS) on the system board.
4. Remove the three screws (M3x5) that secure the power-supply unit to the display-assembly base.
5. Remove the two screws (M3x5) that secure the power-supply unit connector to the display-assembly base.
6. Lift the power-supply unit, its cables, and the power-supply unit connector off the display-assembly base.

Installing the power-supply unit

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the power-supply unit and provides a visual representation of the installation procedure.

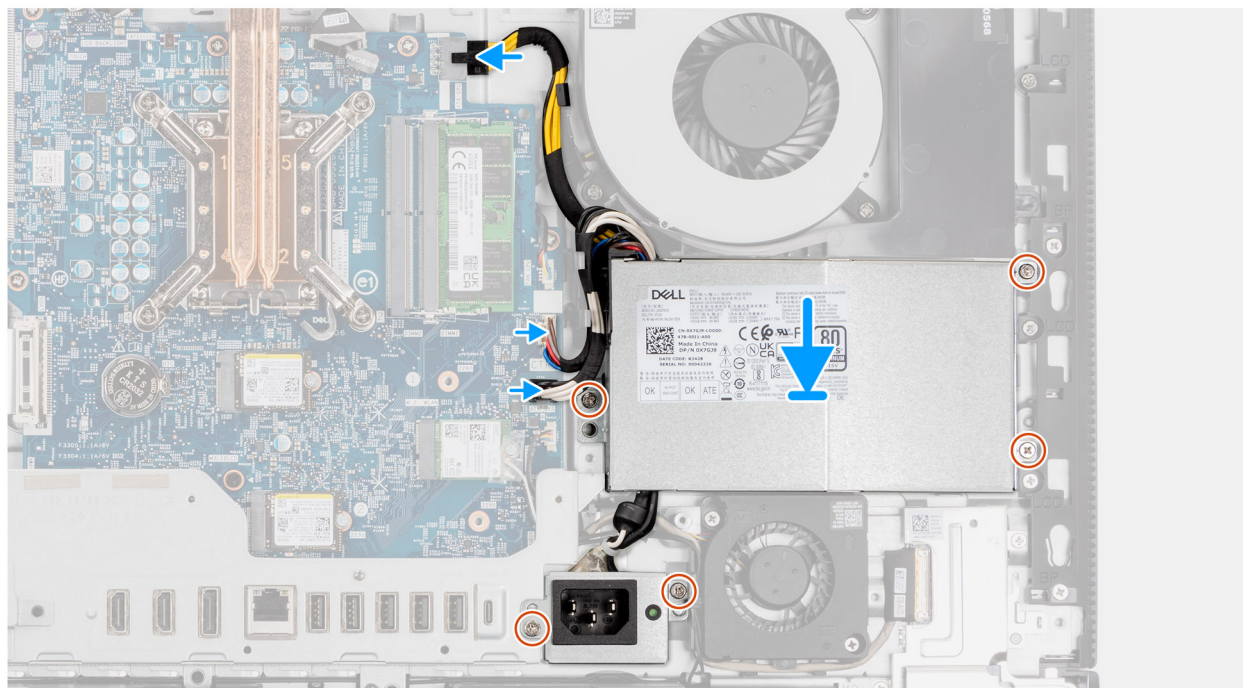
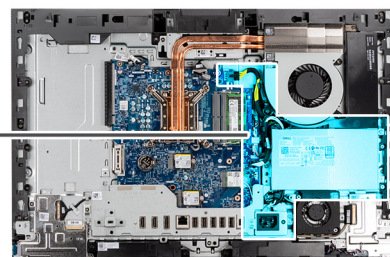
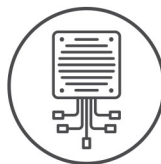


Figure 52. Installing the power-supply unit

Steps

1. Place the power-supply unit and the power-supply unit connector on the display-assembly base.
2. Align the screw holes on the power-supply unit with the screw holes on the display-assembly base.
3. Replace the three screws (M3x5) to secure the power-supply unit to the display-assembly base.
4. Align the screw holes on the power-supply connector with the screw holes on the display-assembly base.
5. Replace the two screws (M3x5) to secure the power-supply connector to the display-assembly base.
6. Connect the processor-power cable to its connector (ATX CPU) on the system board.
7. Connect the control-signal cable to its connector (CTRL) on the system board.
8. Connect the system-board power cable to its connector (ATX SYS) on the system board.

Next steps


1. Install the [I/O cover](#).
2. Install the [system-board shield](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your computer](#).


Removing and installing Field Replaceable Units (FRUs)

The replaceable components in this chapter are Field Replaceable Units (FRUs).

 **CAUTION:** The information in this removing and installing FRUs section is intended for authorized service technicians only.

 **CAUTION:** To avoid any potential damage to the component or loss of data, Dell Technologies recommends that an authorized service technician replaces the Field Replaceable Units (FRUs).

 **CAUTION:** Your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Power-supply fan

Removing the power-supply fan

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).
6. Remove the [power-supply unit](#).

About this task

The following images indicate the location of the power-supply fan and provide a visual representation of the removal procedure.



2x
M3x5

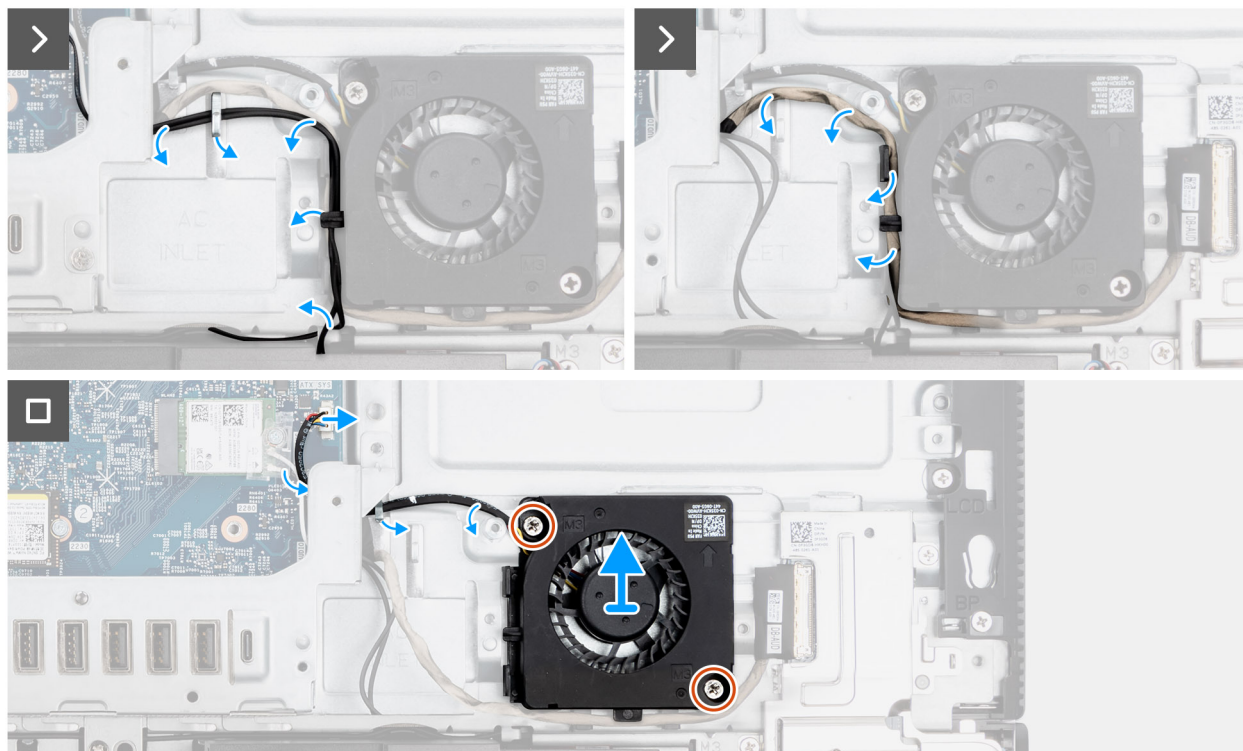
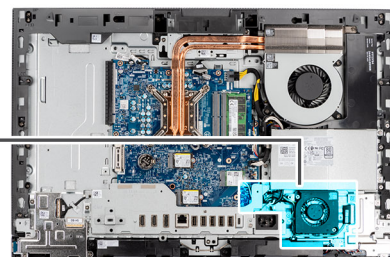
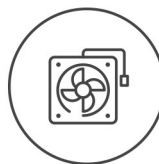


Figure 53. Removing the power-supply fan

Steps

1. Unroute the antenna cables from the routing guides on the display-assembly base and the power-supply fan.
2. Unroute the audio-board cable from the routing guides on the display-assembly base and the power-supply fan.
3. Disconnect the power-supply fan cable from its connector (FAN SYS) on the system board.
4. Unroute the power-supply fan cable from the routing guides on the display-assembly base.
5. Remove the two screws (M3x5) that secure the power-supply fan to the display-assembly base.
6. Lift the power-supply fan off the display-assembly base.

Installing the power-supply fan

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the power-supply fan and provide a visual representation of the installation procedure.



2x
M3x5

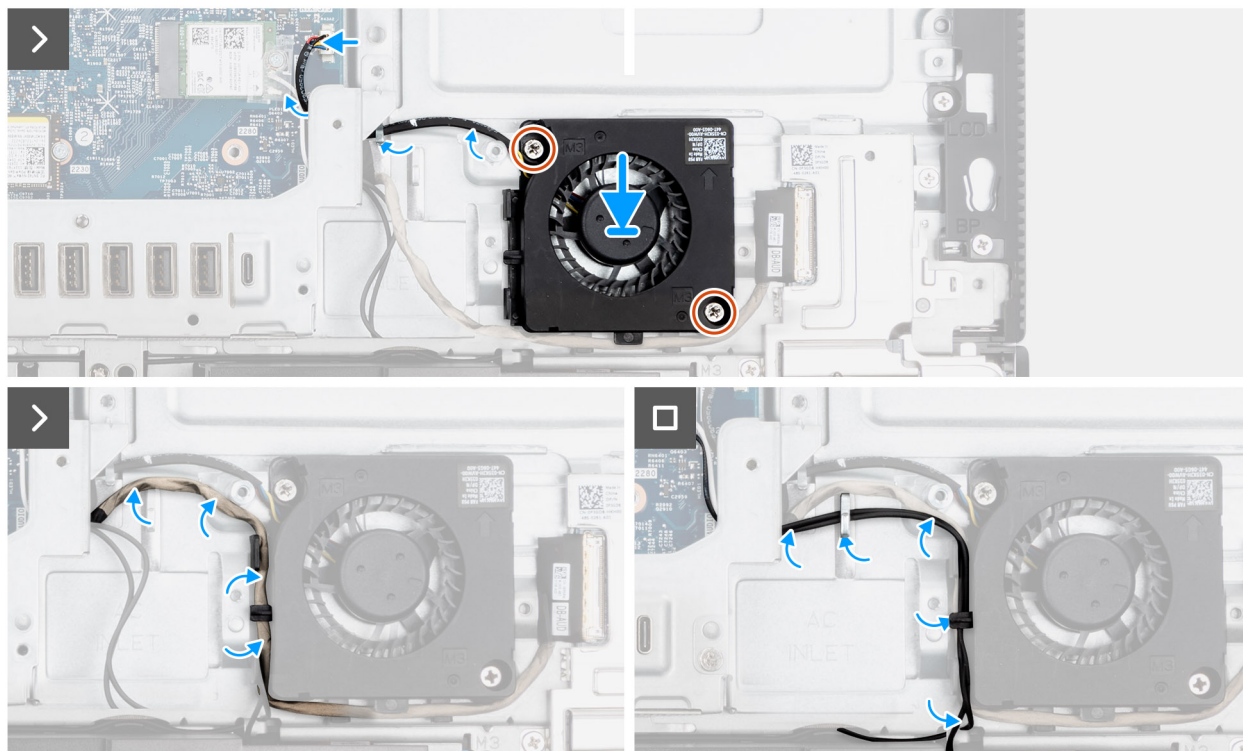
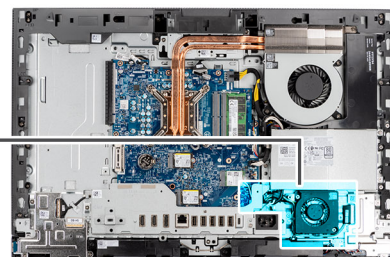
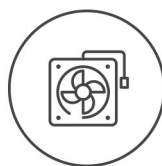


Figure 54. Installing the power-supply fan

Steps

1. Place the power-supply fan on the display-assembly base.
2. Align the screw holes on the power-supply fan with the screw holes on the display-assembly base.
3. Replace the two screws (M3x5) to secure the power-supply fan to the display-assembly base.
4. Connect the power-supply fan cable to its connector (FAN SYS) on the system board.
5. Route the power-supply fan cable through the routing guide on the display-assembly base.
6. Route the audio-board cable through the routing guides on the display-assembly base and the power-supply fan.
7. Route the antenna cables through the routing guides on the display-assembly base and the power-supply fan.

Next steps

1. Install the [power-supply unit](#).
2. Install the [I/O cover](#).
3. Install the [system-board shield](#).
4. Install the [back cover](#).
5. Install the [stand](#).
6. Follow the procedure in [After working inside your computer](#).

I/O bracket

Removing the I/O bracket

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).
6. Remove the [bottom cover](#).

About this task

The following image indicates the location of the I/O bracket and provides a visual representation of the removal procedure.

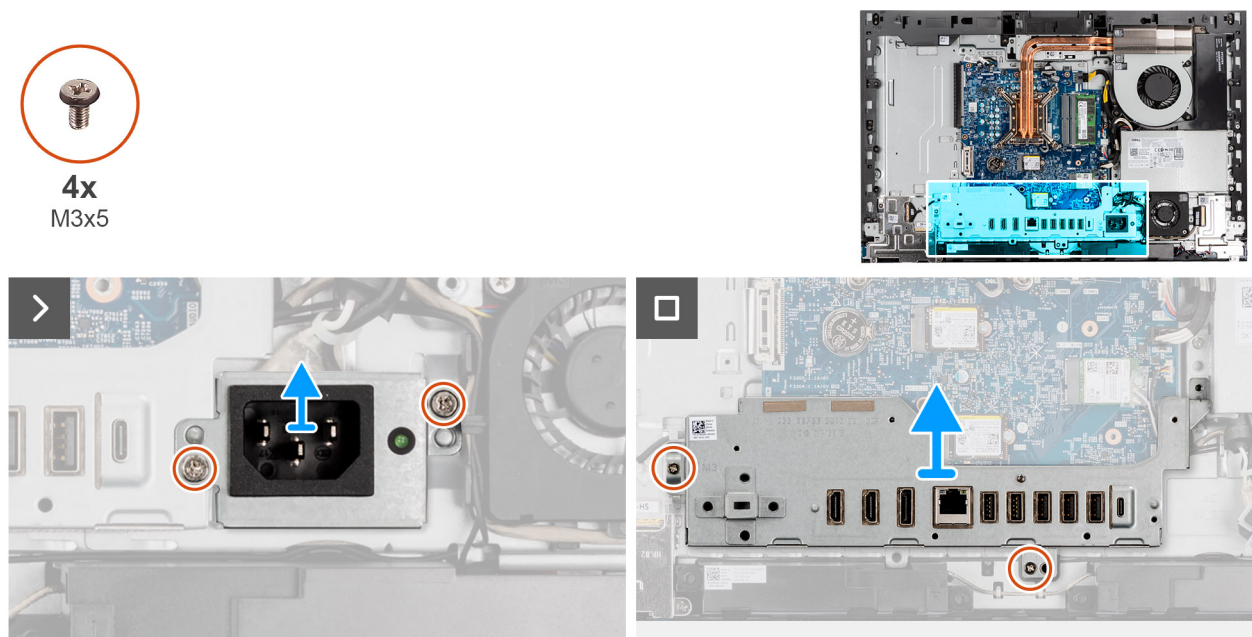


Figure 55. Removing the I/O bracket

Steps

1. Remove the two screws (M3x5) that secure the power-supply unit connector to the display-assembly base.
2. Lift the power-supply unit connector off the display-assembly base.
3. Remove the two screws (M3x5) that secure the I/O bracket to the display-assembly base.
4. Lift the I/O bracket off the display-assembly base.

Installing the I/O bracket

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the I/O bracket and provides a visual representation of the installation procedure.



4x
M3x5

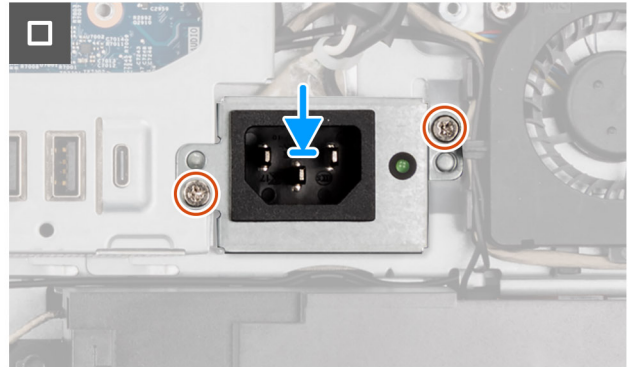
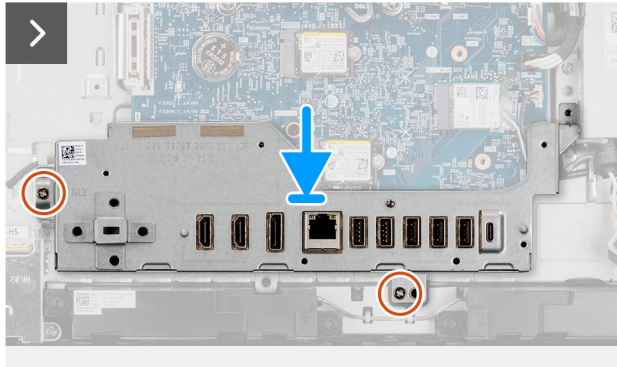
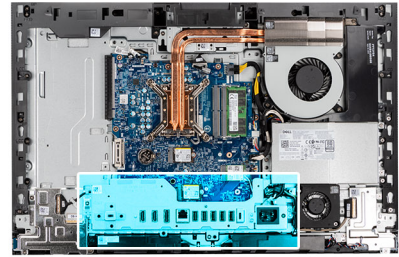


Figure 56. Installing the I/O bracket

Steps

1. Place and align the I/O bracket with the display-assembly base.
2. Align the I/O slots with the I/O ports and the screw holes on the I/O bracket with the screw holes on the display-assembly base.
3. Replace the two screws (M3x5) that secure the I/O bracket to the display-assembly base.
4. Place the power-supply unit connector on the display-assembly base.
5. Align the power-supply unit connector screw holes with the screw holes on the display-assembly base.
6. Replace the two screws (M3x5) that secure the power-supply cable connector bracket to the display-assembly base.

Next steps

1. Install the [bottom cover](#).
2. Install the [I/O cover](#).
3. Install the [system-board shield](#).
4. Install the [back cover](#).
5. Install the [stand](#).
6. Follow the procedure in [After working inside your computer](#).

Speakers

Removing the speakers

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).
6. Remove the [bottom cover](#).

About this task

The following image indicates the location of the speakers and provides a visual representation of the removal procedure.

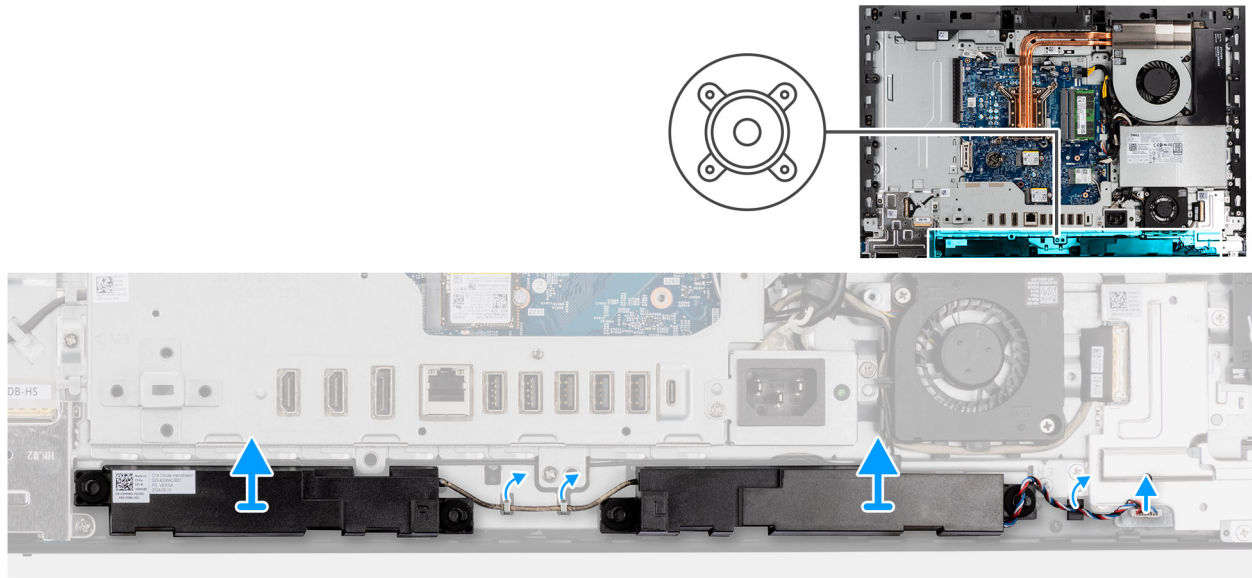


Figure 57. Removing the speakers

Steps

1. Disconnect the speaker cable from its connector (INT SPKR) on the audio board.
2. Remove the speaker cable from its routing guides on the display-assembly base.
3. Lift the speakers and its cable off the display-assembly base.

Installing the speakers

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the speakers and provides a visual representation of the installation procedure.

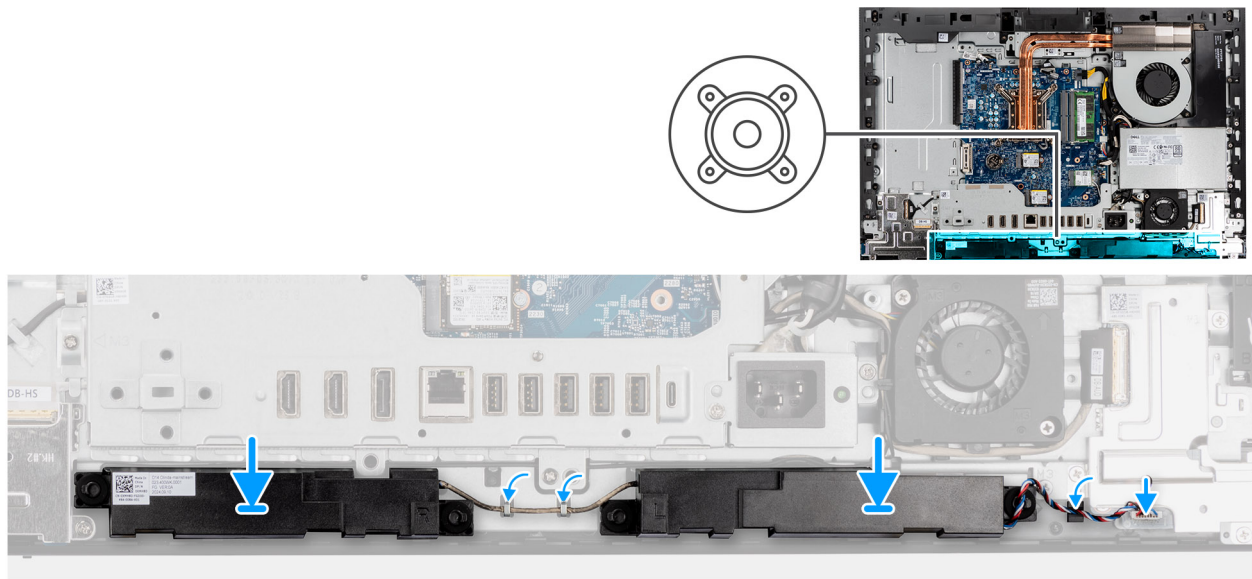


Figure 58. Installing the speakers

Steps

1. Insert the speakers into their slots on the display-assembly base.
2. Route the speaker cable through the routing guides on the display-assembly base.
3. Connect the speaker cable to its connector (INT SPKR) on the audio board.

Next steps

1. Install the [bottom cover](#).
2. Install the [I/O cover](#).
3. Install the [system-board shield](#).
4. Install the [back cover](#).
5. Install the [stand](#).
6. Follow the procedure in [After working inside your computer](#).

Heat sink

Removing the heat sink

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).

About this task

- NOTE:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.
- NOTE:** For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

The following image indicates the location of the heat sink and provides a visual representation of the removal procedure.

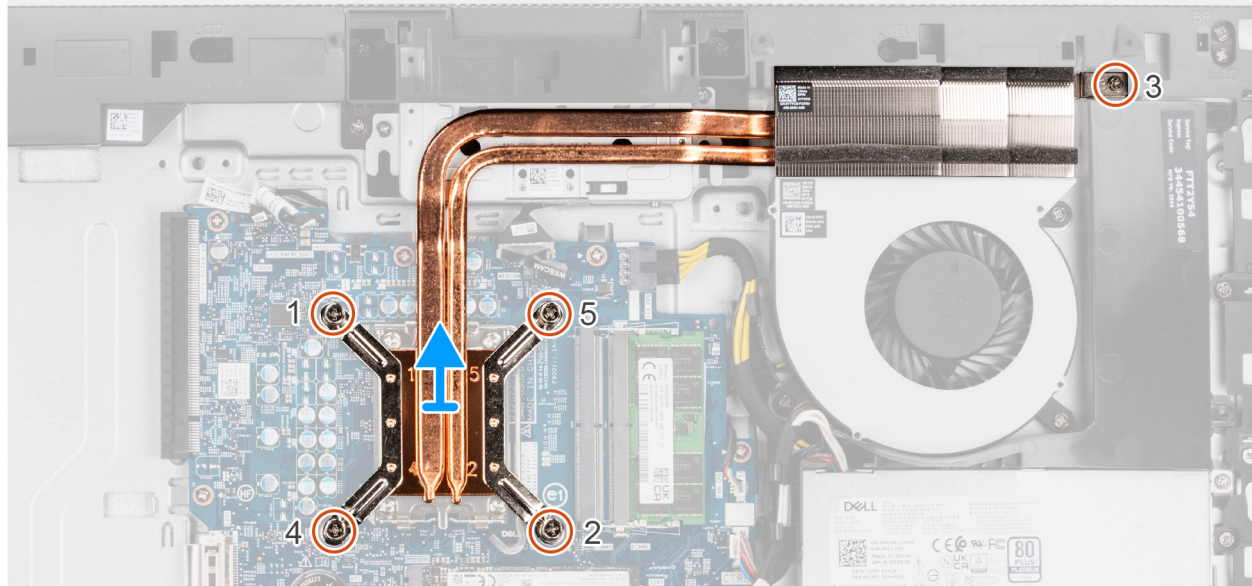
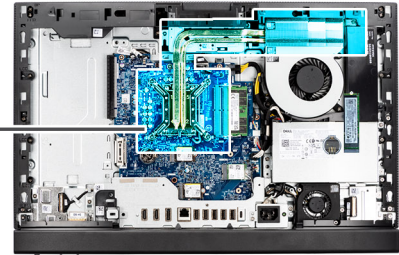


Figure 59. Removing the heat sink

Steps

1. In reverse sequential order (5>4>3>2>1) loosen the five captive screws that secure the heat sink to the system board and the display-assembly base.
2. Lift the heat sink off the display-assembly base.

Installing the heat sink

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: If the processor and the heat sink are replaced, use the thermal grease provided in the kit to ensure optimal thermal conductivity.

The following image indicates the location of the heat sink and provides a visual representation of the installation procedure.



5x

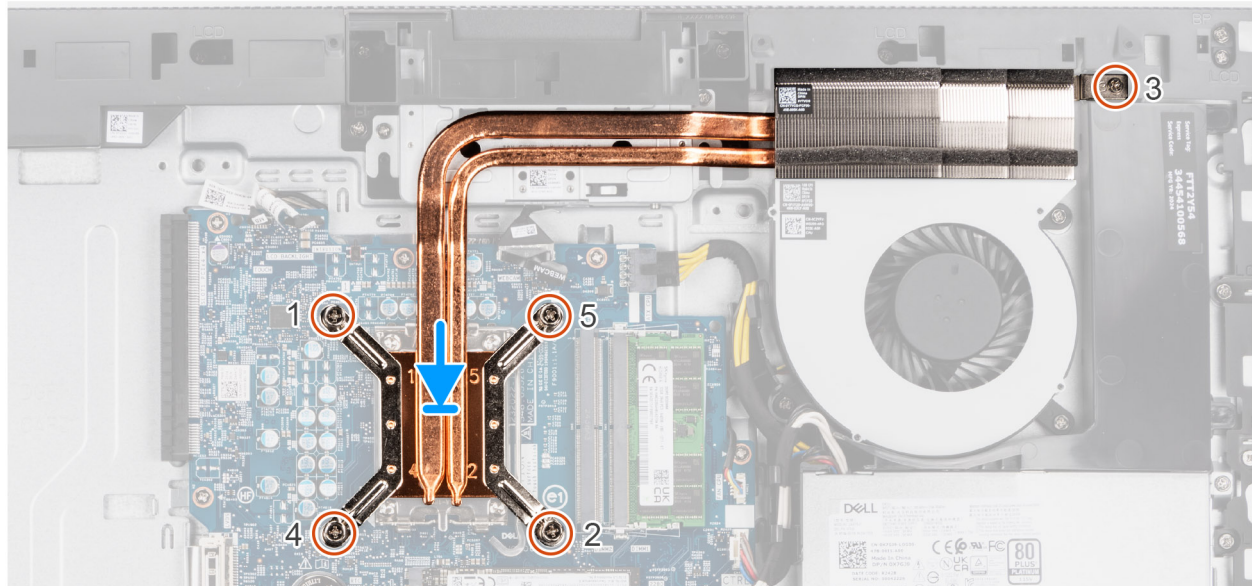
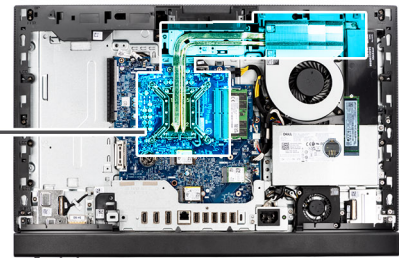


Figure 60. Installing the heat sink

Steps

1. Place the heat sink on the system board and the display-assembly base.
2. Align the screws on the heat sink with the screw holes on the system board and the display-assembly base.
3. In sequential order (1>2>3>4>5) tighten the five captive screws to secure the heat sink to the system board and the display-assembly base.

Next steps

1. Install the [system-board shield](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your computer](#).

Processor

Removing the processor

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [heat sink](#).

About this task

- NOTE:** The processor may become hot during normal operation. Allow sufficient time for the processor to cool before you touch it.
- NOTE:** For maximum cooling of the processor, do not touch the heat transfer areas on the processor. The oils in your skin can reduce the heat transfer capability of the thermal grease.

The following image indicates the location of the processor and provides a visual representation of the removal procedure.

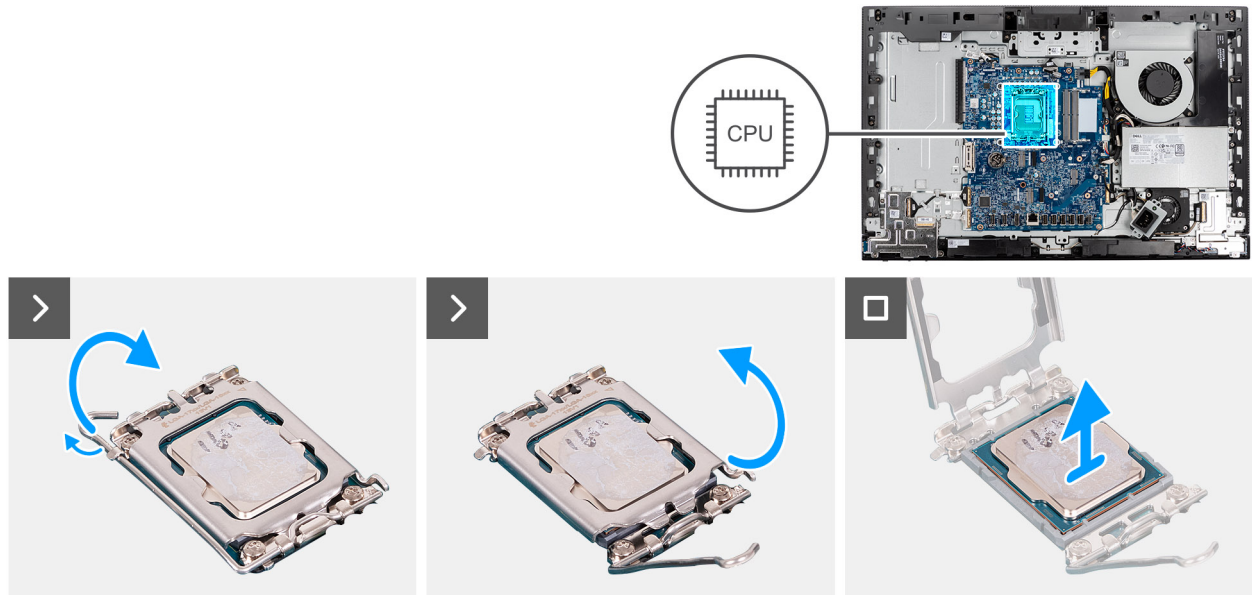


Figure 61. Removing the processor

Steps

1. Press the release lever down and then push it away from the processor to release it from the securing tab.
2. Extend the release lever completely and open the processor cover.
CAUTION: When removing the processor, do not touch any of the pins inside the socket or allow any objects to fall on the pins in the socket.
3. Gently lift the processor from the processor socket (CPU).

Installing the processor

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

- NOTE:** If either the processor or the heat sink are replaced, use the thermal grease provided in the kit to ensure optimal thermal conductivity.

The following image indicates the location of the processor and provides a visual representation of the installation procedure.

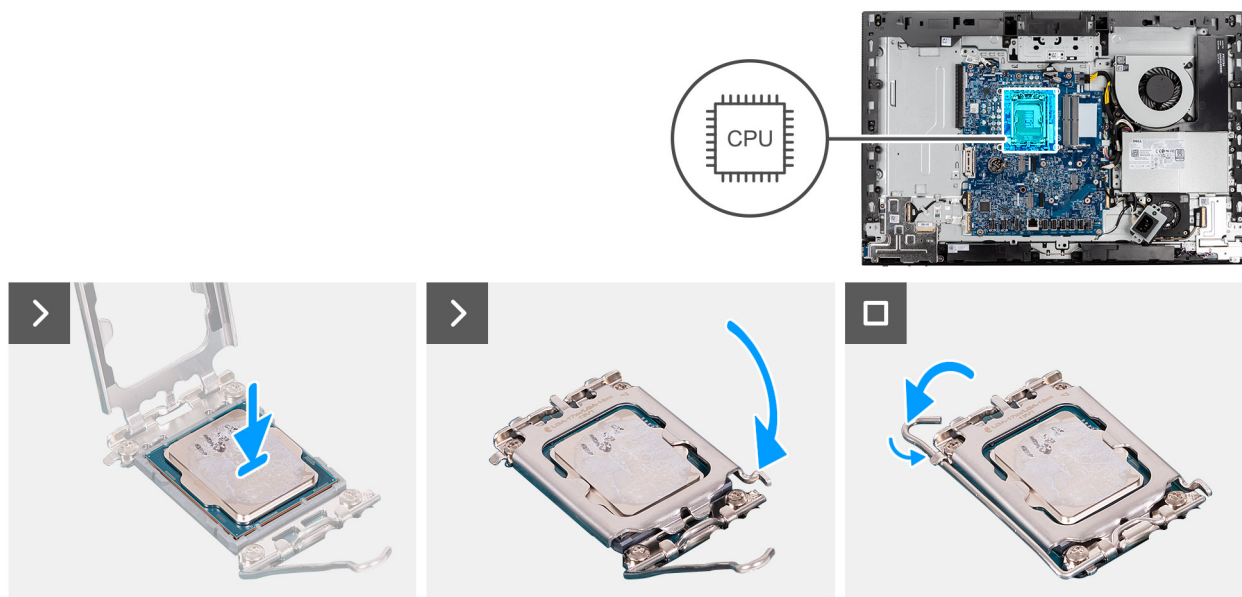


Figure 62. Installing the processor

Steps

1. Ensure that the release lever on the processor socket is fully extended in the open position.

NOTE: The pin-1 corner of the processor has a triangle that aligns with the triangle on the pin-1 corner on the processor socket. When the processor is properly seated, all four corners are aligned at the same height. If one or more corners of the processor is higher than the others, the processor is not seated properly.

2. Align the notches on the processor with the tabs on the processor socket and place the processor in the processor socket (CPU).

CAUTION: Ensure that the processor-cover notch is positioned underneath the alignment post.

3. When the processor is fully seated in the socket, pivot the release-lever down and place it under the tab on the processor cover.

Next steps

1. Install the [heat sink](#).
2. Install the [system-board shield](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your computer](#).

System board

Removing the system board

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [memory](#).
5. Remove the [graphics-card assembly](#).

6. Remove the [system-board shield](#).
7. Remove the [I/O cover](#).
8. Remove the [bottom cover](#).
9. Remove the [I/O bracket](#).
10. Remove the [M.2 2230 solid-state drive in slot 0](#) or the [M.2 2280 solid-state drive in slot 0](#), whichever is applicable.
11. Remove the [M.2 2230 solid-state drive in slot 1](#) or the [M.2 2280 solid-state drive in slot 1](#), whichever is applicable.
12. Remove the [wireless card](#).
13. Remove the [heat sink](#).
14. Remove the [processor](#).

About this task

NOTE: Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. Make the appropriate changes again after you replace the system board.

The following image indicates the connectors on your system-board.

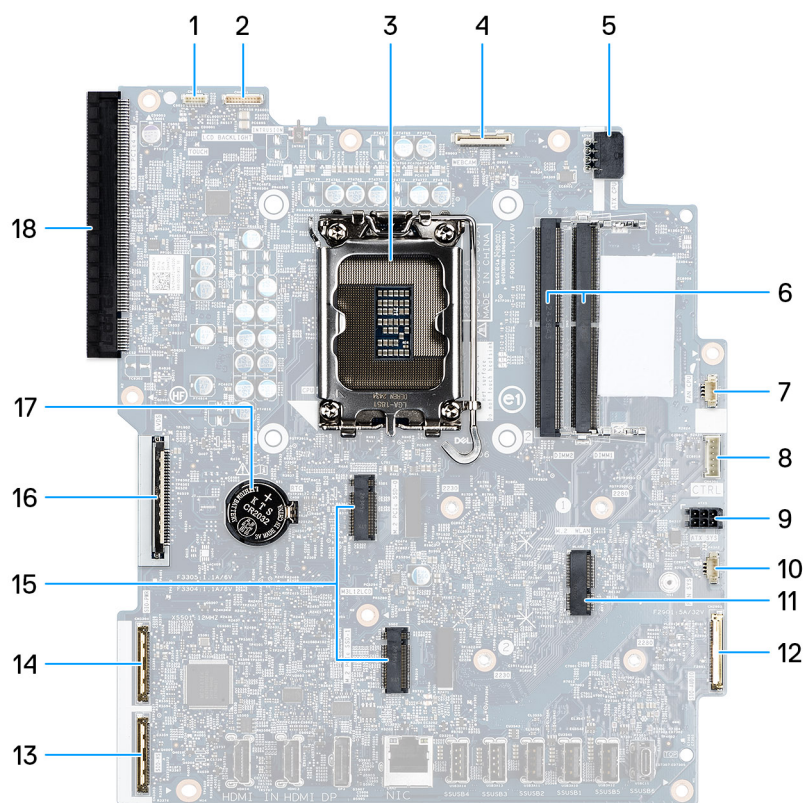


Figure 63. System board callouts

- | | |
|---|---|
| 1. Touchscreen cable (TOUCH) | 2. Display-backlight cable (LCD BACKLIGHT) |
| 3. Processor socket (CPU) | 4. Camera cable (WEBCAM) |
| 5. Processor-power cable (ATX CPU) | 6. Memory slots (DIMM1 + DIMM2) |
| 7. Fan cable (FAN CPU) | 8. Control-signal cable (CTRL) |
| 9. System-board power cable (ATX SYS) | 10. Power-supply fan cable (FAN SYS) |
| 11. Wireless-card slot (M.2 WLAN) | 12. Audio cable (MB-AUDIO) |
| 13. High-speed cable (MB-HS) | 14. Power cable (MB-PWR) |
| 15. Solid-state drive slots (M.2 PCIe SSD 1 + M.2 PCIe SSD 0) | 16. Display cable (LVDS) |
| 17. Coin-cell battery socket (RTC) | 18. PCIe x 16 expansion slot (SLOT1 PCIe4 x8) |

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

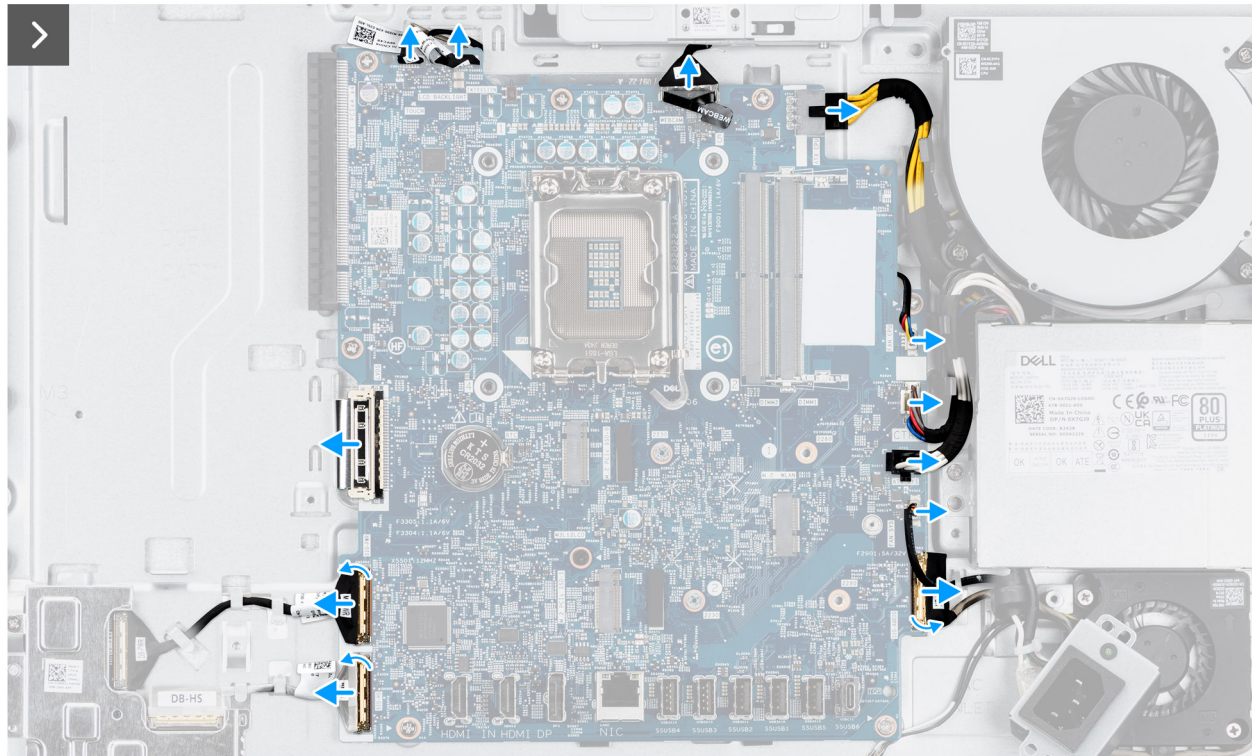
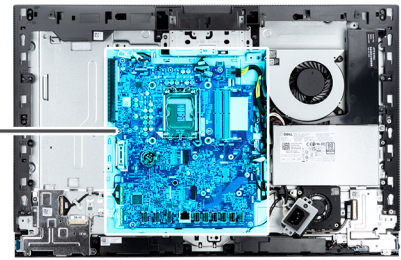
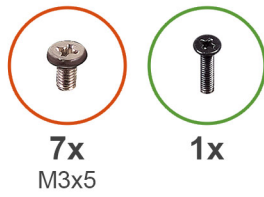


Figure 64. Removing the system board

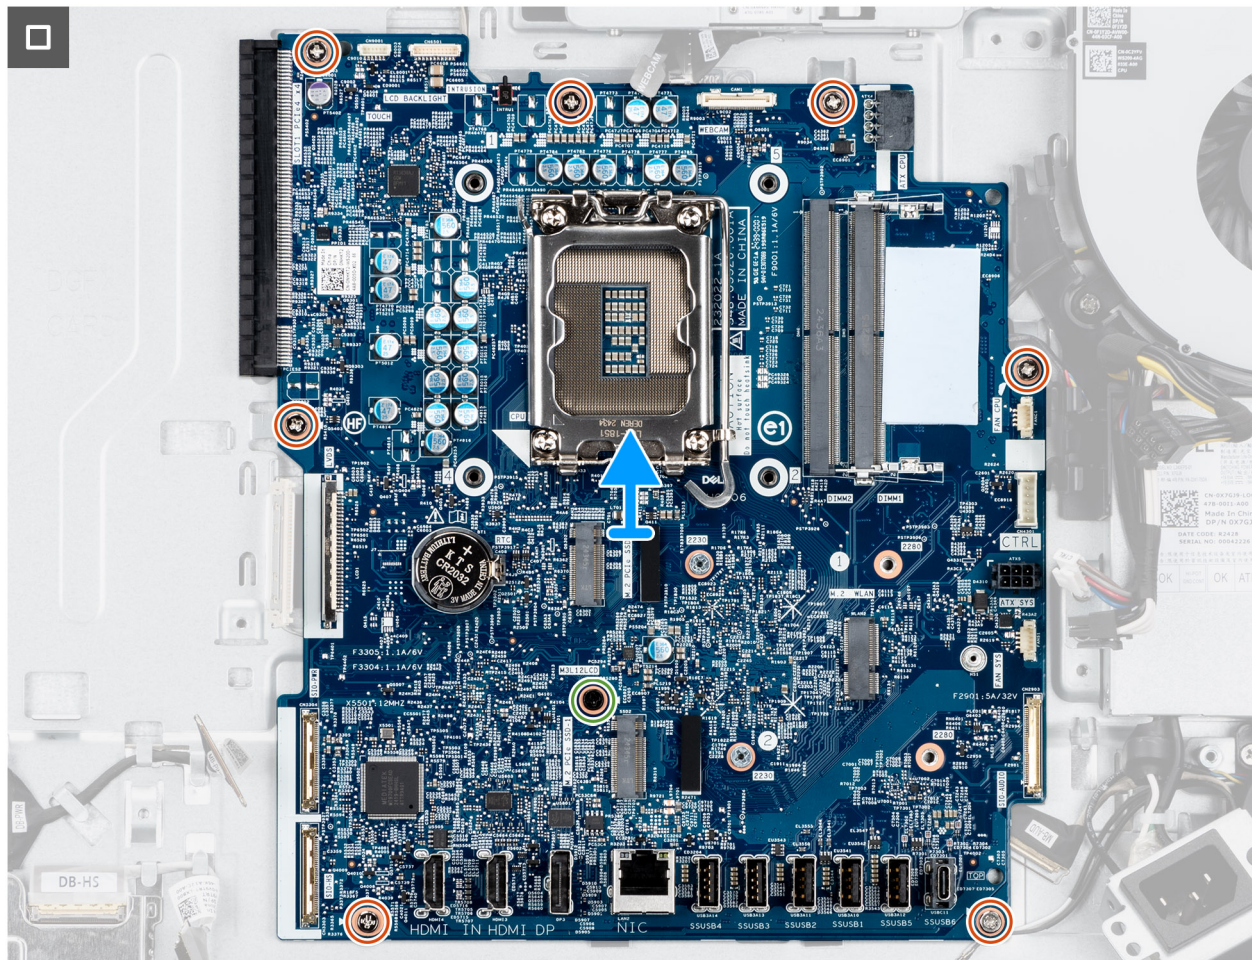


Figure 65. Removing the system board

Steps

1. Disconnect the touchscreen cable from its connector (TOUCH) on the system board.
2. Disconnect the display-backlight cable from its connector (LCB BACKLIGHT) on the system board.
3. Using the pull tab, disconnect the camera cable from its connector (WEBCAM) on the system board.
4. Press and hold the securing clip and disconnect the processor-power cable from its connector (ATX CPU) on the system board.
5. Disconnect the fan cable from its connector (FAN CPU) on the system board.
6. Disconnect the control-signal cable from its connector (CTRL) on the system board.
7. Disconnect the system-board power cable from its connector (ATX SYS) on the system board.
8. Disconnect the power-supply fan cable from its connector (FAN SYS) on the system board.
9. Lift the latch and disconnect the audio cable from its connector (MB-AUDIO) on the system board.
10. Lift the latch and disconnect the high-speed cable from its connector (MB-HS) on the system board.
11. Lift the latch and disconnect the power cable from its connector (MB-PWR) on the system board.
12. Pinching the securing clips on either side of the display-cable connector, disconnect the display cable from its connector (LVDS) on the system board.
13. Remove the seven screws (M3x5) that secure the system board to the display-assembly base.
14. Remove the screw (M3x12) that secures the system board to the display-assembly base.
15. Gently lift the system board off the display-assembly base.

Installing the system board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. Make the appropriate changes again after you replace the system board.

The following image indicates the connectors on your system-board.

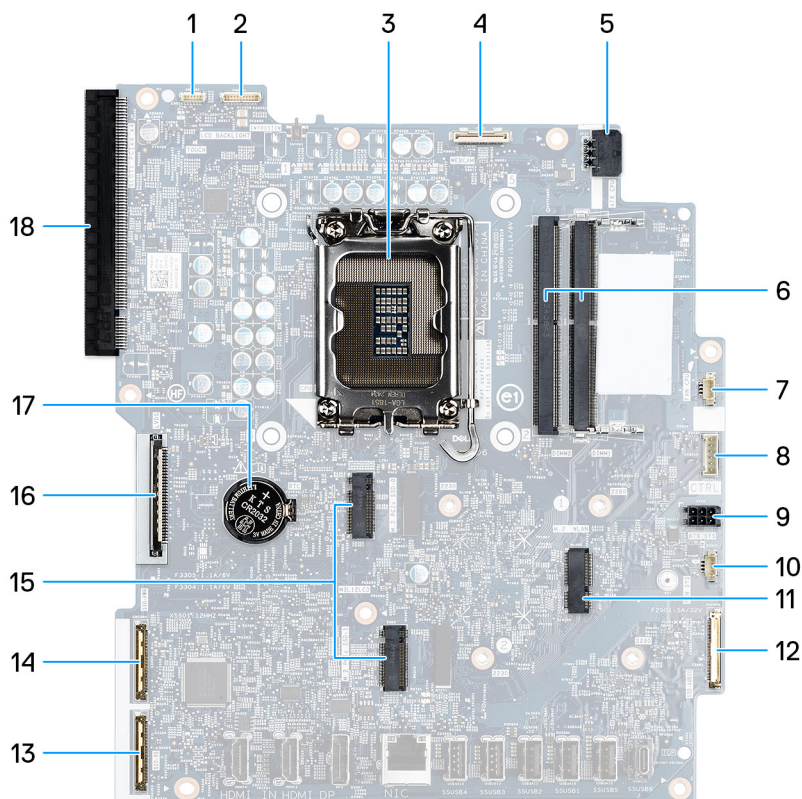


Figure 66. System board callouts

- | | |
|---|---|
| 1. Touchscreen cable (TOUCH) | 2. Display-backlight cable (LCD BACKLIGHT) |
| 3. Processor socket (CPU) | 4. Camera cable (WEBCAM) |
| 5. Processor-power cable (ATX CPU) | 6. Memory slots (DIMM1 + DIMM2) |
| 7. Fan cable (FAN CPU) | 8. Control-signal cable (CTRL) |
| 9. System-board power cable (ATX SYS) | 10. Power-supply fan cable (FAN SYS) |
| 11. Wireless-card slot (M.2 WLAN) | 12. Audio cable (MB-AUDIO) |
| 13. High-speed cable (MB-HS) | 14. Power cable (MB-PWR) |
| 15. Solid-state drive slots (M.2 PCIe SSD 1 + M.2 PCIe SSD 0) | 16. Display cable (LVDS) |
| 17. Coin-cell battery socket (RTC) | 18. PCIe x 16 expansion slot (SLOT1 PCIe4 x8) |

The following images indicate the location of the system board and provide a visual representation of the installation procedure.

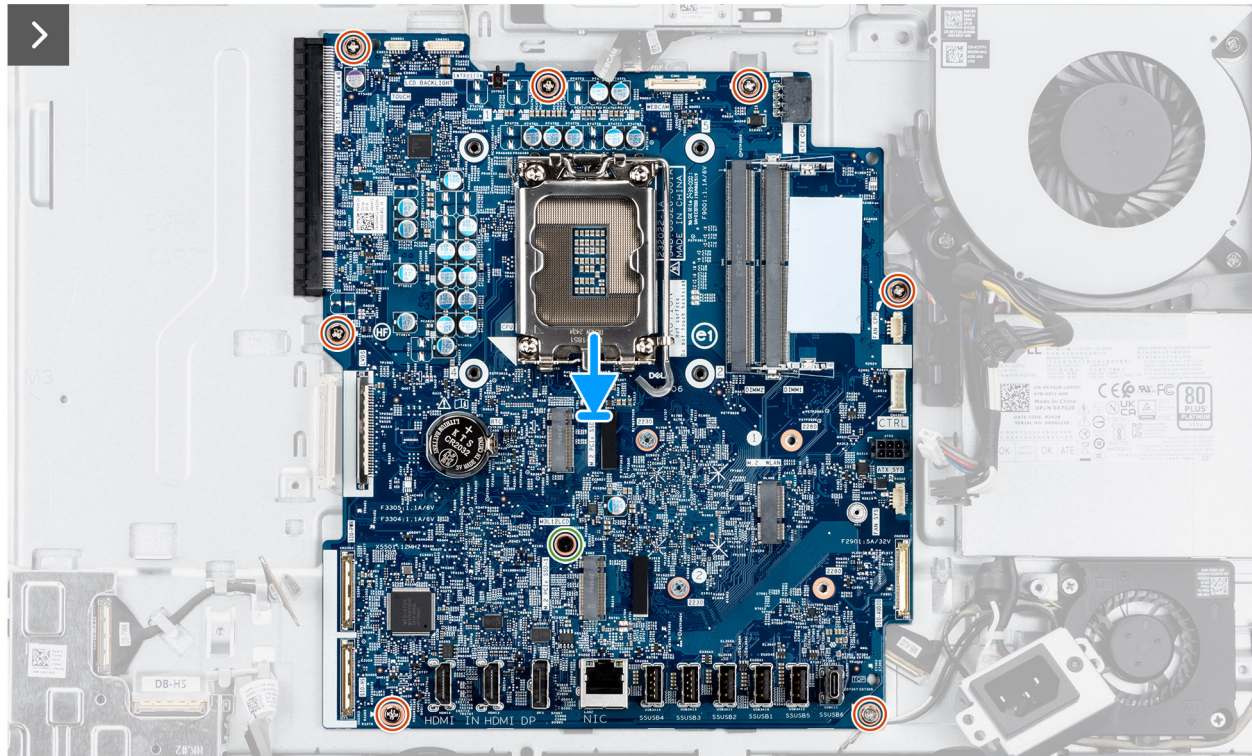
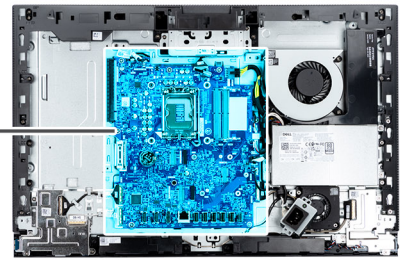


Figure 67. Installing the system board

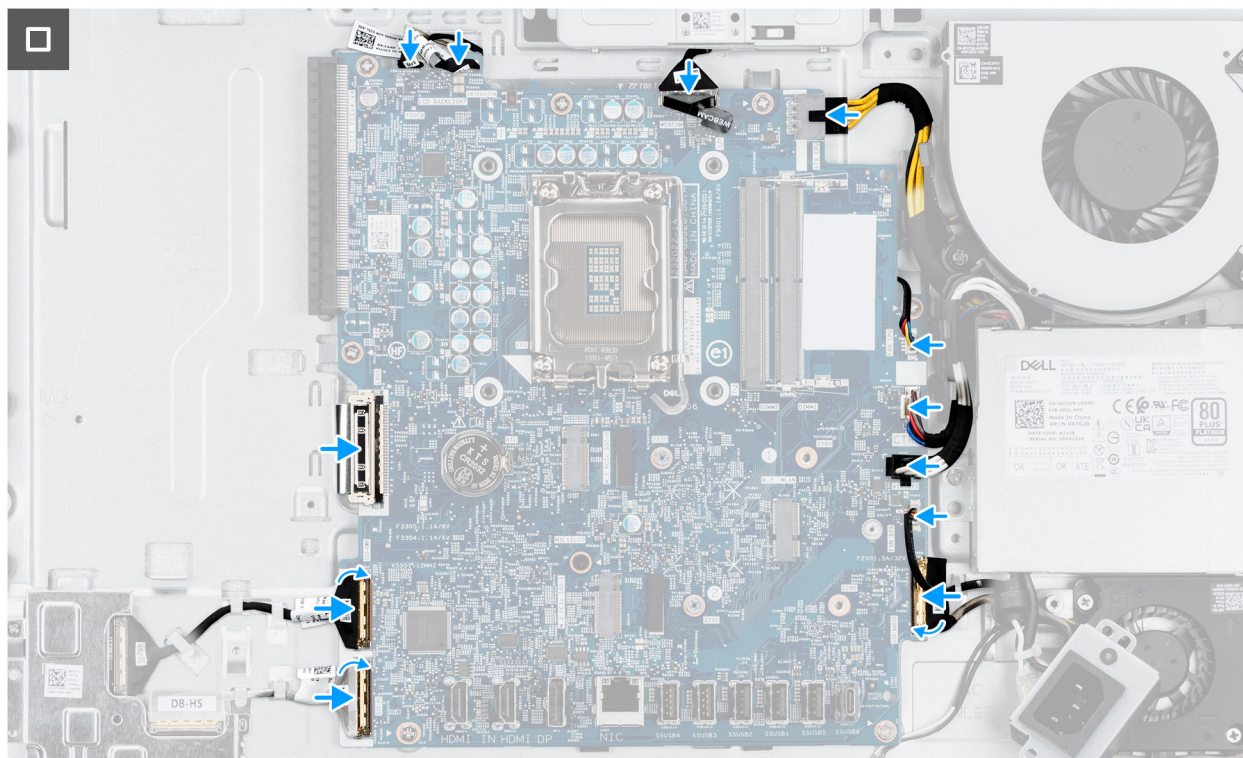


Figure 68. Installing the system board

Steps

1. Gently place the system board on the display-assembly base.
2. Align the screw holes on the system board with the screw holes on the display-assembly base.
3. Replace the seven screws (M3x5) to secure the system board to the display-assembly base.
4. Replace the screw (M3x12) to secure the system board to the display-assembly base.
5. Connect the touchscreen cable to its connector (TOUCH) on the system board.
6. Connect the display-backlight cable to its connector (LCB BACKLIGHT) on the system board.
7. Connect the camera cable to its connector (WEBCAM) on the system board.
8. Connect the processor-power cable to its connector (ATX CPU) on the system board.
9. Connect the fan cable to its connector (FAN CPU) on the system board.
10. Connect the control-signal cable to its connector (CTRL) on the system board.
11. Connect the system-board power cable to its connector (ATX SYS) on the system board.
12. Connect the power-supply fan cable to its connector (FAN SYS) on the system board.
13. Connect the audio cable to its connector (MB-AUDIO) on the system board and close the latch.
14. Connect the high-speed cable to its connector (MB-HS) on the system board and close the latch.
15. Connect the power cable to its connector (MB-PWR) on the system board and close the latch.
16. Connect the display cable to its connector (LVDS) on the system board.

Next steps

1. Install the [processor](#).
2. Install the [heat sink](#).
3. Install the [wireless card](#).
4. Install the [M.2 2230 solid-state drive in slot 0](#) or the [M.2 2280 solid-state drive in slot 0](#), whichever is applicable.
5. Install the [M.2 2230 solid-state drive in slot 1](#) or the [M.2 2280 solid-state drive in slot 1](#), whichever is applicable.
6. Install the [I/O bracket](#).
7. Install the [bottom cover](#).
8. Install the [I/O cover](#).
9. Install the [system-board shield](#).

10. Install the [graphic-card assembly](#).
11. Install the [memory](#).
12. Install the [back cover](#).
13. Install the [stand](#).
14. Follow the procedure in [After working inside your computer](#).

Power-button and I/O board

Removing the power-button and I/O board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).
6. Remove the [bottom cover](#).
7. Remove the [I/O bracket](#).

About this task

The following image indicates the location of the power-button and I/O board and provides a visual representation of the removal procedure.

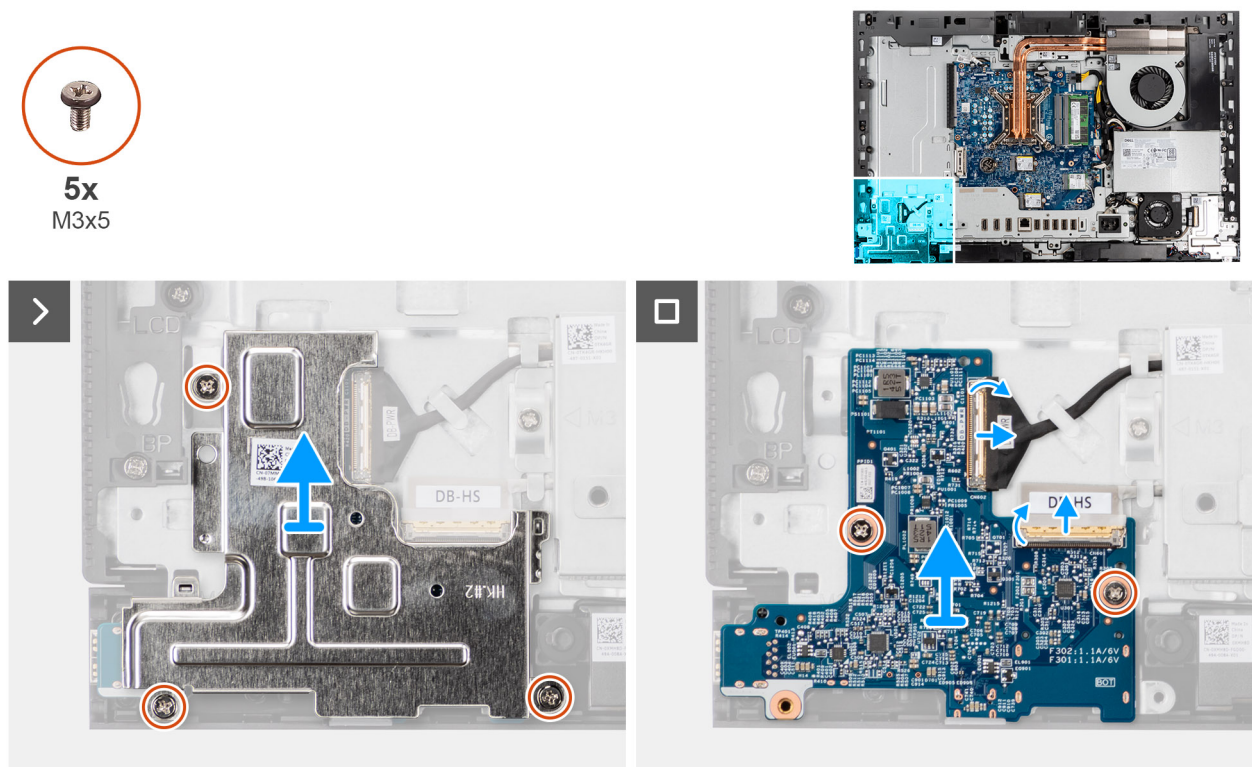


Figure 69. Removing the power-button and I/O board

Steps

1. Remove the three screws (M3x5) that secure the power-button and I/O board shield to the display-assembly base.

2. Lift the power-button and I/O board shield off the display-assembly base.
3. Lift the latch and disconnect the power cable from its connector (DB-PWR) on the power-button and I/O board.
4. Lift the latch and disconnect the high-speed cable from its connector (DB-HS) on the power-button and I/O board.
5. Remove the two screws (M3x5) that secure the power-button and I/O board to the display-assembly base.
6. Lift the power-button and I/O board off the display-assembly base.

Installing the power-button and I/O board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the power-button and I/O board and provides a visual representation of the installation procedure.

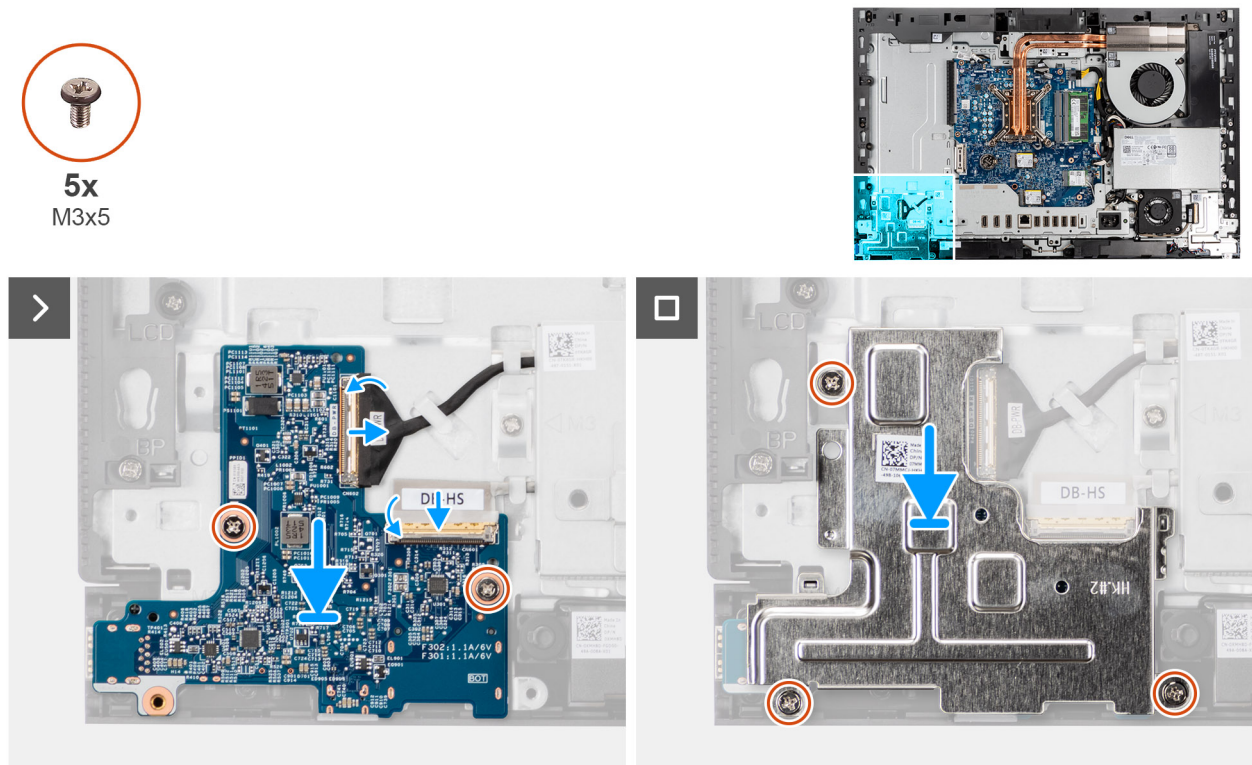


Figure 70. Installing the power-button and I/O board

Steps

1. Place the power-button and I/O board on the display-assembly base.
2. Align the screw holes on the power-button and I/O board with the screw holes on the display-assembly base.
3. Replace the two screws (M3x5) to secure the power-button and I/O board to the display-assembly base.
4. Connect the power cable to its connector (DB-PWR) on the power-button and I/O board and close the latch.
5. Connect the high-speed cable to its connector (DB-PWR) on the power-button and I/O board and close the latch.
6. Place the power-button and I/O board shield on the display-assembly base.
7. Align the screw holes on the power-button and I/O board shield with the screw holes on the display-assembly base.
8. Replace the three screws (M3x5) to secure the power-button and I/O board shield to the display-assembly base.

Next steps

1. Install the [I/O bracket](#).
2. Install the [bottom cover](#).
3. Install the [I/O cover](#).
4. Install the [system-board shield](#).
5. Install the [back cover](#).
6. Install the [stand](#).
7. Follow the procedure in [After working inside your computer](#).

Audio board

Removing the audio board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [system-board shield](#).
5. Remove the [I/O cover](#).
6. Remove the [bottom cover](#).
7. Remove the [I/O bracket](#).

About this task

The following image indicates the location of the audio board and provides a visual representation of the removal procedure.

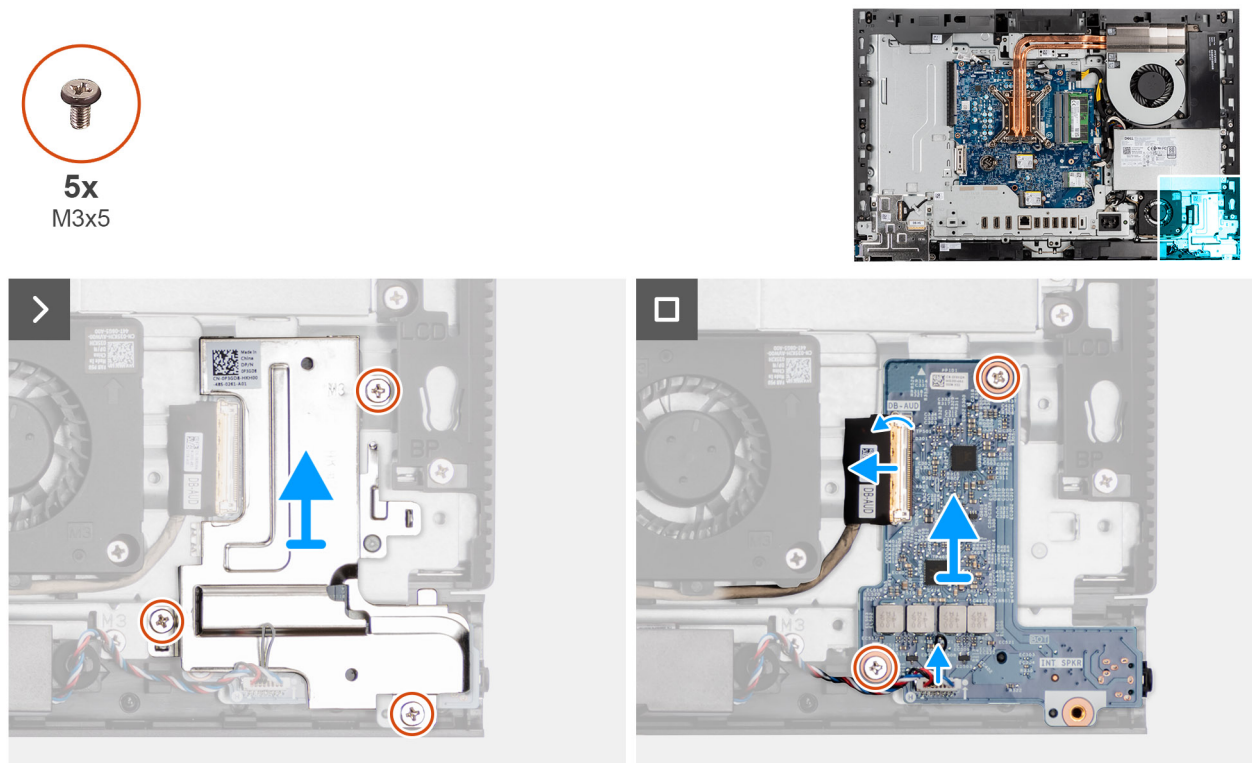


Figure 71. Removing the audio board

Steps

1. Remove the three screws (M3x5) that secure the audio-board shield to the display-assembly base.
2. Lift the audio-board shield off the display-assembly base.
3. Lift the latch and disconnect the audio cable from its connector (DB-AUDIO) on the audio board.
4. Disconnect the speaker cable from its connector (INT SPKR) on the audio board.
5. Remove the two screws (M3x5) that secure the audio board to the display-assembly base.
6. Lift the audio board off the display-assembly base.

Installing the audio board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the audio board and provides a visual representation of the installation procedure.

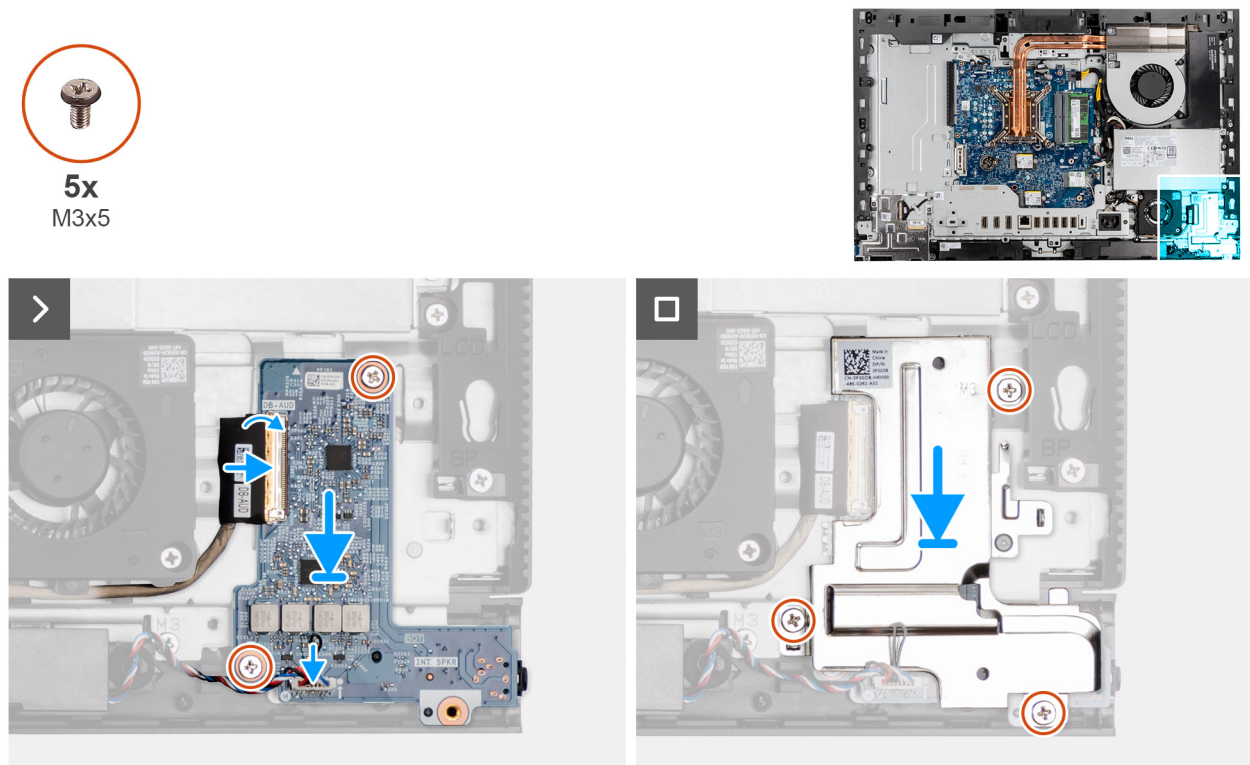


Figure 72. Installing the audio board

Steps

1. Place the audio board on the display-assembly base.
2. Align the screw holes on the audio board with the screw holes on the display-assembly base.
3. Replace the two screws (M3x5) to secure the audio board to the display-assembly base.
4. Connect the audio cable to its connector (DB-AUDIO) on the audio board and close the latch.
5. Connect the speaker cable to its connector (INT SPKR) to the audio board.
6. Place the audio-board shield on the display-assembly base.
7. Align the screw holes on the audio-board shield with the screw holes on the display-assembly base.
8. Replace the three screws (M3x5) to secure the audio-board shield to the display-assembly base.

Next steps

1. Install the [I/O bracket](#).
2. Install the [bottom cover](#).
3. Install the [I/O cover](#).
4. Install the [system-board shield](#).
5. Install the [back cover](#).
6. Install the [stand](#).
7. Follow the procedure in [After working inside your computer](#).


Display-assembly base

Removing the display-assembly base

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [graphics-card assembly](#).
5. Remove the [system-board shield](#).
6. Remove the [wireless card](#).
7. Remove the [I/O cover](#).
8. Remove the [bottom cover](#).
9. Remove the [retractable-camera assembly](#).
10. Remove the [fan](#).
11. Remove the [power-supply unit](#).
12. Remove the [power-supply fan](#).
13. Remove the [I/O bracket](#).
14. Remove the [speakers](#).
15. Remove the [heat sink](#).
16. Remove the [system board](#).

 **NOTE:** The system board can be removed with the memory, solid-state drive(s), coin-cell battery, and processor attached.

17. Remove the [audio board](#).
18. Remove the [power-button and I/O board](#).

About this task

 **NOTE:** The display-assembly base includes the following components:

- Antenna modules
- Display panel
- Middle frame

To replace any of these components, replace the entire display-assembly base.

The following image indicates the location of the display-assembly base.

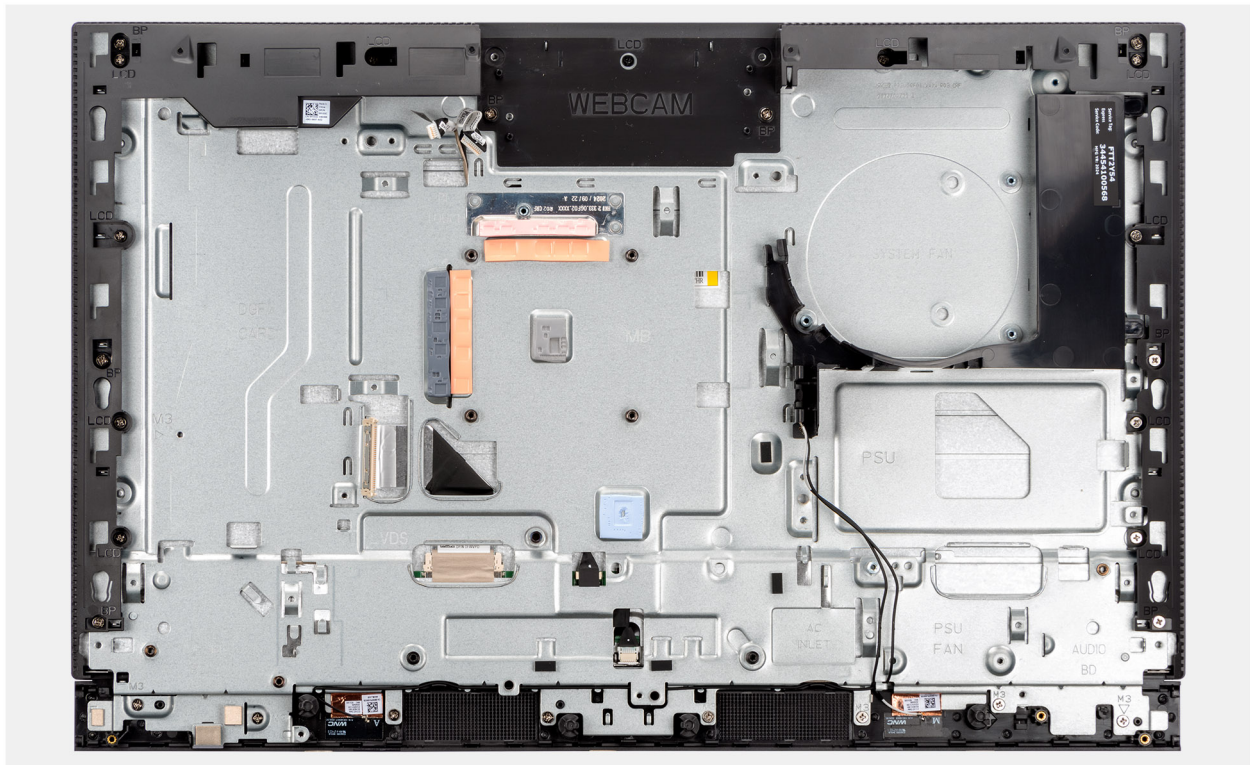


Figure 73. Removing the display-assembly base

Steps

After performing the pre-requisites, you are left with the display-assembly base.

Installing the display-assembly base

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: The display-assembly base includes the following components:

- Antenna modules
- Display panel
- Middle frame

To replace any of these components, replace the entire display-assembly base.

The following image indicates the location of the display-assembly base.

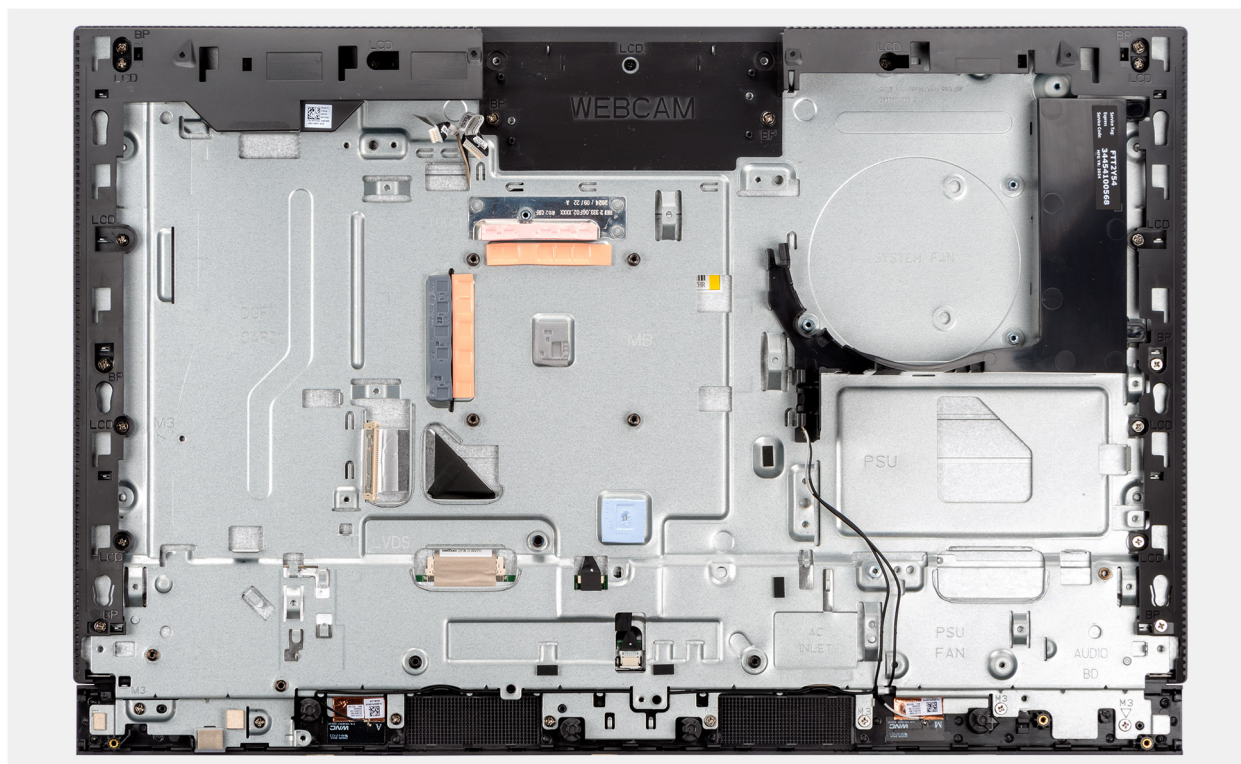


Figure 74. Removing the display-assembly base

Steps

To install the display-assembly base, perform all the post-requisite procedures.

Next steps

1. Install the [power-button and I/O board](#).
2. Install the [audio board](#).
3. Install the [system board](#).

NOTE: The system board can be installed with the memory, solid-state drive(s), coin-cell battery, and processor pre-attached.

4. Install the [heat sink](#).
5. Install the [speakers](#).
6. Install the [I/O bracket](#).
7. Install the [power-supply fan](#).
8. Install the [power-supply unit](#).
9. Install the [fan](#).
10. Install the [retractable-camera assembly](#).
11. Install the [bottom cover](#).
12. Install the [I/O cover](#).
13. Install the [wireless card](#).
14. Install the [system-board shield](#).
15. Install the [graphic-card assembly](#).
16. Install the [back cover](#).
17. Install the [stand](#).
18. Follow the procedure in [After working inside your computer](#).

Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Operating system

Your Dell Pro 24 All-in-One Plus QB24250 supports the following operating systems:

- Windows 11 Home
- Windows 11 Professional
- Windows 11 Pro National Academic
- Ubuntu Linux 24.04 LTS

Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell Knowledge Base article Drivers and Downloads FAQs [000123347](#).

BIOS Setup

CAUTION: Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

NOTE: Depending on the computer and the installed devices, the options that are listed in this section may or may not be displayed.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of storage device that is installed, and enable or disable base devices.

Entering BIOS Setup program

About this task

Turn on (or restart) your computer and press F2 immediately.

Navigation keys

NOTE: For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

Table 25. Navigation keys

| Keys | Navigation |
|------------|--|
| Up arrow | Moves to the previous field. |
| Down arrow | Moves to the next field. |
| Enter | Selects a value in the selected field (if applicable) or follows the link in the field. |
| Spacebar | Expands or collapses a drop-down list, if applicable. |
| Tab | Moves to the next focus area. |
| Esc | Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer. |

F12 One Time Boot menu


To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

NOTE: If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)

- STXXXX Drive (if available)

 **NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

System setup options

 **NOTE:** Depending on your computer and its installed devices, the items listed in this section may or may not appear.

Table 26. System setup options—System information menu

| Overview | |
|-------------------------------|---|
| BIOS Version | Displays the BIOS version number. |
| Service Tag | Displays the Service Tag of the computer. |
| Asset Tag | Displays the Asset Tag of the computer. |
| Manufacture Date | Displays the manufacture date of the computer. |
| Ownership Date | Displays the ownership date of the computer. |
| Express Service Code | Displays the express service code of the computer. |
| Ownership Tag | Displays the Ownership Tag of the computer. |
| Processor Information | |
| Processor Type | Displays the processor type. |
| Maximum Clock Speed | Displays the maximum processor clock speed. |
| Core Count | Displays the number of cores on the processor. |
| Processor ID | Displays the processor identification code. |
| Processor L2 Cache | Displays the processor L2 Cache size. |
| Processor L3 Cache | Displays the processor L3 Cache size. |
| Microcode Version | Displays the microcode version. |
| Intel Hyper-Threading Capable | Displays whether the processor is Hyper-Threading (HT) capable. |
| Intel vPro Technology | Displays whether vPro technology is used. |
| Memory Information | |
| Memory Installed | Displays the total computer memory installed. |
| Memory Available | Displays the total computer memory available. |
| Memory Speed | Displays the memory speed. |
| Memory Technology | Displays the technology used for the memory. |
| DIMM 1 Size | Displays the DIMM 1 memory size. |
| DIMM 2 Size | Displays the DIMM 2 memory size. |
| Devices Information | |
| Panel Type | Displays the Panel Type of the computer. |
| Video Controller | Displays the video controller type of the computer. |
| Video Memory | Displays the video memory information of the computer. |
| Wi-Fi Device | Displays the wireless device information of the computer. |

Table 26. System setup options—System information menu (continued)

| Overview | |
|--------------------|--|
| Native Resolution | Displays the native resolution of the computer. |
| Video BIOS Version | Displays the video BIOS version of the computer. |
| Audio Controller | Displays the audio controller information of the computer. |
| Bluetooth Device | Displays the Bluetooth device information of the computer. |
| LOM MAC Address | Displays the LAN On Motherboard (LOM) MAC address of the computer. |
| Slot1 PCIe4 x4 | Displays the M.2 PCIe information of the computer |

Table 27. System setup options—Boot Configuration menu

| Boot Configuration | |
|-------------------------------|--|
| Boot Sequence | |
| Boot Sequence | Displays the boot sequence. |
| Enable PXE Boot Priority | Enables a new PXE boot option, if detected, to be added to the top of the Boot Sequence. |
| Force PXE On Next Boot | <p>Enable or disable the Force PXE feature on next boot.</p> <p>By default, the Enable Force PXE On Next Boot option is not enabled.</p> |
| Secure Digital (SD) Card Boot | <p>Enable or disable the SD card read-only boot.</p> <p>By default, the Secure Digital (SD) Card Boot option is not enabled.</p> |
| Secure Boot | |
| | <p>Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process.</p> |
| Enable Secure Boot | <p>Enables the computer to boot using only validated boot software.</p> <p>By default, the Enable Secure Boot option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Secure Boot option enabled to ensure that the UEFI firmware validates the operating system during the boot process.</p> <p>NOTE: For Secure Boot to be enabled, the computer is required to be in UEFI boot mode and the Enable Legacy Option ROMs option is required to be turned off.</p> |
| Enable Microsoft UEFI CA | <p>Include or remove the Microsoft UEFI CA in the BIOS UEFI Secure Boot DB database by enabling or disabling this option.</p> <p>By default, the Enable Microsoft UEFI CA option is disabled.</p> |
| Secure Boot Mode | <p>Enables or disables the Secure Boot operation mode.</p> <p>By default, the Deployed Mode is selected.</p> <p>NOTE: Deployed Mode should be selected for normal operation of Secure Boot.</p> |
| Expert Key Management | |
| Enable Custom Mode | <p>Enables the PK, KEK, db, and dbx security key databases to be modified.</p> <p>By default, this option is disabled.</p> |

Table 28. System setup options—Integrated Devices menu

| Integrated Devices | |
|--------------------|---|
| Date/Time | Displays the current date in MM/DD/YYYY format and current time in HH:MM:SS AM/PM format. |

Table 28. System setup options—Integrated Devices menu (continued)

| Integrated Devices | |
|-------------------------------|---|
| Camera | <p>Enables or disable the camera.</p> <p>By default, the Enable Camera option is selected</p> |
| Audio | |
| Enable Audio | <p>Enable or disable the integrated audio controller, microphone and the internal speaker separately.</p> <p>By default, all the options are enabled.</p> |
| USB Configuration | <p>Enable or disable booting from USB mass storage devices through the boot sequence or boot menu.</p> <p>By default, all the options are enabled.</p> |
| Side USB Configuration | <p>Enable or disable the individual side USB ports.</p> <p>By default, the Side USB Port 1 (Bottom TypeC) and Side USB Port 2 (Right) option are enabled.</p> <p>NOTE: Despite the description shown in the BIOS Side USB Port 1 (Bottom TypeC) refers to the USB port on the right side view of the computer and Side USB Port 2 (Right) refers to the USB port on the bottom view of the computer.</p> |
| Rear USB Configuration | <p>Enable or disable the individual rear USB ports.</p> <p>By default, all the options are enabled.</p> |

Table 29. System setup options—Storage menu

| Storage | |
|---|---|
| SATA/NVMe Operation | <p>Enable or disable the operating mode of the integrated SATA hard drive controller.</p> <p>By default, the RAID On option is enabled.</p> |
| Storage Interface | |
| Port Enablement | <p>Enable or disable the onboard drives.</p> <p>By default M.2 PCIe SSD-0 and M.2 PCIe SSD-1 options are enabled.</p> |
| SMART Reporting | |
| Enable SMART Reporting | <p>Enable or disable Self-Monitoring, Analysis, and Reporting Technology (SMART) during computer startup.</p> <p>By default, the Enable SMART Reporting option is not enabled.</p> |
| Drive Information | |
| M.2 PCIe SSD-0 | |
| Type | Displays the M.2 PCIe SSD-0 type information of the computer. |
| Device | Displays the M.2 PCIe SSD-0 device information of the computer. |
| M.2 PCIe SSD-1 | |
| Type | Displays the M.2 PCIe SSD-1 type information of the computer. |
| Device | Displays the M.2 PCIe SSD-1 device information of the computer. |
| Enable MediaCard | |
| Secure Digital (SD) Card | <p>Enable or disable the SD card.</p> <p>By default, the Secure Digital (SD) Card option is enabled.</p> |
| Secure Digital (SD) Card Read-Only Mode | Enable or disable the SD card read-only mode. |

Table 29. System setup options—Storage menu (continued)

| Storage | |
|---------|---|
| | By default, the Secure Digital (SD) Card Read-Only Mode option is not enabled. |

Table 30. System setup options—Display menu

| Display | |
|------------------------------|--|
| Touchscreen | Enable or disable the touchscreen. |
| OSD Button Management | |
| Disable OSD Buttons | Enable or disable the OSD (On-Screen Display) buttons on the computer. |
| Full Screen Logo | Enable or disable full screen logo. |
| | By default, the option is not enabled. |

Table 31. System setup options—Connection menu

| Connection | |
|---|--|
| Network Controller Configuration | |
| Integrated NIC | Controls the on-board LAN controller. |
| | By default, the Enabled with PXE option is enabled. |
| Wireless Device Enable | |
| WLAN | Enable or disable the internal WLAN device |
| | By default, the option enabled. |
| Bluetooth | Enable or disable the internal Bluetooth device |
| | By default, the option enabled. |
| Enable UEFI Network Stack | Enable or disable UEFI Network Stack and controls the on-board LAN Controller. |
| | By default, the option is enabled. |
| HTTPs Boot Feature | |
| HTTPs Boot | Enable or disable the HTTPs Boot feature. |
| | By default, the HTTPs Boot option is enabled. |
| HTTPs Boot Mode | With Auto Mode, the HTTPs Boot extracts Boot URL from the DHCP. With Manual Mode, the HTTPs Boot reads Boot URL from the user-provided data. |
| | By default, the Auto Mode option is enabled. |

Table 32. System setup options—Power menu

| Power | |
|-------------------------|--|
| USB PowerShare | |
| Enable USB PowerShare | Enable or disable the USB PowerShare. |
| | By default, the Enable USB PowerShare option is disabled |
| USB Wake Support | |
| Enable USB Wake Support | When enabled, you can use the USB devices like a mouse or keyboard to wake your computer from standby. |
| | By default, the option is enabled. |
| AC Behavior | |

Table 32. System setup options—Power menu (continued)

| Power | |
|----------------------|---|
| AC Recovery | <p>Enables the system to turn on automatically, when AC is inserted.</p> <p>By default, the Power Off option is enabled.</p> |
| Block Sleep | <p>Enables to block entering sleep (S3) mode in the operating system.</p> <p>By default, the Block Sleep option is disabled.</p> |
| Deep Sleep Control | <p>Enable or disable the Deep Sleep mode support.</p> <p>By default, the Enabled in S4 and S5 option is enabled.</p> |
| Fan Control Override | <p>Enable or disable the fan control override feature.</p> <p>By default, the option is disabled.</p> |

Table 33. System setup options—Security menu



| Security | |
|---|--|
| TPM 2.0 Security | <p>Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation.</p> <p>By default, the Trusted Platform Module (TPM) option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping Trusted Platform Module (TPM) enabled to allow these security technologies to fully function.</p> |
| TPM 2.0 Security On | <p>Enables you to enable or disable TPM.</p> <p>By default, the TPM 2.0 Security On option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping TPM enabled to allow these security technologies to fully function.</p> |
| Attestation Enable | <p>The Attestation Enable option controls the endorsement hierarchy of TPM. Disabling the Attestation Enable option prevents TPM from being used to digitally-sign certificates.</p> <p>By default, the Attestation Enable option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Attestation Enable option enabled.</p> <p> NOTE: When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p> |
| Key Storage Enable | <p>The Key Storage Enable option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the Key Storage Enable option restricts the ability of TPM to store owner's data.</p> <p>By default, the Key Storage Enable option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Key Storage Enable option enabled.</p> <p> NOTE: When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p> |
| Clear | <p>Clears the TPM owner information and returns the TPM to the default state.</p> <p>By default, this option is disabled.</p> |
| Physical Presence Interface (PPI) Bypass for Clear Commands | <p>By default, the PPI Bypass for Clear Commands option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the PPI Bypass for Clear Commands option disabled.</p> |
| Intel Total Memory Encryption | <p>Enables system memory encryption by the TME block attached to the memory controller.</p> |

Table 33. System setup options—Security menu (continued)





| Security | |
|--|--|
| | By default, the Multi-Key Total Memory Encryption (Up to 16 keys) option is disabled. |
| Chassis intrusion | |
| Chassis Intrusion | <p>Enables you to control the chassis intrusion feature. This feature notifies the user when the base cover has been removed from the computer.</p> <p>When set to Enabled, a notification is displayed on the next boot and the event is logged in the BIOS Events log.</p> <p>When set to On-Silent, the event is logged in the BIOS Events log, but no notification is displayed.</p> <p>When set to Disabled, no notification is displayed and no event is logged in the BIOS Events log.</p> <p>By default, the Chassis Intrusion option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Chassis Intrusion Detection option enabled.</p> |
| Data Wipe on Next Boot | |
| Start Data Wipe | <p> CAUTION: Secure Data Wipe operation deletes information in a way that it cannot be reconstructed.</p> <p>Commands such as delete and format in the operating system may remove files from showing up in the file system, however they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and is not recoverable.</p> <p>When enabled, the BIOS will queue up a data wipe cycle for storage devices that are connected to the motherboard on the next reboot.</p> <p>By default, the Start Data Wipe option is disabled.</p> |
| Absolute | <p>Enables, disables, or permanently disables the BIOS module interface of the optional Absolute Persistence Module service from Absolute software.</p> <p>By default, the Absolute option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Absolute option enabled.</p> <p> WARNING: The 'Permanently Disabled' option can only be selected once. When 'Permanently Disabled' is selected, Absolute Persistence cannot be re-enabled. No further changes to the Enable/Disable states are allowed.</p> <p> NOTE: The Enable/Disable options are unavailable while the computer is in the activated state.</p> <p> NOTE: When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS setup screen.</p> |
| UEFI Boot Path Security | <p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the Always Except Internal HDD option is enabled.</p> |
| Authenticated BIOS Interface | |
| Enable Authenticated BIOS Interface | By default, this option is disabled. |
| Legacy Manageability Interface Access | |
| | Enables the platform administrator to control access via the Legacy Manageability Interface. |

Table 33. System setup options—Security menu (continued)

| Security | |
|---|---|
| Firmware Device Tamper Detection | <p>Enables you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning messages are displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared.</p> <p>For additional security, Dell Technologies recommends keeping the Firmware Device Tamper Detection option enabled.</p> |
| Clear Firmware Device Tamper Detection | <p>Enables booting by clearing the event.</p> <p>By default, the Clear Firmware Device Tamper Detection option is disabled.</p> |

Table 34. System setup options—Passwords menu

| Passwords | |
|------------------------|---|
| Admin Password | <p>The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS setup options can only be modified after providing the correct password.</p> <p>The following rules and dependencies apply to the Administrator Password -</p> <ul style="list-style-type: none"> • The administrator password cannot be set if system and/or internal hard drive passwords are previously set. • The administrator password can be used in place of the system and/or internal hard drive passwords. • When set, the administrator password must be provided during a firmware update. • Clearing the administrator password also clears the system password (if set). <p>Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS setup options.</p> |
| System Password | <p>The System Password prevents the system from booting to an operating system without entering the correct password.</p> <p>The following rules and dependencies apply when the System Password is used -</p> <ul style="list-style-type: none"> • The computer shuts down when idle for approximately 10 minutes at the system password prompt. • The computer shuts down after three incorrect attempts to enter the system password. • The computer shuts down when the Esc key is pressed at the System Password prompt. • The system password is not prompted when the computer resumes from standby mode. <p>Dell Technologies recommends using the system password in situations where it is likely that a system may be lost or stolen.</p> |
| M.2 PCIe SSD-0 | <p>The M.2 PCIe SSD-0 can be set to prevent unauthorized access of the data stored on the solid-state drive. The computer prompts for the solid-state drive password during boot in order to unlock the drive. A password secured solid-state drive stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the drive without authorization.</p> <p>The following rules and dependencies apply when the M.2 PCIe SSD-0 is used -</p> <ul style="list-style-type: none"> • The ssd password option cannot be accessed when ssd is disabled in the BIOS setup. • The computer shuts down when idle for approximately 10 minutes at the ssd password prompt. • The computer shuts down after three incorrect attempts to enter the ssd password and treats the ssd as not available. |

Table 34. System setup options—Passwords menu (continued)


| Passwords | |
|--------------------------------------|--|
| | <ul style="list-style-type: none"> • The ssd does not accept password unlock attempts after five incorrect attempts to enter the ssd password from the BIOS Setup. The ssd password must be reset for the new password unlock attempts. • The computer treats the ssd as not available when the Esc key is pressed at the ssd password prompt. • The ssd password is not prompted when the computer resumes from standby mode. When the ssd is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode. • If the system and ssd passwords are set to the same value, the ssd unlocks after the correct system password is entered. <p>Dell Technologies recommends using a ssd password to protect unauthorized data access.</p> |
| <p>M.2 PCIe SSD-1</p> | <p>The M.2 PCIe SSD-1 can be set to prevent unauthorized access of the data stored on the solid-state drive. The computer prompts for the solid-state drive password during boot in order to unlock the drive. A password secured solid-state drive stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the drive without authorization.</p> <p>The following rules and dependencies apply when the M.2 PCIe SSD-1 is used -</p> <ul style="list-style-type: none"> • The ssd password option cannot be accessed when ssd is disabled in the BIOS setup. • The computer shuts down when idle for approximately 10 minutes at the ssd password prompt. • The computer shuts down after three incorrect attempts to enter the ssd password and treats the ssd as not available. • The ssd does not accept password unlock attempts after five incorrect attempts to enter the ssd password from the BIOS Setup. The ssd password must be reset for the new password unlock attempts. • The computer treats the ssd as not available when the Esc key is pressed at the ssd password prompt. • The ssd password is not prompted when the computer resumes from standby mode. When the ssd is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode. • If the system and ssd passwords are set to the same value, the ssd unlocks after the correct system password is entered. <p>Dell Technologies recommends using a ssd password to protect unauthorized data access.</p> |
| <p>Password Configuration</p> | <p>The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords as well as require passwords to contain certain character classes (upper case, lower case, digit, special character).</p> <p>Dell Technologies recommends setting the minimum password length to at least 8 characters.</p> |
| <p>Password Bypass</p> | <p>The Password Bypass option allows the computer to reboot from the operating system without entering the system or hard drive password. If the computer has already booted to the operating system, it is presumed that the user has already entered the correct system or hard drive password.</p> <p> NOTE: This option does not remove the requirement to enter the password after shutting down.</p> <p>By default, the Password Bypass option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Password Bypass option enabled.</p> |

Table 34. System setup options—Passwords menu (continued)

| Passwords | |
|------------------------------------|---|
| Password Changes | |
| Allow Non-Admin Password Changes | <p>The Allow Non-Admin Password Changes option in BIOS setup allows an end user to set or change the system or hard drive passwords without entering the administrator password. This gives an administrator control over the BIOS settings but enables an end user to provide their own password.</p> <p>By default, the Allow Non-Admin Password Changes option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Allow Non-Admin Password Changes option disabled.</p> |
| Admin Setup Lockout | |
| Enable Admin Setup Lockout | <p>The Enable Admin Setup Lockout option prevents an end user from even viewing the BIOS setup configuration without first entering the administrator password (if set).</p> <p>By default, the Enable Admin Setup Lockout option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Admin Setup Lockout option disabled.</p> |
| Master Password Lockout | |
| Enable Master Password Lockout | <p>The Master Password Lockout setting allows you to disable the Recovery Password feature. If the system, administrator, or hard drive password is forgotten, the system becomes unusable.</p> <p>NOTE: When the owner password is set, the Master Password Lockout option is not available.</p> <p>NOTE: When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed.</p> <p>By default, the Enable Master Password Lockout option is disabled.</p> <p>Dell Technologies does not recommend enabling the Master Password Lockout unless you have implemented your own password recovery system.</p> |
| Allow Non-Admin PSID Revert | |
| Enable Allow Non-Admin PSID Revert | <p>The Allow Non-Admin PSID Revert setting controls access to the Physical Security ID (PSID) revert of NVMe hard drives from the Dell Security Manager Prompt.</p> <p>NOTE: When disabled: If a BIOS Admin password is set, PSID revert is protected by the BIOS Admin password and the user will be prompted to enter the BIOS Admin password before performing the revert.</p> <p>NOTE: When enabled: PSID revert is allowed to proceed without providing the BIOS Admin password.</p> <p>By default, the Enable Allow Non-Admin PSID Revert option is disabled.</p> |

Table 35. System setup options—Update, Recovery menu

| Update, Recovery | |
|--------------------------------------|---|
| BIOS Recovery from Hard Drive | <p>Enables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.</p> <p>By default, the option is enabled.</p> |
| BIOS Downgrade | |
| Allow BIOS Downgrade | <p>Enable or disable the flashing of the computer firmware to previous revision is blocked.</p> <p>By default, the option is enabled.</p> |

Table 35. System setup options—Update, Recovery menu (continued)

| Update, Recovery | |
|--|--|
| SupportAssist OS Recovery | <p>Enable or disable the boot flow for SupportAssist OS Recovery tool in the event of certain computer errors.</p> <p>By default, the option is enabled.</p> |
| BIOSConnect | <p>Enables cloud Service OS recovery if the main operating system fails to boot with the number of failures equal to or greater than the value specified by the Auto OS Recovery Threshold setup option.</p> <p>By default, the option is enabled.</p> |
| Dell Auto OS Recovery Threshold | <p>Controls the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool.</p> <p>By default, the threshold value is set to 2.</p> |

Table 36. System setup options—System Management menu

| System Management | |
|--|---|
| Service Tag | Display the Service Tag of the computer. |
| Asset Tag | Create a computer Asset Tag. |
| Wake on LAN/WLAN | <p>Enable or disable the computer to power on by special LAN signals when it receives a wakeup signal from the WLAN.</p> <p>By default, the Disabled option is selected.</p> |
| Auto on Time | <p>Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days.</p> <p>By default, the option is disabled.</p> |
| Intel AMT Capability | Enable or disable the Intel AMT capability. |
| Enable Intel AMT Capability | By default, the Restrict MEBx Access option is enabled. |
| SERR Messages | <p>Enable or disable SERR messages.</p> <p>By default, the option is enabled.</p> |
| First Power On Date | Enables to set the ownership date. |
| Set Ownership date | By default, the option is disabled. |
| Diagnostics | Enable or disable scheduling of onboard diagnostics on a subsequent. |
| OS Agent Requests | By default, the option is enabled. |
| Power-on-Self-Test Automatic Recovery | <p>Enables or disables BIOS automatic recovery of the computer if the computer becomes unresponsive before completing the BIOS Power-On-Self-Test.</p> <p>By default, the option is enabled.</p> |

Table 37. System setup options—Keyboard menu

| Keyboard | |
|--------------------|------------------------------------|
| Numlock LED | Enable or disable Numlock LED. |
| Enable Numlock LED | By default, the option is enabled. |

Table 37. System setup options—Keyboard menu (continued)

| Keyboard | |
|---|---|
| Device Configuration Hotkey Access | <p>Enables users to access device configuration screens using hotkeys during system start up.</p> <p>By default, the option is enabled.</p> |

Table 38. System setup options—Pre-boot Behavior menu

| Pre-boot Behavior | |
|------------------------------|---|
| Warning and Errors | <p>Enable or disable the action to be done when a warning or error is encountered.</p> <p>By default, the Prompt on Warnings and Errors option is enabled.</p> |
| Extend BIOS POST Time | <p>Set the BIOS POST time.</p> <p>By default, the 0 seconds option is enabled.</p> |

Table 39. System setup options—Virtualization menu

| Virtualization | |
|---|---|
| Intel Trusted Execution Technology (TXT) | |
| Enable Intel Trusted Execution Technology (TXT) | <p>Specify whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology.</p> <p>By default, the option is enabled.</p> |
| DMA Protection | |
| Enable Pre-Boot DMA Support | <p>Controls the Pre-boot DMA protection for both internal and external ports.</p> <p>By default, the option is enabled.</p> |
| Enable OS Kernal DMA Support | <p>Controls the Kernal DMA protection for both internal and external ports. This setting doesnot directly enable DMA protection. The OS that supports DMA protection, the setting will indicate that the BIOS supports the feature.</p> <p>By default, the option is enabled.</p> |
| Internal Port DMA Compatibility Mode | <p>Enables BIOS to notify the OS that the internal ports are not DMA capable. This setting does not affect external port DMA or Pre-boot DMA support.</p> <p>By default, the option is disabled.</p> |

Table 40. System setup options—Performance menu

| Performance | |
|---|---|
| Intel SpeedStep | |
| Enable Intel SpeedStep Technology | <p>Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>By default, the option is enabled.</p> |
| PCIe Resizable Base Address Register (BAR) | |
| Enable PCIe Resizable BAR support | <p>Enable or disable PCIe Resizable Base Address Register (BAR) support.</p> <p>By default, the option is disabled.</p> |

Table 41. System setup options—System Logs menu

| System Logs | |
|-----------------------|--|
| BIOS Event Log | |


Table 41. System setup options—System Logs menu (continued)

| System Logs | |
|------------------------|---|
| Clear BIOS Event Log | Display BIOS events. By default, the Keep Log option is enabled. |
| Power Event Log | |
| Clear Power Event Log | Display Power events. By default, the Keep Log option is enabled. |


Updating the BIOS

Updating the BIOS in Windows

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, see the Knowledge Base Resource [updating the BIOS on Dell systems with BitLocker enabled](#).

Steps


1. Go to [Dell Support Site](#).
2. Go to **Identify your product or search support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.
For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

Updating the BIOS in Linux and Ubuntu


To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](#) at [Dell Support Site](#).

Updating the BIOS using the USB drive in Windows

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, see the Knowledge Base Resource [updating the BIOS on Dell systems with BitLocker enabled](#).


Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or search support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
13. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the One-Time boot menu

You can run the BIOS flash update file from Windows using a bootable USB drive or you can also update the BIOS from the One-Time boot menu on the computer. To update your computers BIOS, copy the BIOS XXXX.exe file onto a USB drive formatted with the FAT32 file system. Then, restart your computer and boot from the USB drive using the One-Time Boot Menu.

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [Dell Support Site](#).

BIOS Update

To confirm if the BIOS Flash Update is listed as a boot option, you can boot your computer to the **One Time Boot** Menu. If the option is listed, then the BIOS can be updated using this method.

To update your BIOS from the One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (the drive does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter must be connected to the computer
- A functional computer battery to flash the BIOS

Perform the following steps to update the BIOS from the One-Time boot menu:

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

Steps

1. Turn off the computer, insert the USB drive that contains the BIOS flash update file.
2. Turn on the computer and press **F12** to access the **One Time Boot** Menu. Select **BIOS Update** using the mouse or arrow keys then press **Enter**.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select the external USB device.

5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS flash update is completed.

System and setup password


 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

Table 42. System and setup password

| Password type | Description |
|-----------------|---|
| System password | Password that you must enter to boot to your operating system. |
| Setup password | Password that you must enter to access and change the BIOS settings of your computer. |

You can create a system password and a setup password to secure your computer.

 **NOTE:** The System and setup password feature is disabled by default.

Assigning a System Setup password

Prerequisites

You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to create the system password:
 - Password can be up to 32 characters.
 - Password must contain at least one special character: "(! " # \$ % & ' * + , - . / : ; < = > ? @ [\] ^ _ ` { | })"
 - The password can contain numbers from 0 to 9.
 - The password can contain alphabets A to Z and a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system password or setup password

Prerequisites


Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.

The **System Security** screen is displayed.

2. In the **System Security** screen, verify that the **Password Status** is Unlocked.
3. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.

 **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.

5. Press Esc. A message prompts you to save the changes.
6. Press Y to save the changes and exit from **System Setup**.
The computer restarts.

Clearing CMOS settings

About this task

 **CAUTION:** Clearing CMOS settings will reset the BIOS settings on your computer.


Steps

1. Follow the pre-requisites and procedures in [Removing the coin-cell battery](#).
2. Wait for one minute.
3. Follow the procedures and post-requisites in [Installing the coin-cell battery](#).

Clearing system and setup passwords

About this task

To clear the system or setup passwords, contact Dell technical support as described at [Contact Support](#).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.


Troubleshooting

Dell SupportAssist Pre-boot System Performance Check diagnostics

About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded within the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to add more options and obtain details about any failed devices.
- View status messages that inform you when the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.


 **NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see the knowledge base article [000181163](#).

Running the SupportAssist Pre-Boot System Performance Check

Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key.
3. On the boot menu screen, select **Diagnostics**.
The diagnostic quick test begins.

 **NOTE:** For more information about running the SupportAssist Pre-Boot System Performance Check on a specific device, see [Dell Support Site](#).

4. If there are any issues, error codes are displayed.
Note the error code and validation number and contact Dell.

Power-Supply Unit Built-in Self-Test

Built-in Self-Test (BIST) helps determine if the power-supply unit is working. To run self-test diagnostics on the power-supply unit of a desktop or all-in-one computer, search in the Knowledge Base Resource at [Dell Support Site](#).

System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro 24 All-in-One Plus QB24250.

Table 43. System-diagnostic lights

| Blinking pattern | | Problem description |
|------------------|-------|-----------------------|
| Amber | White | |
| 1 | 1 | TPM detection failure |

Table 43. System-diagnostic lights (continued)

| Blinking pattern | | Problem description |
|------------------|-------|--|
| Amber | White | |
| 1 | 2 | Unrecoverable SPI Flash Failure |
| 1 | 5 | EC unable to program i-Fuse |
| 1 | 6 | Generic catch-all for ungraceful EC code flow errors |
| 2 | 1 | CPU failure |
| 2 | 2 | System board failure (included BIOS corruption or ROM error) |
| 2 | 3 | No memory/RAM detected |
| 2 | 4 | Memory/RAM failure |
| 2 | 5 | Invalid memory installed |
| 2 | 6 | System board/Chipset Error |
| 2 | 7 | LCD failure (SBIOS message) |
| 2 | 8 | LCD failure (EC detection of power rail failure) |
| 3 | 1 | CMOS battery failure |
| 3 | 2 | PCI or Video card/chip failure |
| 3 | 3 | BIOS Recovery image not found |
| 3 | 4 | BIOS Recovery image found but invalid |
| 3 | 5 | Power rail failure |
| 3 | 6 | Flash corruption detected by SBIOS. |
| 3 | 7 | Timeout waiting on ME to reply to HECI message. |


Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled in Dell computers running the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, and restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.


For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [Serviceability Tools at the Dell Support Site](#). Click **SupportAssist** and then click **SupportAssist OS Recovery**.

 **NOTE:** Windows 11 IoT Enterprise LTSC 2024 and Dell ThinOS 10 do not support Dell SupportAssist. For more information about recovering ThinOS 10, see [Recovery mode using R-Key](#).

Real-Time Clock—RTC reset


The Real-Time Clock (RTC) reset function allows you or the service technician to recover the recently launched model Dell Pro and Pro Max computers from **No POST/No Boot/No Power** situations. You can initiate the RTC reset on the computer from

a power-off state only if it is connected to AC power. Press and hold the power button for 25 seconds. The system RTC reset occurs after you release the power button.

 **NOTE:** If AC power is disconnected from the computer during the process or the power button is held longer than 40 seconds, the RTC reset process gets aborted.

The RTC reset will reset the BIOS to its default settings, disable Intel vPro, and reset the computer date and time. The following items are not affected by the RTC reset:

- Service Tag
- Asset Tag
- Ownership Tag
- Admin Password
- System Password
- Storage Password
- Key Databases
- System Logs

 **NOTE:** The IT administrator's vPro account and password on the computer will be unprovisioned. The computer must go through the setup and configuration process again to reconnect it to the vPro server.

The below items may or may not be reset based on your custom BIOS setting selections:

- Boot List
- Enable Legacy Option ROMs
- Secure Boot Enable
- Allow BIOS Downgrade

Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

Network power cycle

About this task

If your computer is unable to access the Internet due to network connectivity issues, reset your network devices by performing the following steps:

Steps

1. Turn off the computer.
2. Turn off the modem.

 **NOTE:** Some Internet service providers (ISPs) provide a modem and router combo device.


3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 44. Self-help resources

| Self-help resources | Resource location |
|--|---|
| Information about Dell products and services | Dell Site |
| Tips |  |
| Contact Support | In Windows search, type <code>Contact Support</code> , and press Enter. |
| Online help for operating system | Windows Support Site Linux Support Site |
| Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents. | Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at Dell Support Site . For more information about how to find the Service Tag for your computer, see Locate the Service Tag on your computer . |
| Dell knowledge base articles | <ol style="list-style-type: none"> 1. Go to Dell Support Site. 2. On the menu bar at the top of the Support page, select Support > Support Library. 3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles. |

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.