

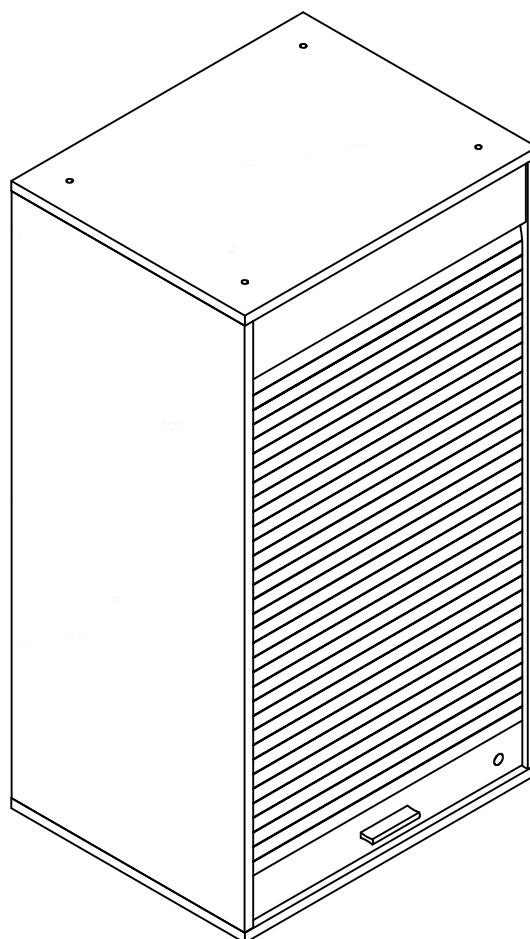


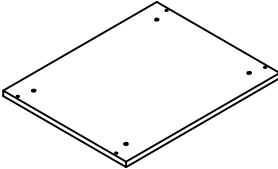
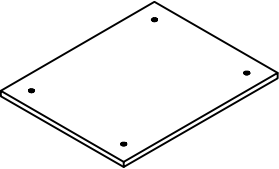
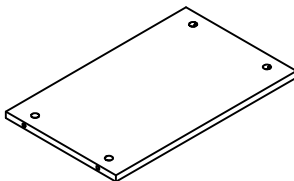
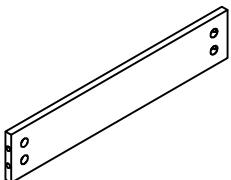
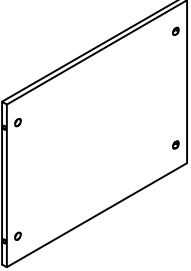
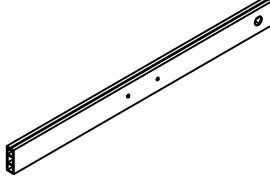





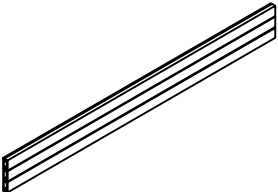


Büroschrank Aktos Montageanleitung Instruction manual

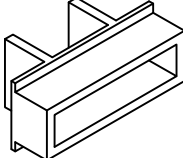


VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl
service@vcm-gruppe.de
www.vcm-gruppe.de

A		B		C	
	x1		x1		x1
D		E		F	
	x1		x1		x1
G		H		I	
	x2		x1		x21
J					
	x2				


a	x24	b	x24	c	x4	d	x1
				 M3.5x16			
e	x2	f	x1	g	x4	h	x1
 M4x18							
				i	x4	j	x1
				 M6x25			

01

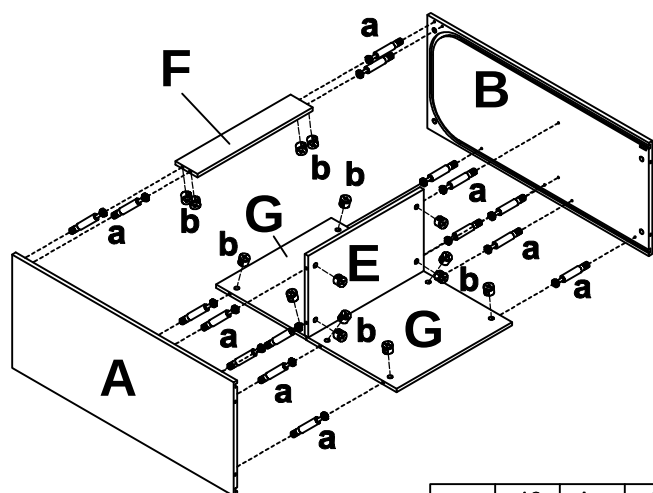


a	x16	b	x16

02

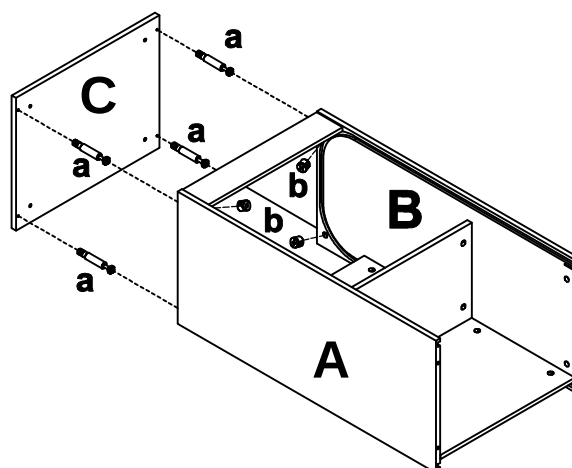


a	x4	b	x4

03

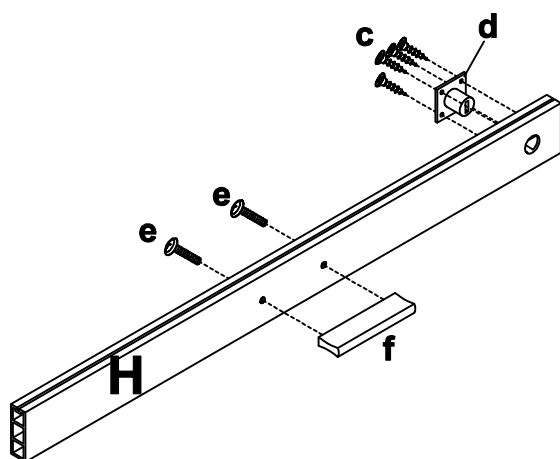


c	x4	d	x1	e	x2	f	x1
M3.5x16				M4x18			


04

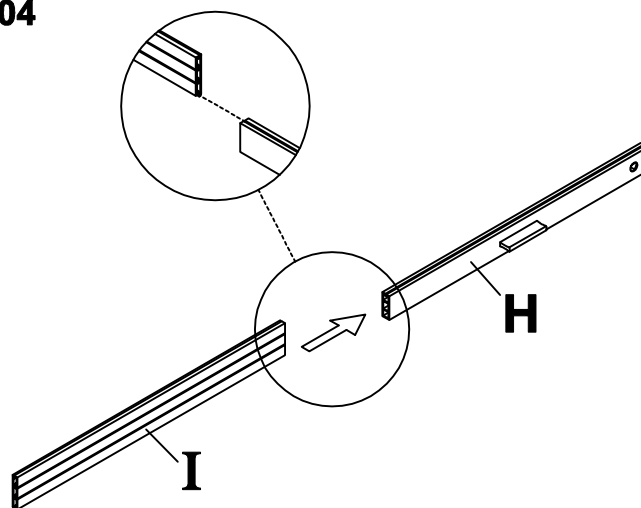


05

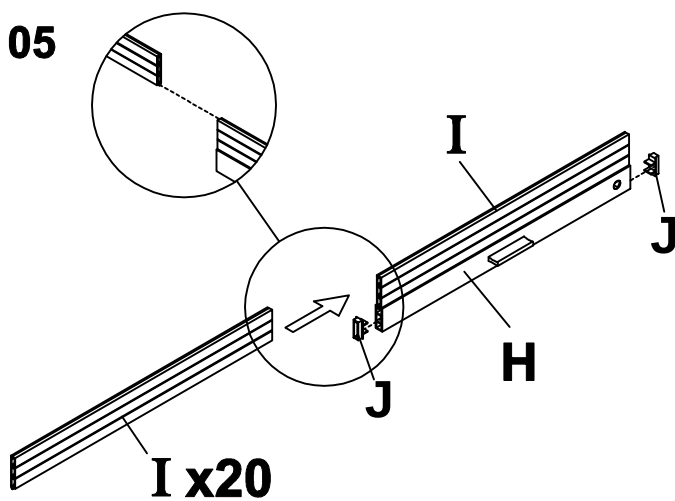

06

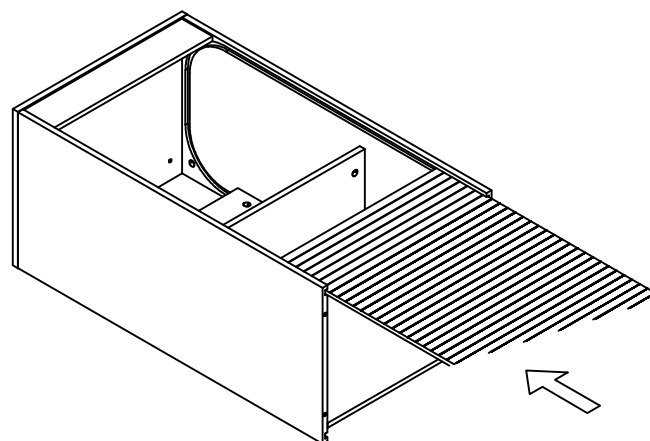


07

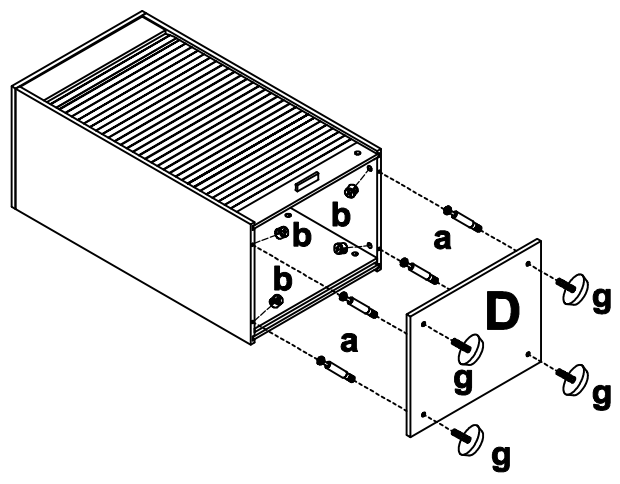


a	x4	b	x4	g	x4
					




08

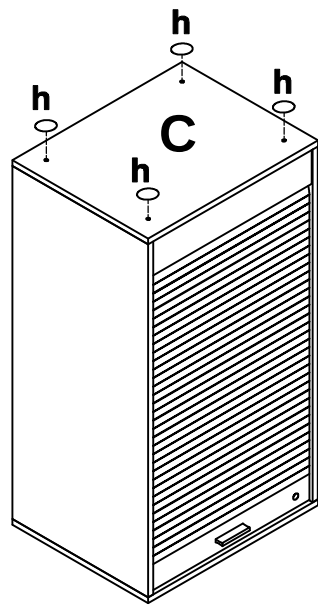


h	x1
	

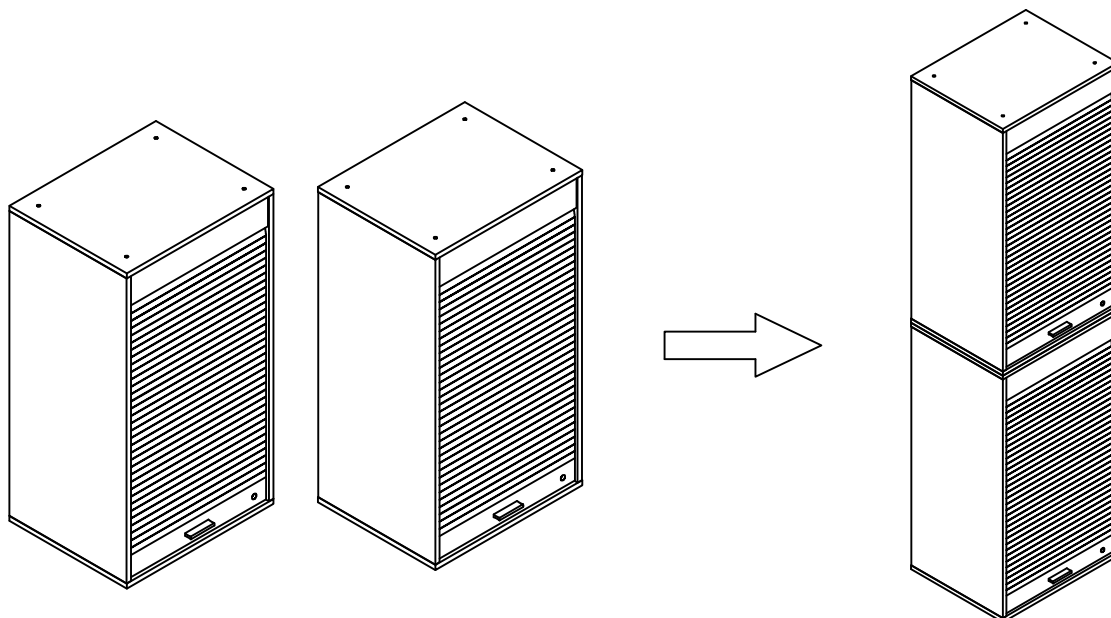


01

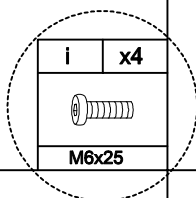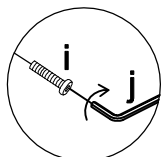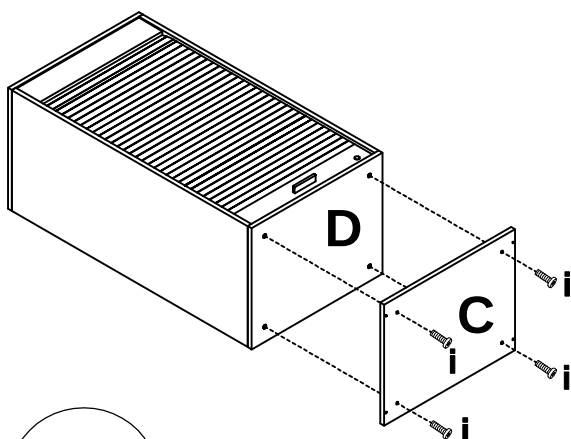

02

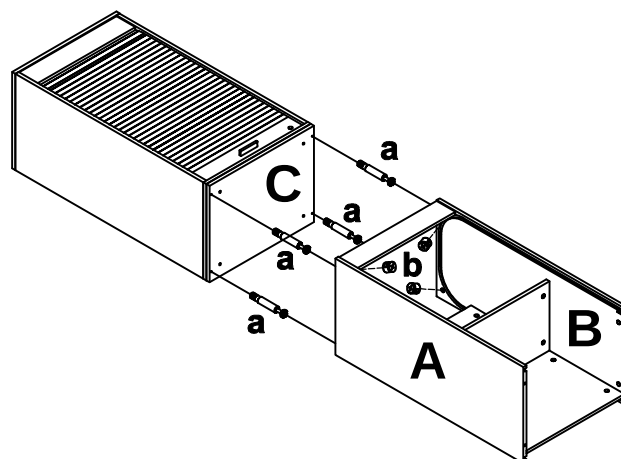

03

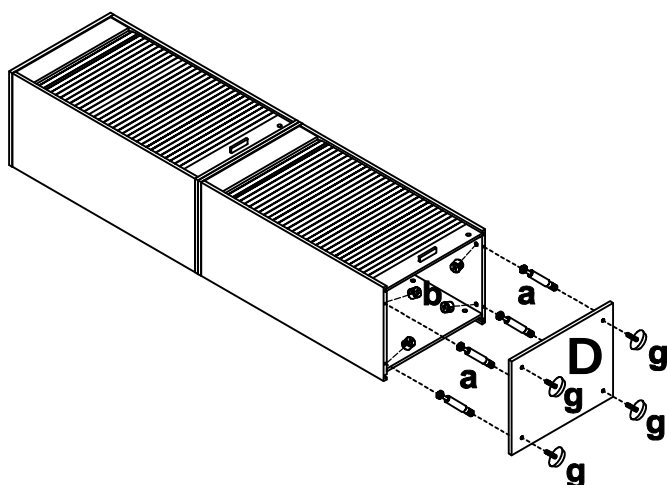

04

